


Assembly Instructions

REV-A 21/4/10

Step 1.

Lay the roller on an even surface. Slot each handle into the metal bearing that is in each end of the roller

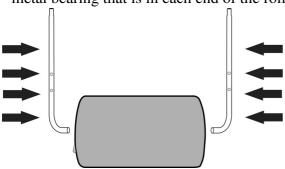

Step 2.

Attach the Scraper bar to each handle with the supplied bolts, nuts, washer and spring washers. **Note:** For ease of handling, fit both bolts too the scraper bar on side 'A' then fit both bolts to side 'B'. you may have pull or lean on the handle




Slot the final part of the handle over the smaller handle parts as shown in diagram on the right. Then fit the supplied bolts, nuts, washer and spring washers to complete the build.


You may have pull or lean on the handles to align the third piece as you slot the handle together. This is so in order to give the handle a firm grip of the roller.


Step 4.


Ensure all nuts and bolts are tightly fitted and you are ready to roll.

60L Water Roller (RP5)

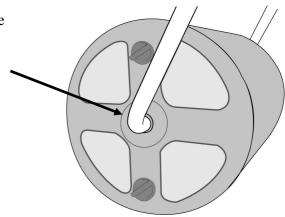

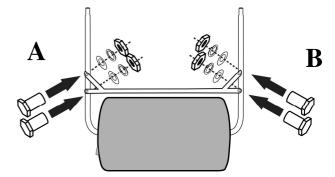

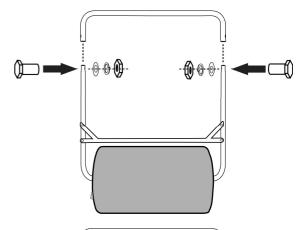

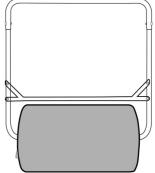




Basics of operation

The Roller drum features two small bungs. When filling or emptying, the second bung can be opened to allow air in and out of the drum.

The Bung seals the roller by pressing an o-ring against the wall of the drum. (Do not remove o-ring from bung)

Do not cross thread bung when fitting to tank, Do not over tighten.

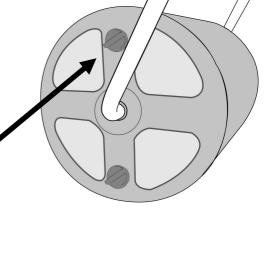

Sealing surface on drum

SILVAN AUSTRALIA PTY. LTD.

ABN 48 099 851 144

VICTORIA (HEAD OFFICE)

244- 264 Greens Rd, Dandenong South, 3175 Australia Telephone: 1300 SILVAN (1300 745 826) Facsimile: 1800 SILVAN www.silvan.com.au

NEW ZEALAND

O-ring

Bung

22 Sunshine Avenue

Te Rapa, Hamilton, 2001 New Zealand

Telephone: +64 (07) 8496033 Fax: +64 (07) 8496070 www.silvannz.co.nz