

# jumbuck®

MONTH  
**12**  
WARRANTY

## Soho Large Spit Roaster with Rotisserie

- High temperature powder coated steel body
- Adjustable height rotisserie
- 240V Rotisserie Motor: Turns up to 60Kg
- Lockable castor wheels
- Chrome cooking grill
- Cooking area: 116L x 50W cm
- Cooking grill height: 60 cm
- Dimensions: 149L x 59W x 106H cm



Solid Fuel



Cooking  
Surface



Grill



# Jumbuck Soho Large Spit Roaster

## GEN-FP002L (0094872)

### SAFETY INSTRUCTIONS



- For outdoor use only.
- Improper installation, adjustment, alteration, service or maintenance can cause property damage, injury or death.
- Read the installation instructions thoroughly before installing this equipment.
- Warning: accessible parts may be very hot. Keep young children away.
- Do not move the appliance during use.
- Any modification of the appliance may be dangerous and will void the warranty.
- Installer to leave instructions with the consumer and consumer to retain them for future reference.
- Please ensure all packaging and transit protection materials are removed prior to using the spit roaster.

#### IMPORTANT:

**PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE USE  
READ THE ASSEMBLY INSTRUCTIONS IN THIS BOOKLET BEFORE REMOVING THE CONTENTS OF THIS CARTON**

#### IMPORTANT SAFETY INSTRUCTIONS

This appliance must only be used in an above ground open-air situation with natural ventilation, without stagnant areas, where products of combustion are rapidly dispersed by wind and natural convection

- This SPIT ROASTER is an **outdoor appliance only**. Under no circumstances should it be use indoors.
- Do not store chemicals or flammable materials near this appliance.
- Unsupervised children should not be near the SPIT ROASTER while cooking or during warm up or cool down.
- People with flammable clothing such as nylon etc. should keep well away from the SPIT ROASTER when it is operating.
- Do not leave food unattended on the SPIT ROASTER.
- Particular care must be taken when removing the ash OR used fuel. Hot ash can cause serious injury.



- |        |  |
|--------|--|
| DO NOT | OPERATE THIS APPLIANCE BEFORE READING THE INSTRUCTION BOOKLET                |
| DO NOT | PLACE ARTICLES ON OR AGAINST THIS APPLIANCE                                  |
| DO NOT | STORE CHEMICALS OR FLAMMABLE MATERIALS OR SPRAY AEROSOLS NEAR THIS APPLIANCE |
| DO NOT | OPERATE THIS APPLIANCE INDOORS   |
| DO NOT | ENCLOSE THIS APPLIANCE   |
| DO NOT | LIGHT OR OPERATE WITH THE COVER ON(COVER NOT INCLUDED)                       |

# SPIT ROASTER OPERATING GUIDELINES

## Lighting the spit roaster

- solid fuel is to be used for this product (fire wood, charcoal etc.)
- place solid fuel into the spit roaster and light using fire starters
- let the solid fuel light (check occasional to ensure fire is lit)

## Cooking

- ensure solid fuel is lit and that there is sufficient heat for cooking
- secure the food on the skewer, position skewer at desired height and switch on the motor
- the cooking grid can also be used to cook
- regularly monitor temperature to ensure food is not under or over cooked


## Cleaning

- once finish cooking, remove left over solid fuel from the spit roaster
- always ensure spit roaster is clean and free from oil or grease (internally and externally) to ensure longevity of the spit roaster
- always keep spit roaster dry and under cover to protect from weather and moisture

## Pre-caution







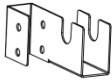

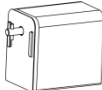



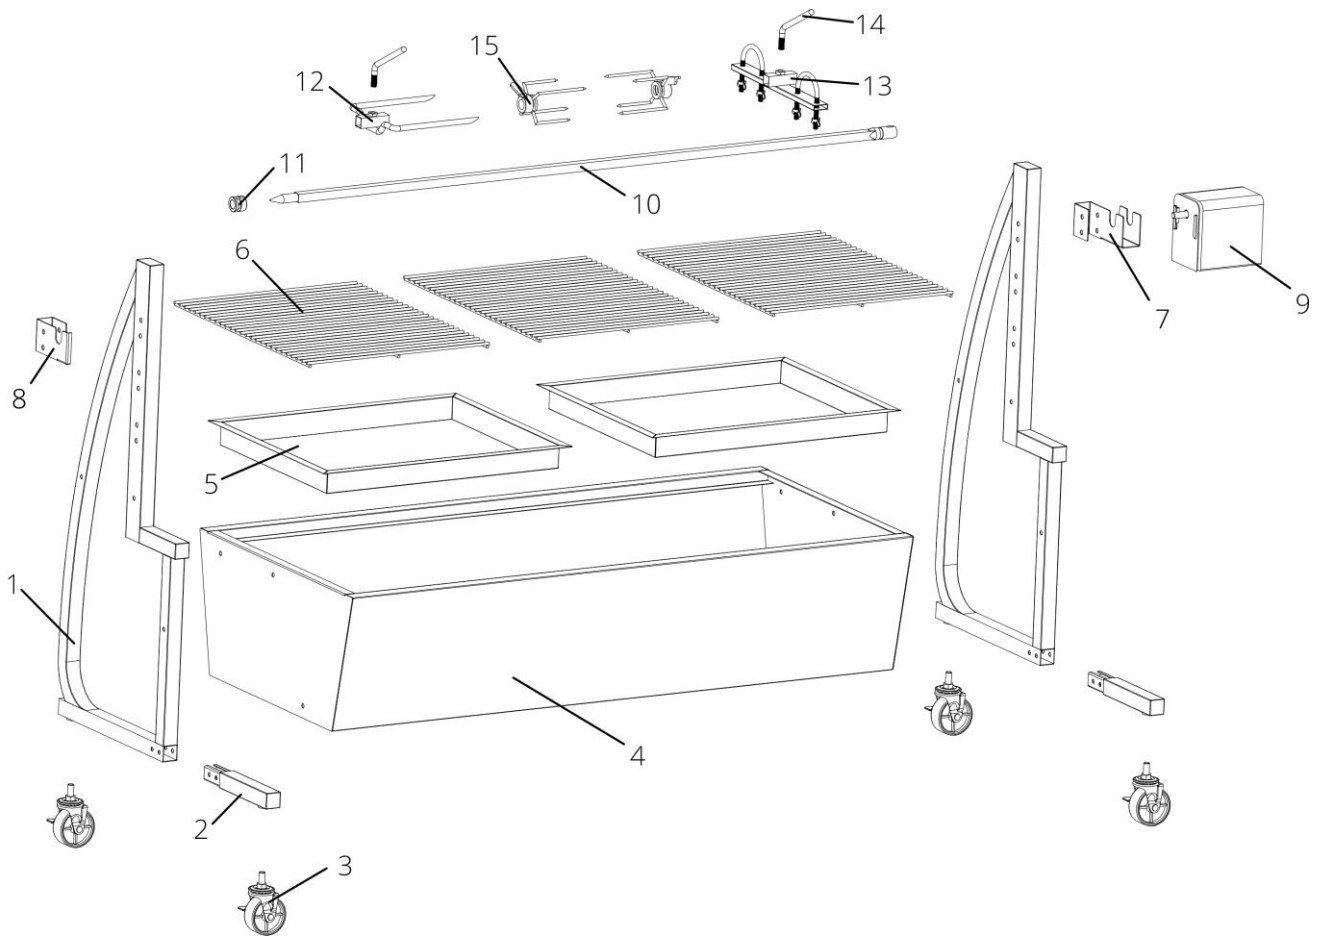

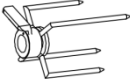
- always ensure hands are protected when putting or removing food from the spit roaster
- always ensure spit roaster is cool before touching or cleaning the internal areas
- always ensure hands are protected when making adjustments to the air vent
- do not use flammable liquids for igniting and re-igniting
- open flames and burning embers must never be left unattended
- after use, make sure the unit is allowed to cool before moving

# EXPLODED VIEW

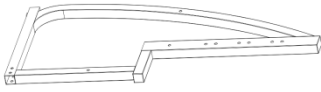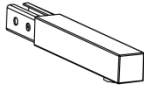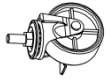



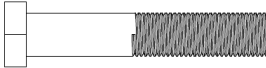
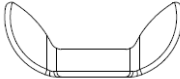
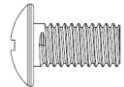



Parts Number	Parts Name	Parts Code
1	Leg	GEN-FP002L-01
2	Leg support	GEN-FP002L-02
3	Castor wheel	GEN-FP002L-03
4	Fire box	GEN-FP002L-04
5	Charcoal tray	GEN-FP002L-05
6	Cooking grid	GEN-FP002L-06
7	Right motor support	GEN-FP002L-07
8	Left motor support	GEN-FP002L-08
9	Motor	GEN-FP002L-09
10	Rotisserie rod	GEN-FP002L-10
11	Rotisserie brace	GEN-FP002L-11
12	Large prong	GEN-FP002L-12
13	Rotisserie support	GEN-FP002L-13
14	Rotisserie handle	GEN-FP002L-14
15	Small prong	GEN-FP002L-15
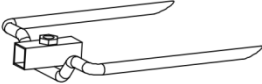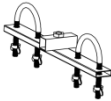
# CARTON CONTENTS

Reference#	Description	Part#	Illustration	Quantity
1	Leg	GEN-FP002L-01		2
2	Leg support	GEN-FP002L-02		2
3	Castor wheel	GEN-FP002L-03		4
4	Fire box	GEN-FP002L-04		1
5	Charcoal tray	GEN-FP002L-05		2
6	Cooking grid	GEN-FP002L-06		3
7	Right motor support	GEN-FP002L-07		1
8	Left motor support	GEN-FP002L-08		1
9	Motor	GEN-FP002L-09		1
10	Rotisserie rod	GEN-FP002L-10		1
11	Rotisserie brace	GEN-FP002L-11		1
12	Large prong	GEN-FP002L-12		1
13	Rotisserie support	GEN-FP002L-13		1
14	Rotisserie handle	GEN-FP002L-14		2
15	Small prong	GEN-FP002L-15		2
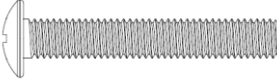
# HARDWARE PACK CONTENTS

Reference#	Description	Illustration	Quantity
A	Bolt M6x 40mm		10
B	Shrapnel M6		10
C	Washer M6		10
D	Nut M6		10
E	Bolt M8x 45mm		4
F	Wing nut M8		4
G	Bolt M5x 10mm		1
H	Spanner		1

# ASSEMBLY INSTRUCTIONS

## ASSEMBLY TIPS


- Remove all contents from packaging, and make sure all the parts are present before attempting to assemble!
- Tighten all bolt connections by hand first.
- When the BBQ is fully assembled, retighten the screws, nuts and bolts by using a wrench and screw driver.

## TOOLS REQUIRED

- Philips screwdriver
- Pliers or adjustable spanner


### Step 1

Assemble leg support (part 2) onto the leg (part 1). Use bolt A, shrapnel B, washer C, nut D and tighten as shown.

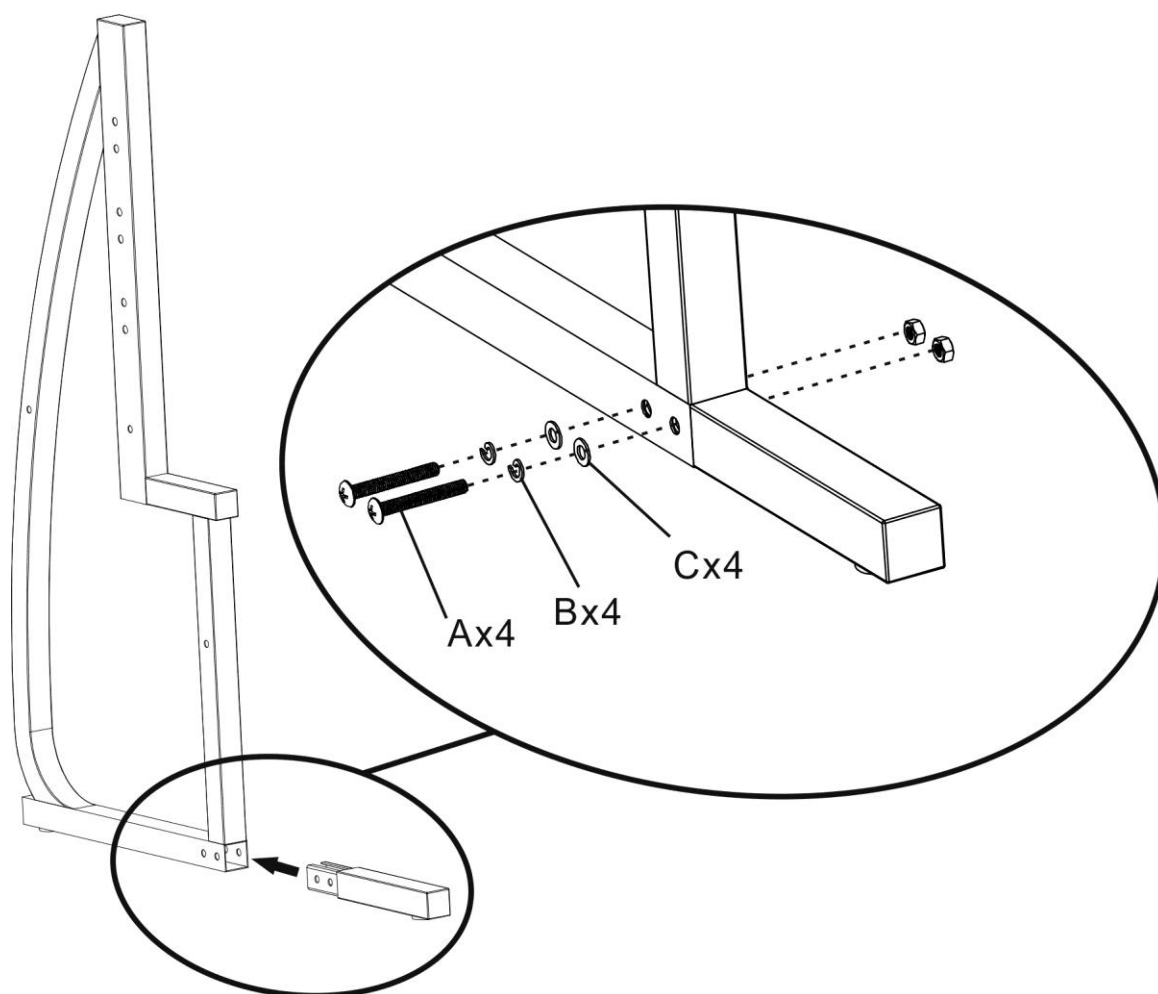


## Step 2

Assemble castor wheels (part 3) onto the legs and leg supports as per illustration below.

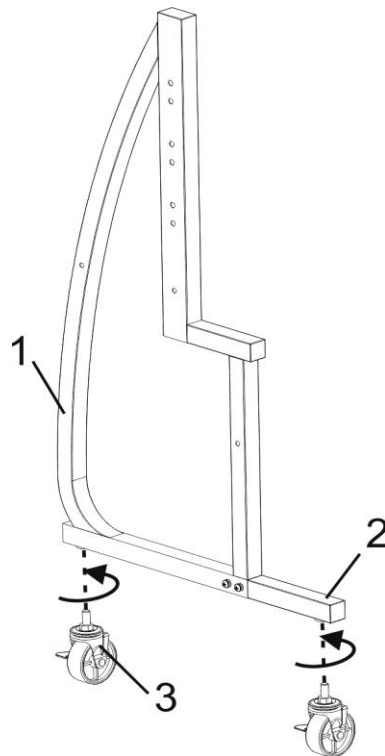

## Step 3


Assemble the two legs (part 1) on to the fire box (part 4) by using bolt A, shrapnel B, washer C, nut D and tighten as shown.

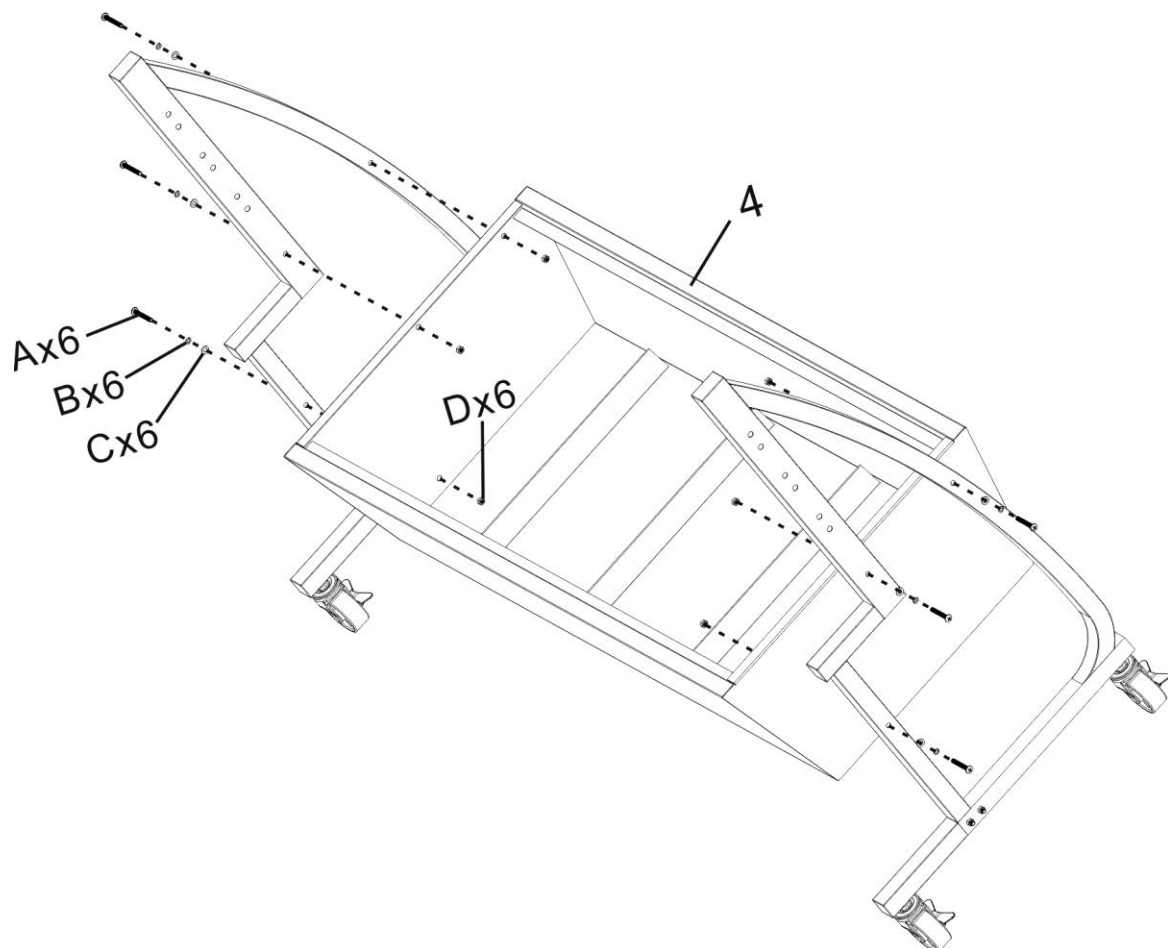




#### Step 4

Place the charcoal tray (part 5) and cooking grid (part 6) into the assembled fire box (part 4) as illustration below.

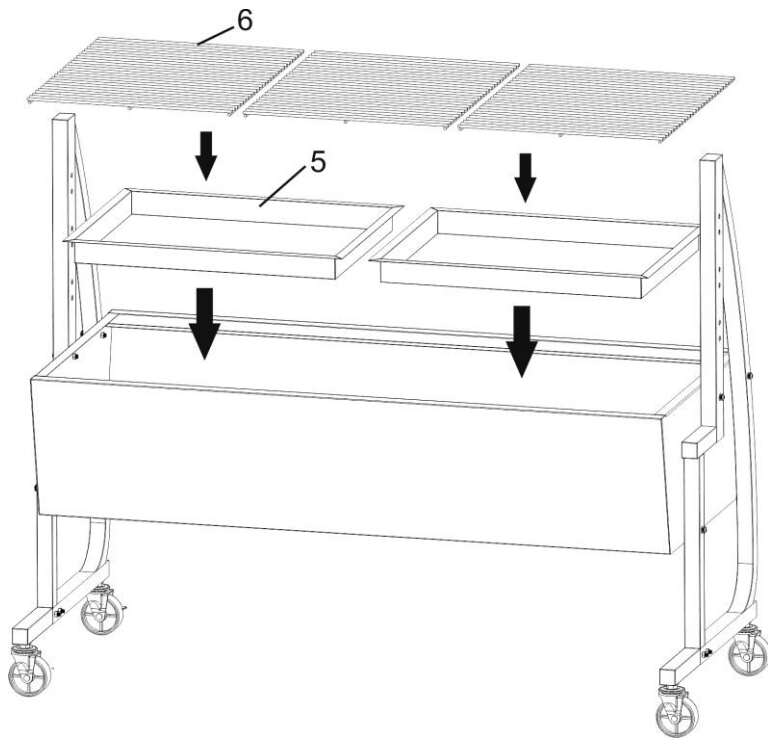


#### Step 5

Assemble the right motor support (part 7) and left motor support (part 8) on to the legs (part 1). Use bolt E, nut F and tighten as shown.

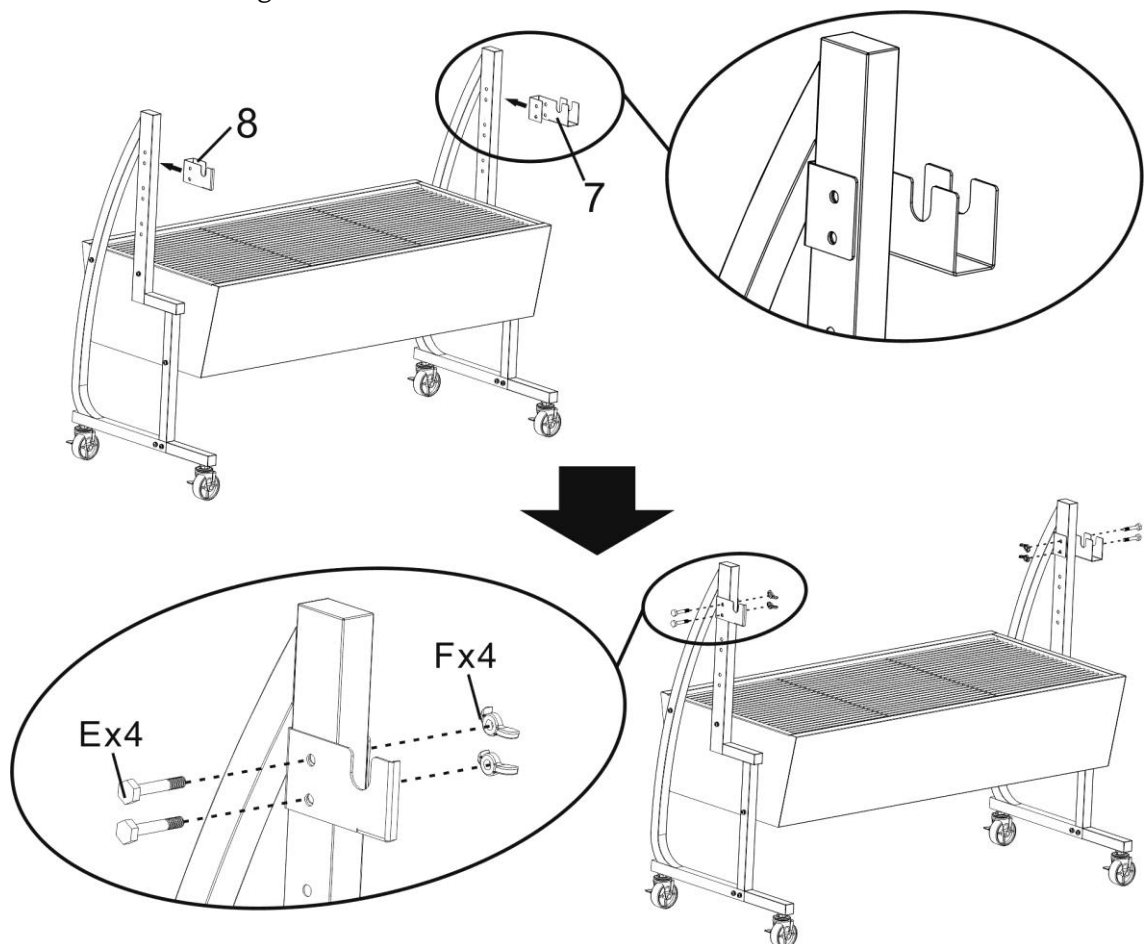


### Step 6

Insert the rotisserie support (part 13), large prong (part 12), rotisserie brace (part 11), small prongs (part 15) onto the rotisserie rod (part 10) as shown below. Assemble rotisserie handles (part 14) onto the rotisserie support (part 13) and large prong (part 12), as shown below.

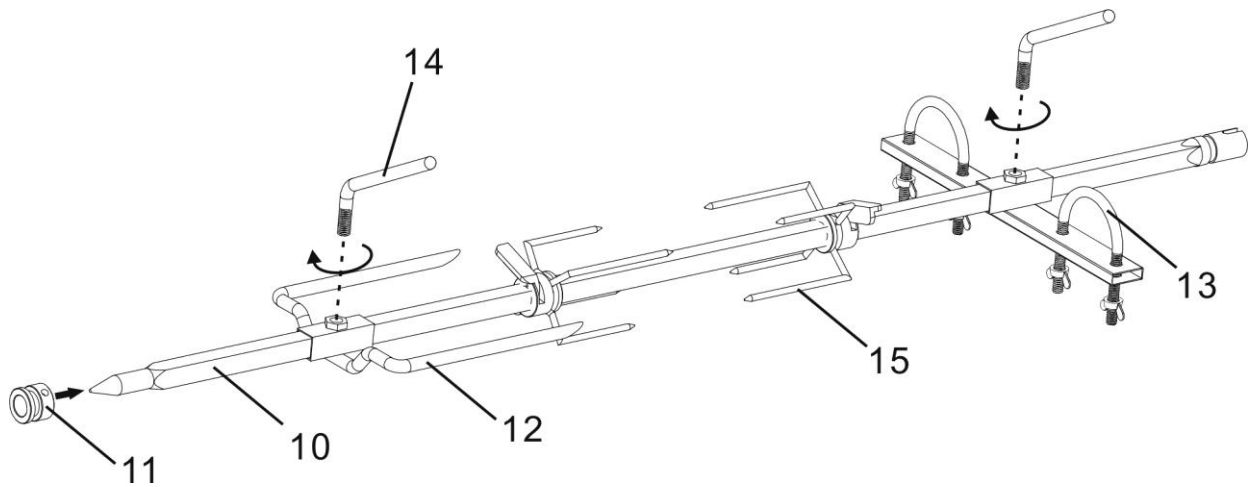


### Step 7

Connect the assembled rotisserie rod onto the motor (part 9) and secure the rotisserie brace (part 11) with bolt G as per illustration below. Place the assembled rotisserie rod onto the motor supports as per illustration below. (rotisserie motor end resides on the right motor support)

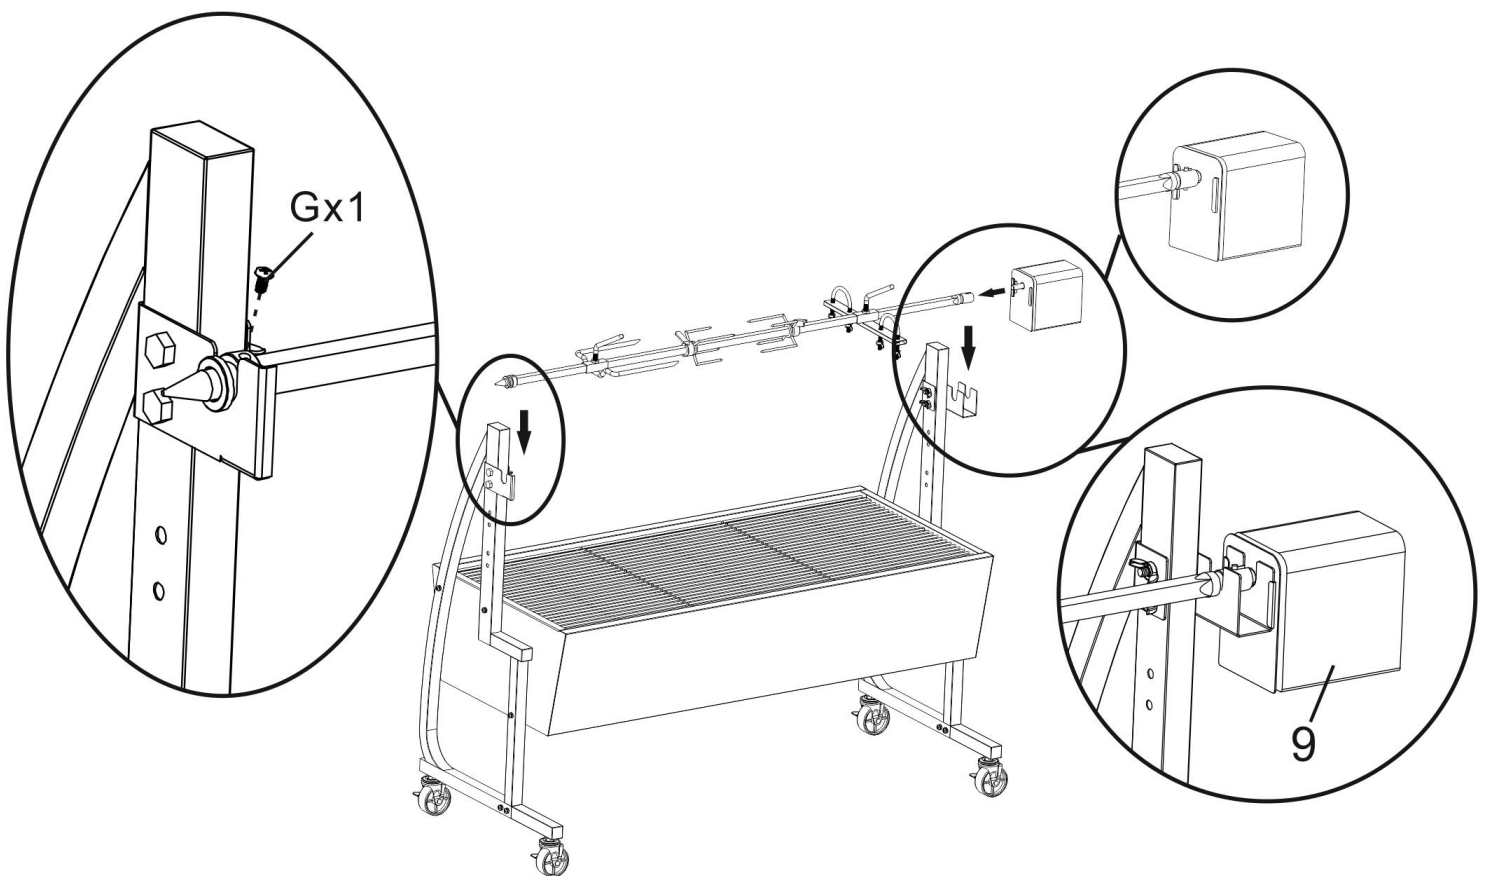

# Fully Assembled

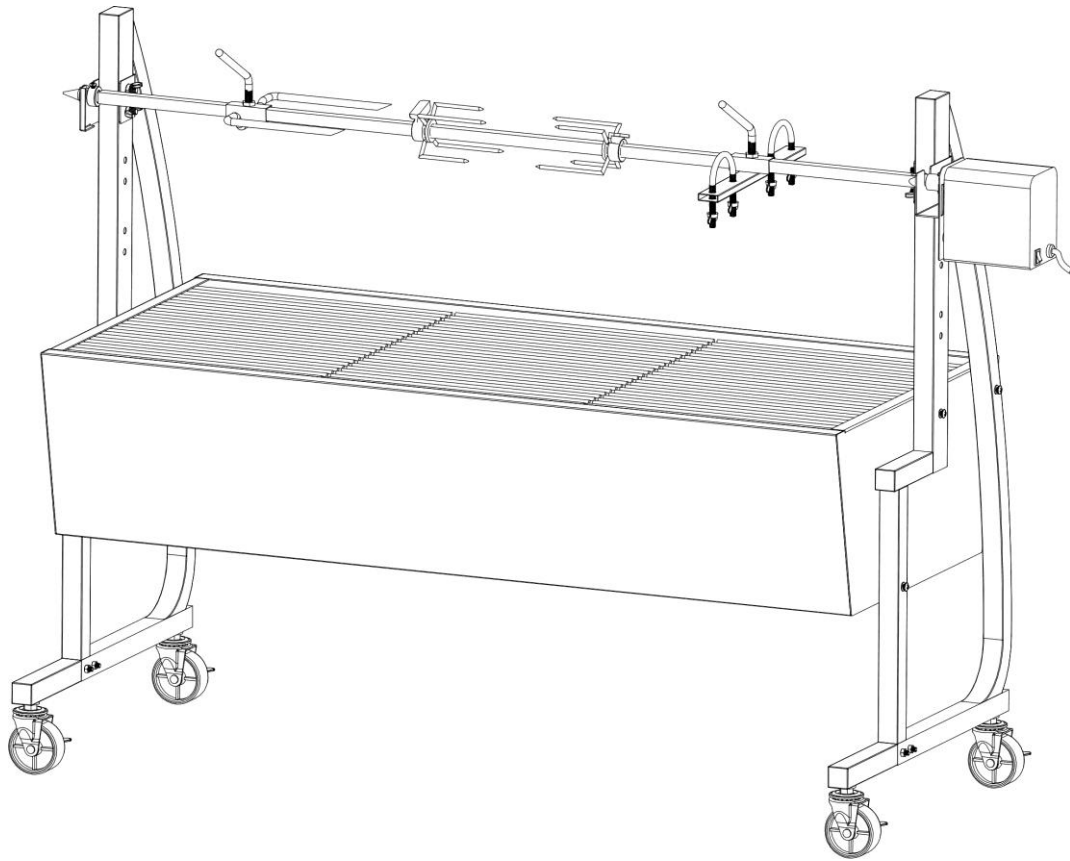

Your spit roaster is now ready for use.  
Please take care when lighting your spit roaster.  
Always keep children away from this spit roaster at all times.



## WARRANTY

Thank you for purchasing one of our quality

Jumbuck Spit Roaster.

**YOUR JUMBUCK SPIT ROASTER IS COVERED  
AGAINST DEFECTS FOR A PERIOD OF 12 MONTHS  
FOR PARTS AND LABOUR, REPAIR OR  
REPLACEMENT**

**THIS WARRANTY EXCLUDES SURFACE RUST AND  
DAMAGE CAUSE BY ABUSE OR NEGLECT**

### CONDITIONS OF THE WARRANTY

- The appliance must be operated and maintained in accordance with the instructions supplied in the operating manual.
- Any repair does not extend the warranty period.
- Any parts other than original Jumbuck parts will void this warranty.

### FOR WARRANTY CLAIMS

**The warranty for Australia is given by :**

Genesis International Corporation Pty Ltd

1/71 Truganina Road,

Malaga

Western Australia 6090

AUSTRALIA

(08) 9248 9822

[service@genesiscorp.com.au](mailto:service@genesiscorp.com.au)

Proof of purchase must be presented.

**The warranty for New Zealand is given by :**

Bunnings NZ Limited

PO Box 14436,

Panmure, Auckland, 1471

NEW ZEALAND

(09) 978 2200

[marketing@bunnings.co.nz](mailto:marketing@bunnings.co.nz)

Proof of purchase must be presented.

Any claims under this warranty must be made within 12 months of the date of purchase of the product.



## WARRANTY

### For Australian Customers

Any claim under this warranty must be made within 12 months of the date of purchase of the product. To make a claim under the warranty, please contact Genesis International at [service@genesiscorp.com.au](mailto:service@genesiscorp.com.au) or return the product (with proof of purchase) to any Bunning store. Visit [www.bunnings.com.au](http://www.bunnings.com.au) for store locations.

Genesis International bears reasonable, direct expenses of claiming under the warranty. You may submit details and proof to us for consideration.

The warranty covers manufacturer defects in materials, workmanship and finish under normal use.

This warranty is provided in addition to other rights and remedies you may have under law: our goods come with guarantees which cannot be excluded under the Australian Consumer Law. You are entitled to replacement or refund for a major failure and to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The warranty excludes damage resulting from product misuse or product neglect. The warranty covers domestic use only and does not apply to commercial applications.

### For New Zealand Customer

Any claim under this warranty must be made within 12 months of the date of purchase of the product. To make a claim under the warranty, take the product (with proof of purchase) to any Bunnings store. Visit [www.bunnings.co.nz](http://www.bunnings.co.nz) for store locations.

Bunnings NZ Ltd bears reasonable, direct, expenses of claiming under the warranty. You may submit details and proof to our store for consideration.

The warranty covers manufacturer defects in materials, workmanship and finish under normal use.

This warranty is provided in addition to other rights and remedies you may have under law: our goods come with guarantees which cannot be excluded under the Consumer Guarantees Act 1993 (NZ). You are entitled to replacement or refund for a major failure and to compensation for other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Goods presented for repair may be replaced by refurbished goods of the same type rather than being repaired. Refurbished parts may be used to repair the goods.

The warranty excludes damage resulting from product misuse or product neglect. The warranty covers domestic use only and does not apply to commercial applications.



# WARRANTY

## WHAT IS NOT COVERED IN THE WARRANTY

- Removal or re-installation costs. This warranty does not cover costs for transit, nor in home service
- Liability will only be accepted for loss or damage during transit if at the time the product was being transported by Bunnings or a Bunnings approved contractor
- Lack of maintenance, abuse, neglect, misuse, accidental or improper installation of this appliances
- Scratches, dents, corrosion or discoloration caused by heat, abrasive chemicals cleaners
- Corrosions or damage caused by exposure to elements such as insects, weather, hail or grease and fat fires
- Rusting of the grill
- Cleaning and wear and tear, service calls of this nature are chargeable
- Commercial use of this product
- Unauthorized repairs or modification during warranty period

## RECORD THE FOLLOWING INFORMATION

Attached the copy of the purchase receipt here

Date of Purchase.....

Purchased From.....

Location.....

Model Name and Number.....

Serial Number.....

Receipt Number.....

Note: The serial number is located either on the outside of the packing carton or inside on the appliance

## FOR TECHNICAL ASSISTANCE

**For Australia customers** if you experience any technical issues with your JUMBUCK SPIT ROASTER, in the first instance review the instructions manual or contact the warranty service agent

**For New Zealand customers** if you experience any technical issues with your JUMBUCK SPIT ROASTER, in the first instance review the instructions manual or contact your local Bunnings warehouse

## FOR SPARE PARTS

Call your local Bunnings warehouse and ask them to order a part for you. You should provide the following information:

Model of SPIT ROASTER  
.....

Year of Purchase  
.....

Name of warranty service company  
.....

Part that requires replacement (refer to the parts list in the instructions manual)  
.....

