


## SILVERLEAVES 3-SEATER RESIN WICKER SWING ASSEMBLY INSTRUCTION Item No. 3191962

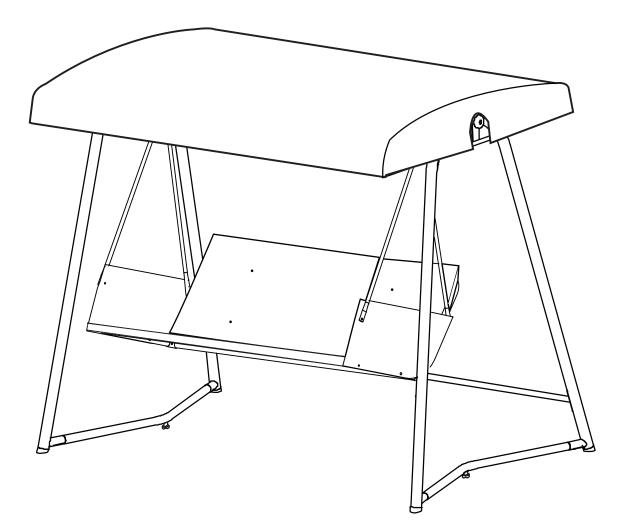

READ & SAVE BELOW INSTRUCTIONS BEFORE ASSEMBLY

1. PLEASE SEPARATE AND IDENTIFY ALL PARTS, MAKING SURE THAT YOU HAVE ALL OF THE PARTS LISTED.

- 2. TO AVOID ANY SCRATCHES DURING ASSEMBLY, ASSEMBLE ON A SOFT MAT OR SIMILAR.
- 3. ASSEMBLE STEP BY STEP FOLLOWING THE INSTRUCTIONS.

4. WASHERS MUST BE USED.

5. DURING ASSEMBLY DO NOT OVER FASTEN SCREWS & NUTS.

6. DO NOT COMPLETELY TIGHTEN EACH SCREW AND NUT UNTIL THEY ARE ALL FIXED IN PLACE.


IMOSA										
IGNATURE COLLEC	TON PARTS LIST				PARTS LIST					
CODE	PARTS	QTY.	COL	DE	PARTS	QTY.				
#1	Foot tube	2PCS	#1	1	Short pole	2PCS				
#2	Left front tube	1PC	#1	2	Long pole	2PCS				
#3	Right back tube	1PC	#1	3	Spring hanger	2PCS				
#4	Left back tube	1PC	#14		1PC					
#5	Right front tube	1PC		Seat cushion						
#6	Back tube	1PC	#15	Canopy frame	2PCS					
#7	Beam	1PC			21 00					
#8	Seat frame	1PC	#1	6		1PC				
#9	Right armrest	1PC			Canopy					
#10	Left armrest	1PC	#1	#17	Rotary knob	2PCS				

M


HARDWARE LIST									
CODE	PA	PARTS							
A		M6x70mm	Bolt&washer∩	2PCS					
В		M6x67mm	Bolt&washer∩	4PCS					
С	····· ()··· ()(((((((((((((((((((((((((	M6x20mm	Bolt&washer∩	2PCS					
D		M8x47mm	Bolt&washer∩	4PCS					
E	····· ()··· ()()··· ()()	M8x20mm	Bolt&washer∩	4PCS					
F		Allen key	1PC						
G		Allen key	1PC						
н	0	Spanner	1PC						

8-2



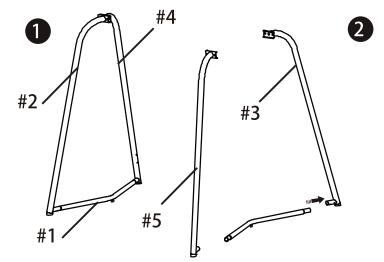



Attach two left tubes(#2&4) to the left foot tube, same steps with the right side.

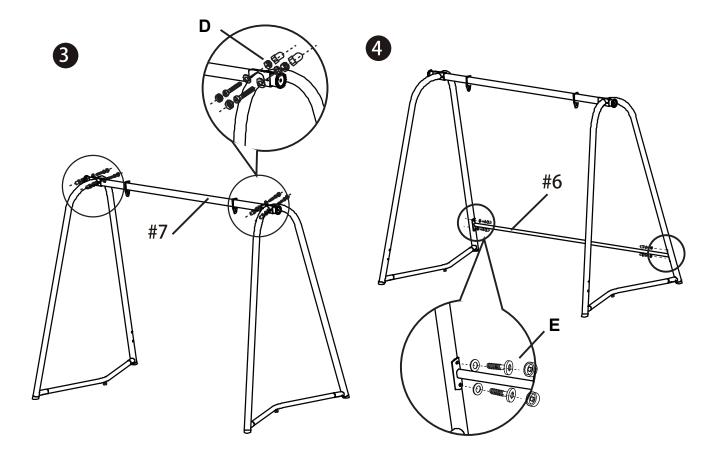


Using bolt(D) to attach the top beam(#7) to the frame.

Attach the back tube(#6) to the frame, using bolt(E).

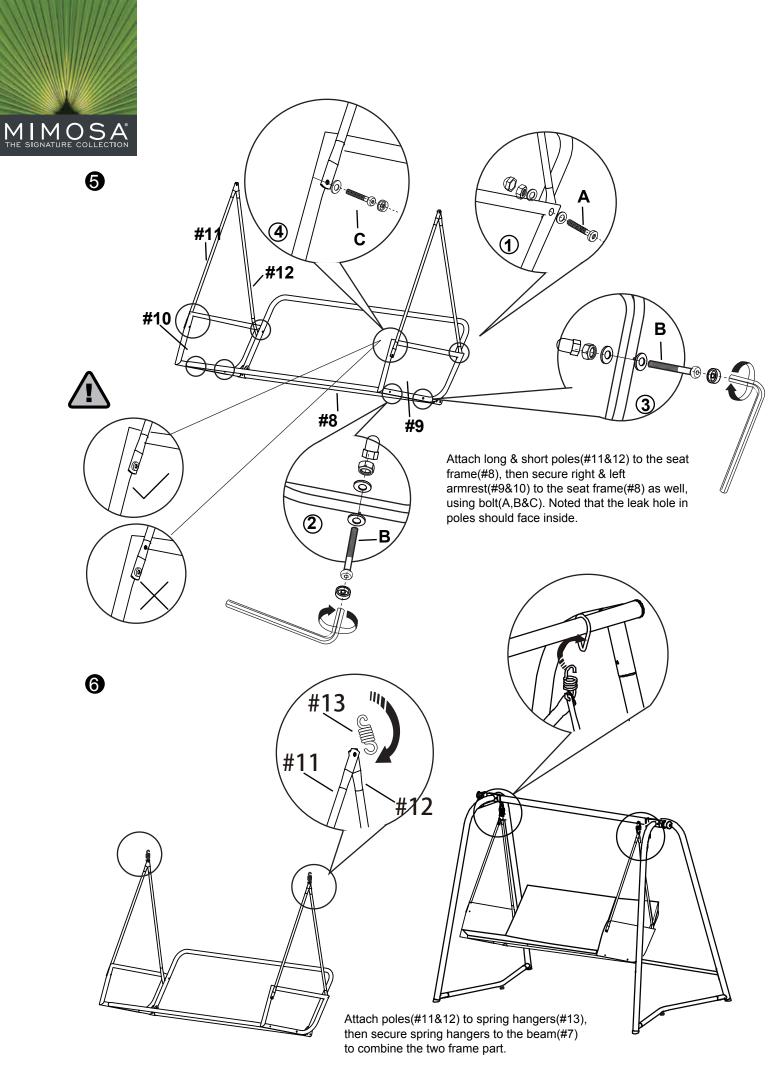


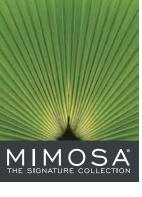


7

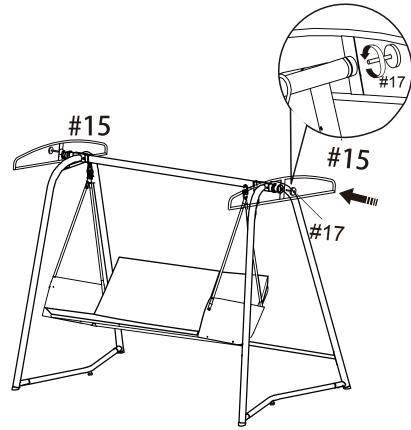

Attach canopy frame(#15) to the whole bracket, using bolt(#17).

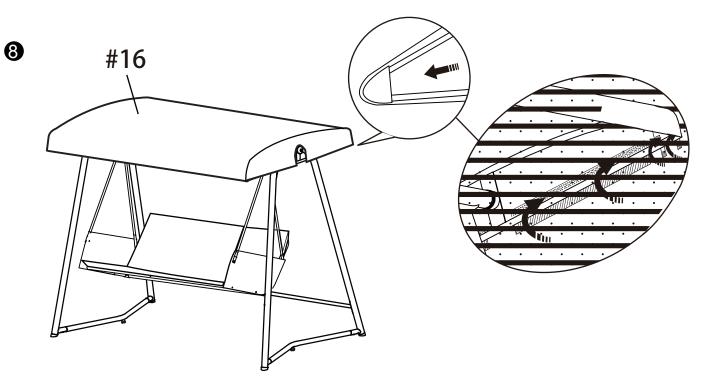


Attach the canopy(#16) to the canopy frame,edges should be curled in to fix the canopy.

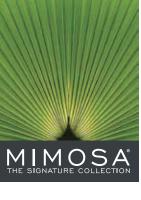


9


10

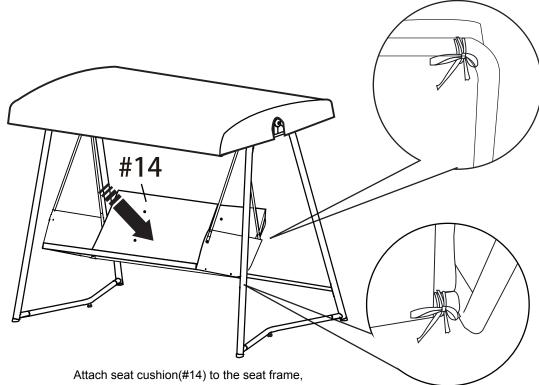



Attach seat cushion(#14) to the seat frame, using ties with it to secure.

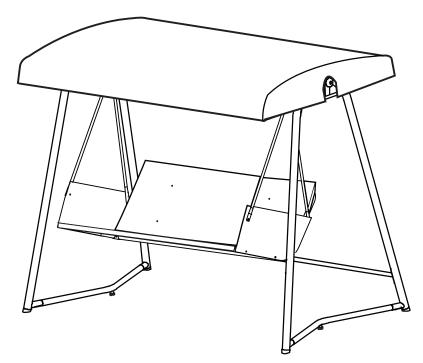


The main frame is now assembled at this stage. To improve the assembly of the canopy follow remaining steps below.

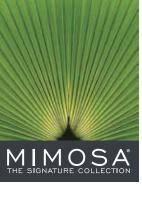


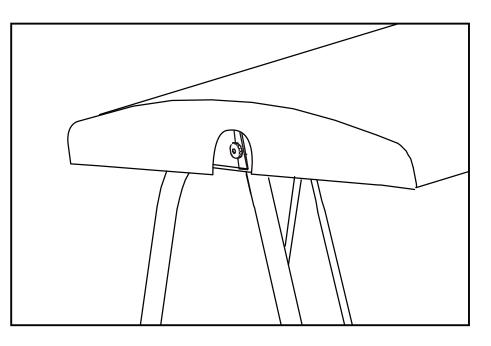

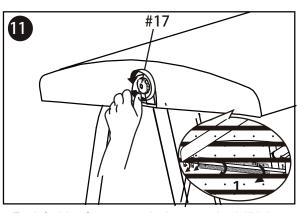


For left side of canopy: spin the rotary knob(#17) to loose canopy.

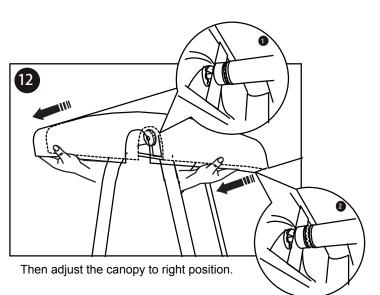


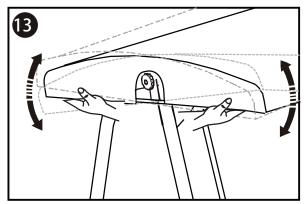


Pull canopy to the right angle as needed.

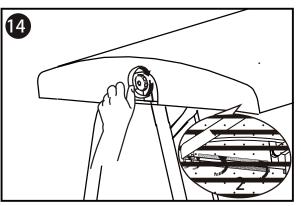

Secure the rotary knob to fix the canopy.

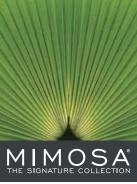

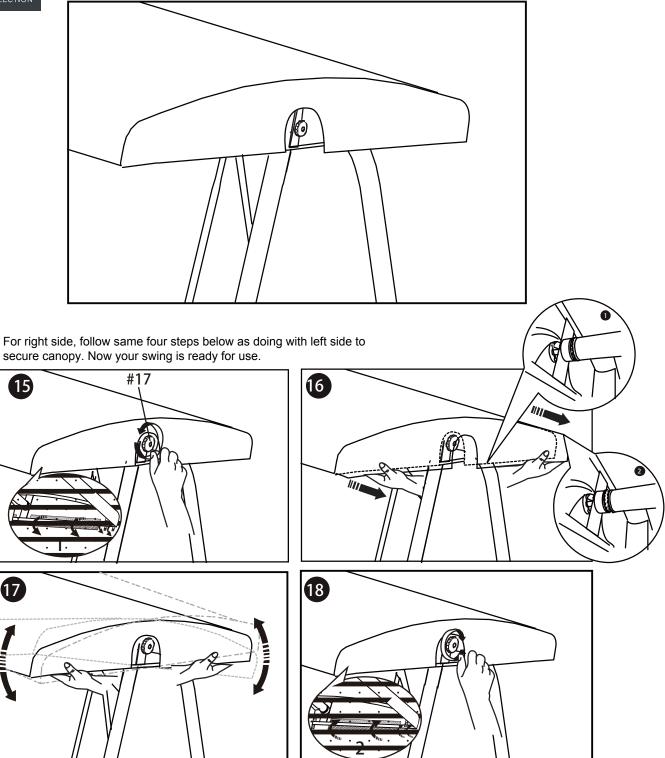

## CARE AND CLEANING:

Not For Commercial Use

1. TO CLEAN, WIPE WITH DAMP CLOTH. DO NOT USE BLEACH, ACID SOLVENTS OR ABRASIVE CLEANERS ON RESIN WICKER OR FRAME PARTS. 2. DURING VARYING WEATHER CONDITIONS AND WINTER PERIOD, WE STRONGLY RECOMMEND THAT THE SWING BE STORED IN A DRY AREA WITH A SUITABLE COVER. BEFORE STORAGE, PLEASE INSURE THE SWING IS CLEAN AND DRY.

3. IN THE EVENT OF BARE METAL SHOWING DUE TO SCRATCHES, IT IS RECOMMENDED TO TREAT WITH A RUST REPELLING PAINT OR SIMILAR. 4. PERIODICALLY CHECK AND ENSURE THAT ALL THE SCREWS ARE COMPLETELY TIGHTENED.

5. A FURNITURE COVER IS STRONGLY RECOMMENDED TO EXTEND THE USAGE LIFE-SPAN.