


TOPDRY Rotary 8, 7 and 6

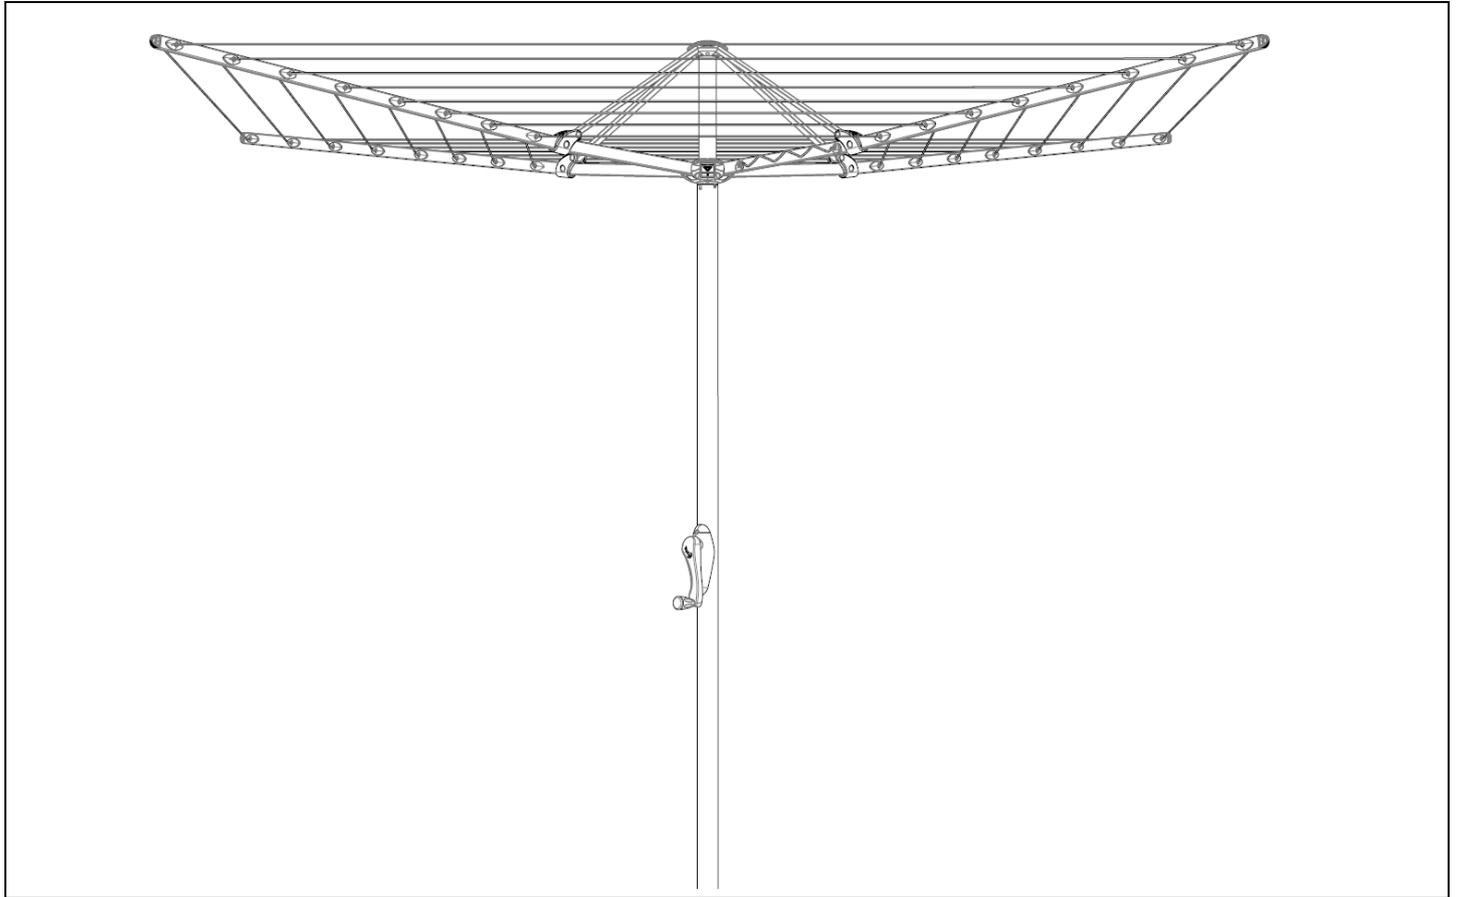

Safety Tips

Only use your clothesline to hang and dry washing.


Remember the clothesline is not a children's toy

Don't use your clothesline if it is damaged

Note the following for future reference

Product Name	
Date of purchase:	
Place of purchase:	



Package Contents

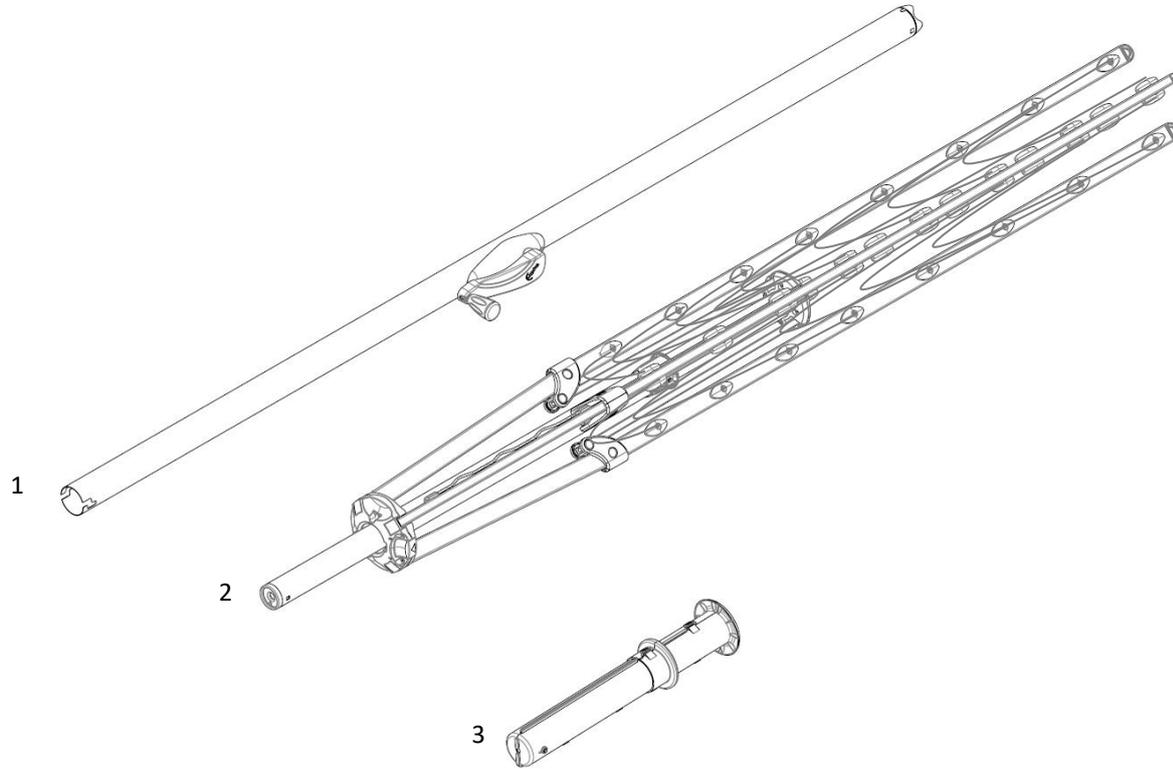

Item	Description	Quantity
1	Main Post Assembly	1
2	Arm Assembly (Rotary 8 shown)	1

Item	Description	Quantity
3	Ground Socket	1


1. Choose a location and Install the Ground Socket

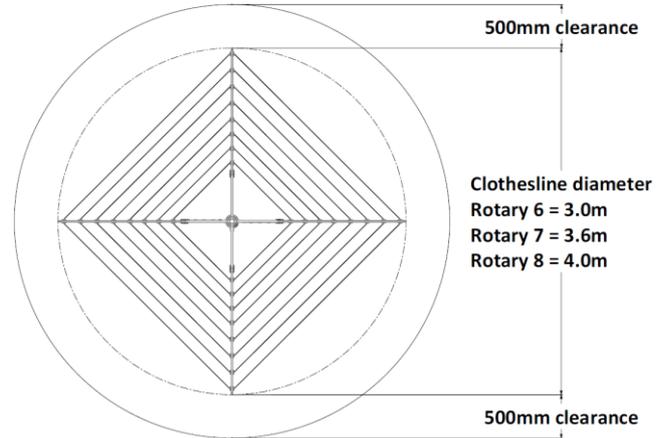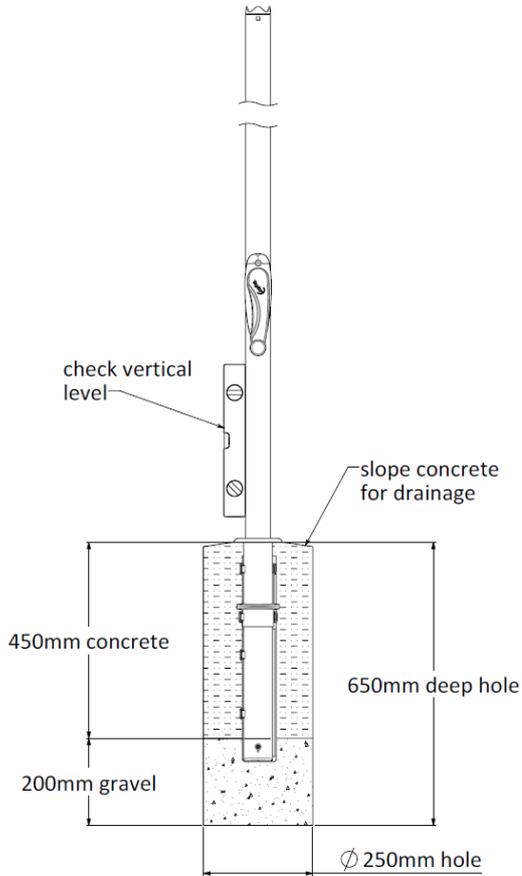

- Choose a suitable location.
- Dig a hole in the centre of the space 600mm deep and 250mm in diameter.
- Fill the bottom of the hole with 200mm of dry gravel.
- Fit the ground socket to the end of the main post. Rotate the post in the ground socket until it locks.
- Position the Ground Socket and Main Post in the centre of the hole.
- Support the Main Post and fill the hole with concrete. Use a spirit level to make sure the Main Post is vertical.
- Leave the Main Post in the Ground Socket while the concrete sets.

DO NOT USE OR MOVE THE CLOTHESLINE UNTIL THE CONCRETE HAS SET – ALLOW AT LEAST 24 HOURS






2. Install the Arm Assembly

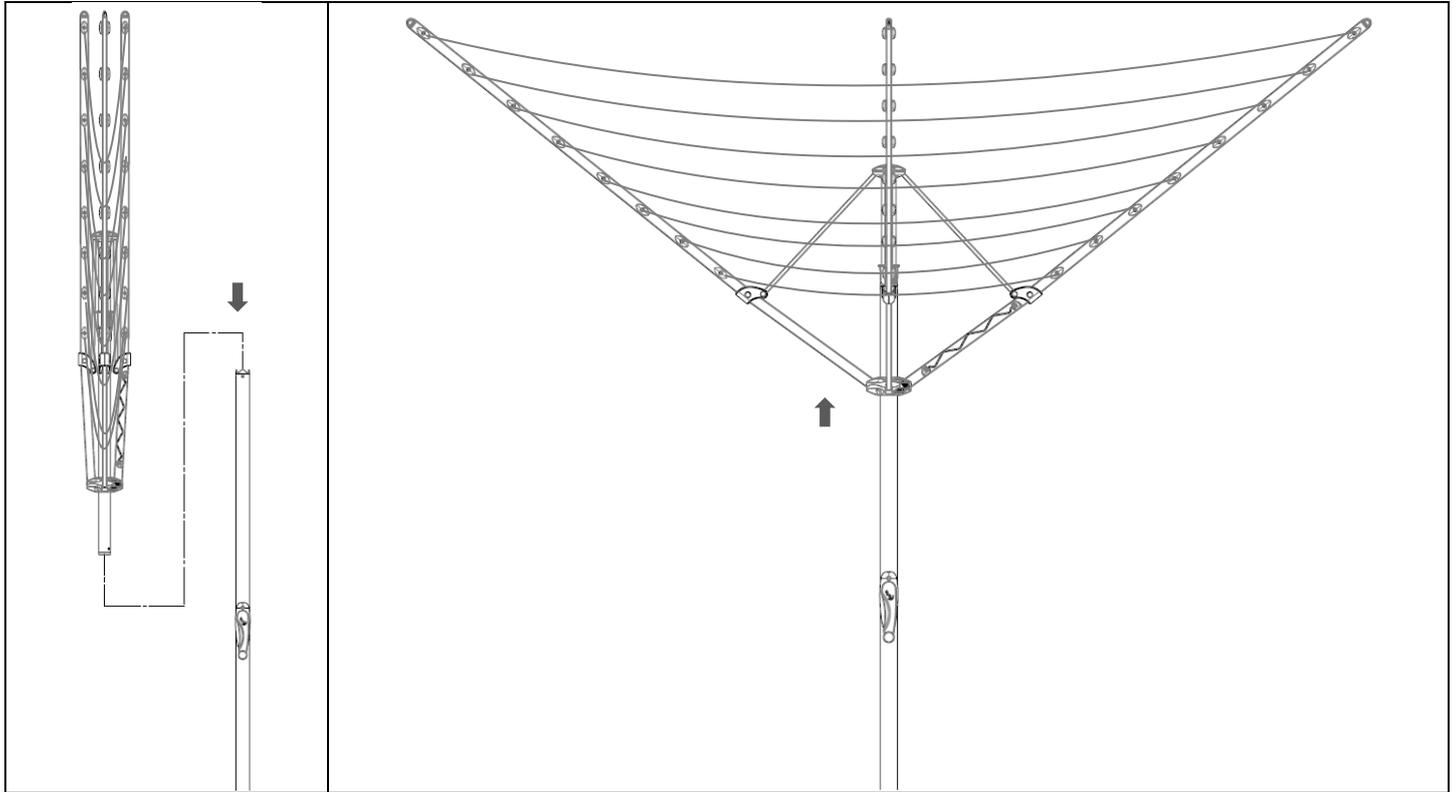


Note: Once the Arm Assembly is connected to the Main Post it cannot be removed.

- Lower the Arm Assembly into the Main Post and pull downwards until a click is heard.
- Push the Arms upwards until they click into the open position

3. Tension the Line

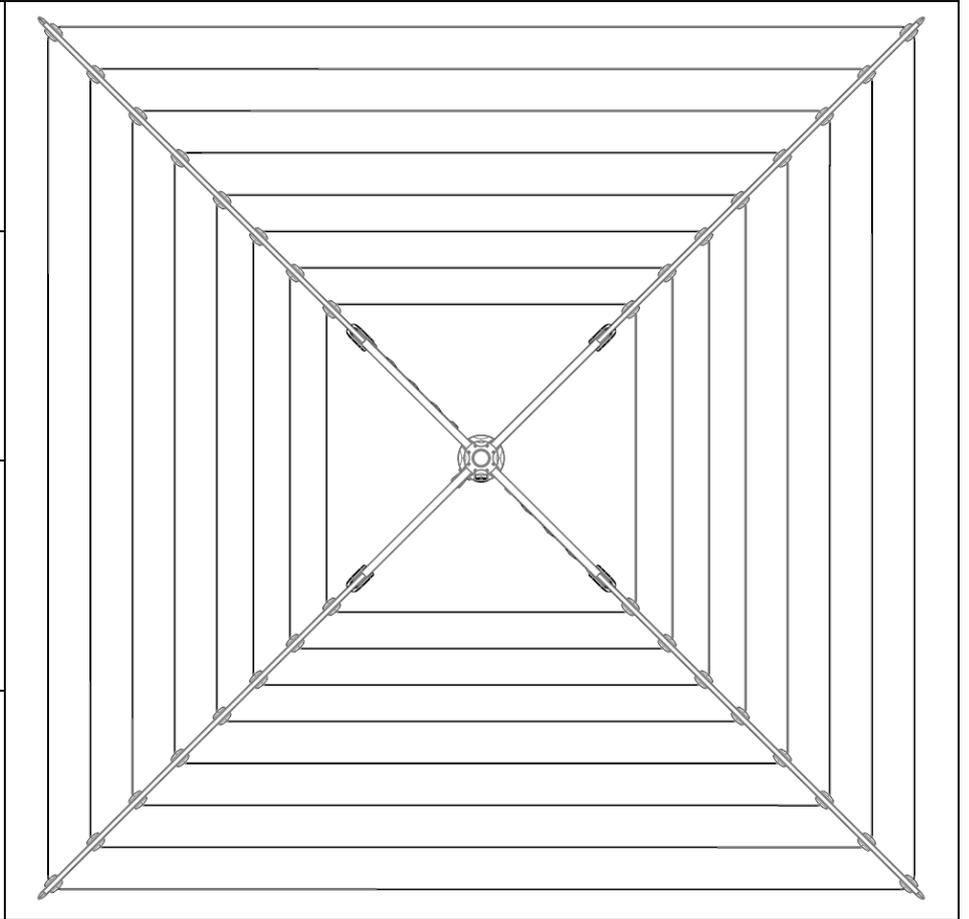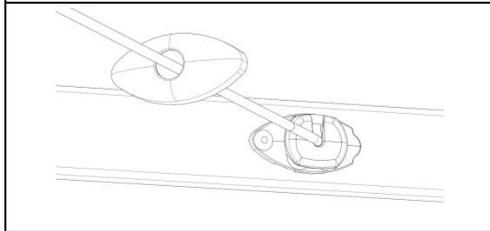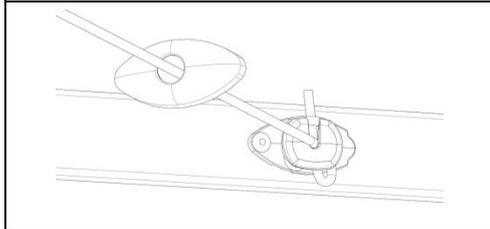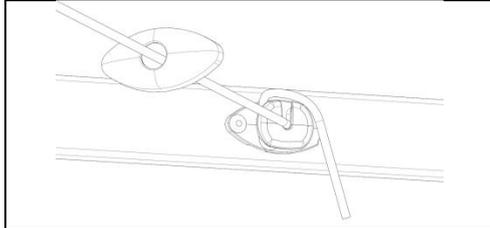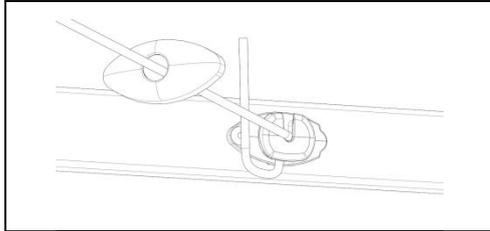


4. Folding the Arms for Storage

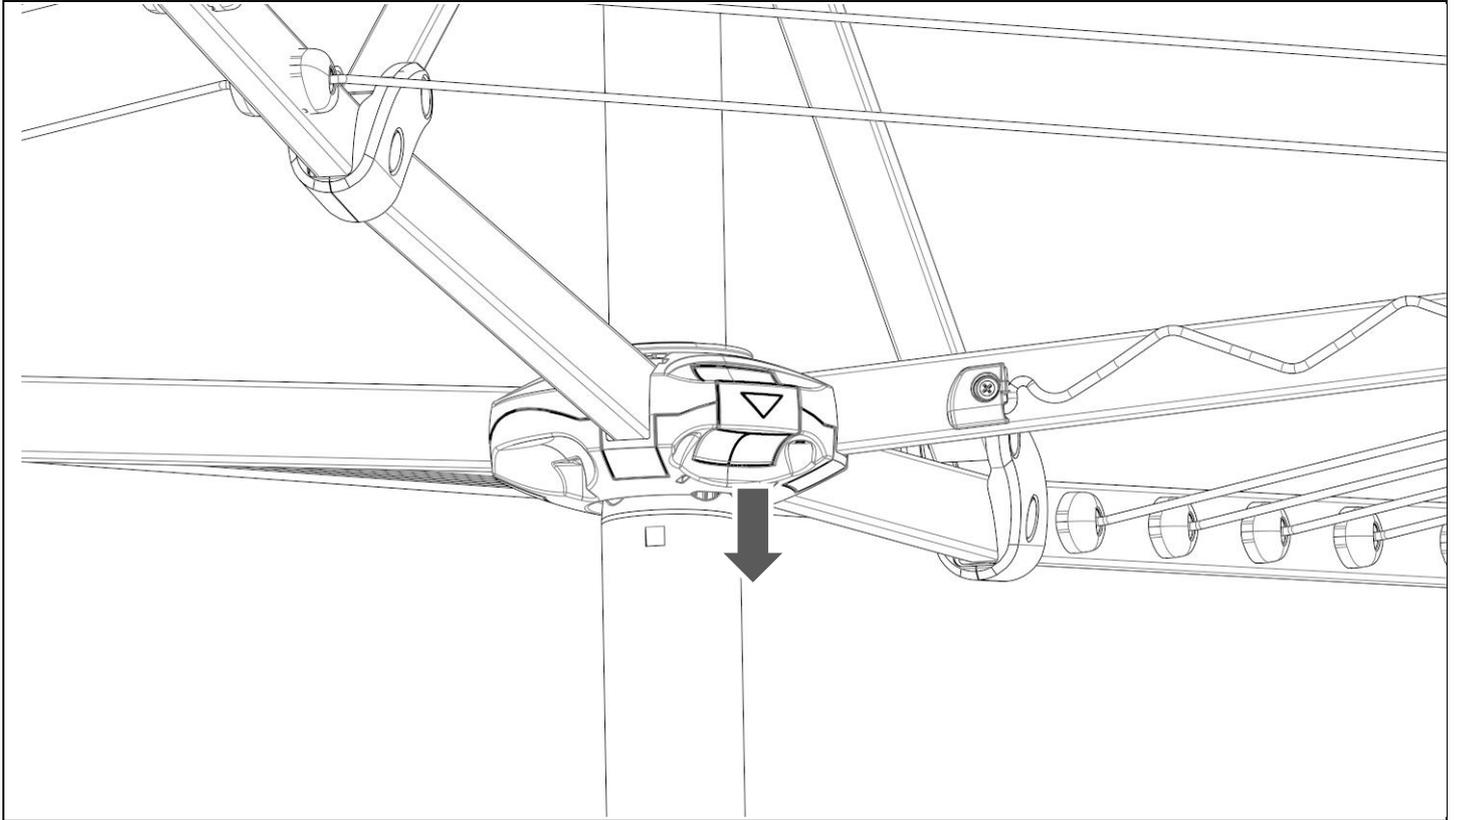


- To fold the arms for storage, pull down on the latch with one hand while supporting an arm with the other.
- Lower the arms until they folded against the Main Post.

5. Using the Coat Hanger Racks

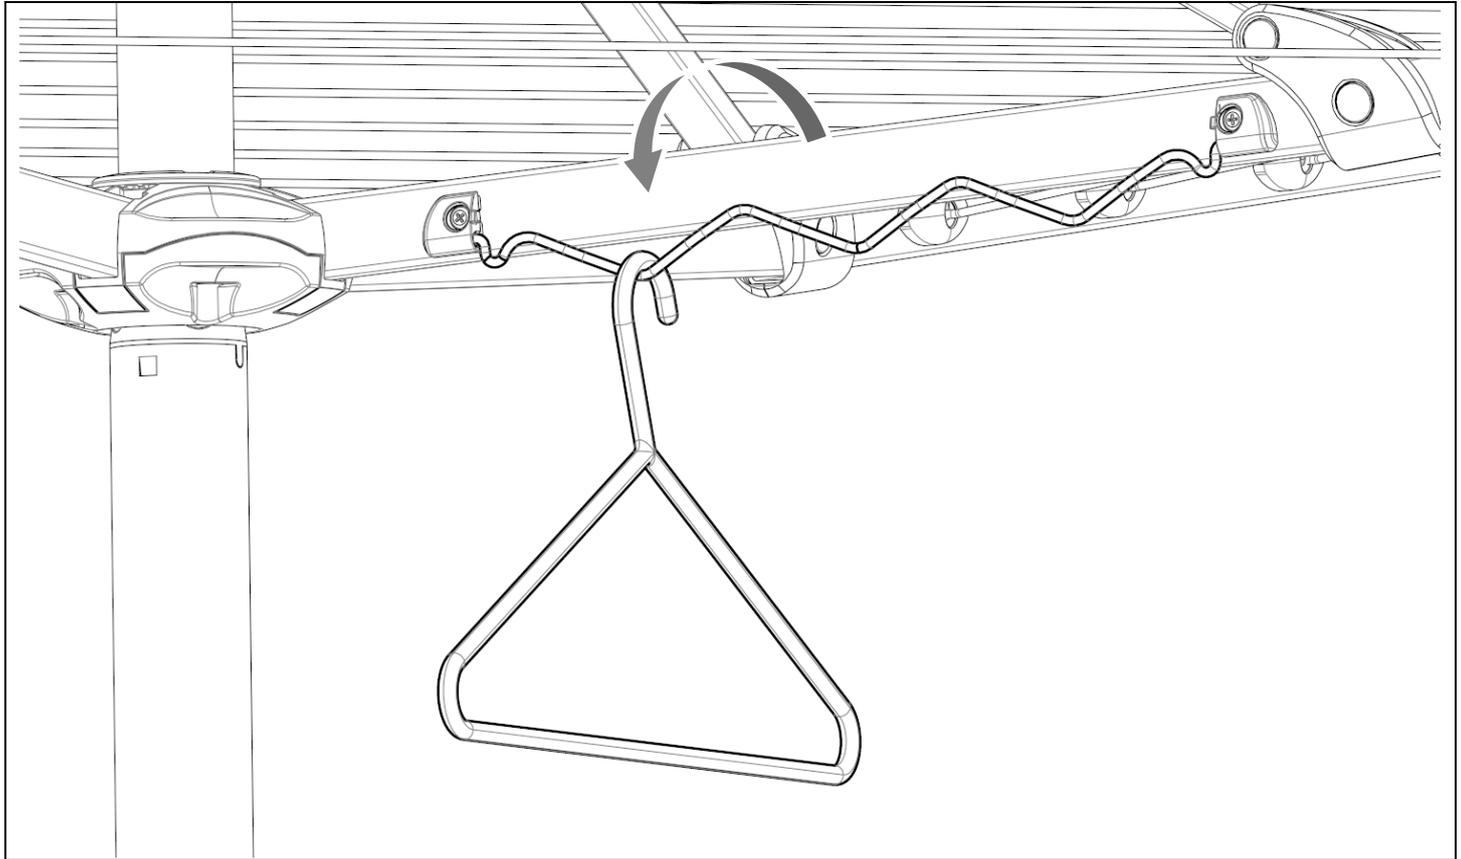

- Rotate the Coat Hanger rack downwards for use.
- For storage fold upwards and clip into place next to the Arm

6. Removing the Clothesline from the Ground Socket

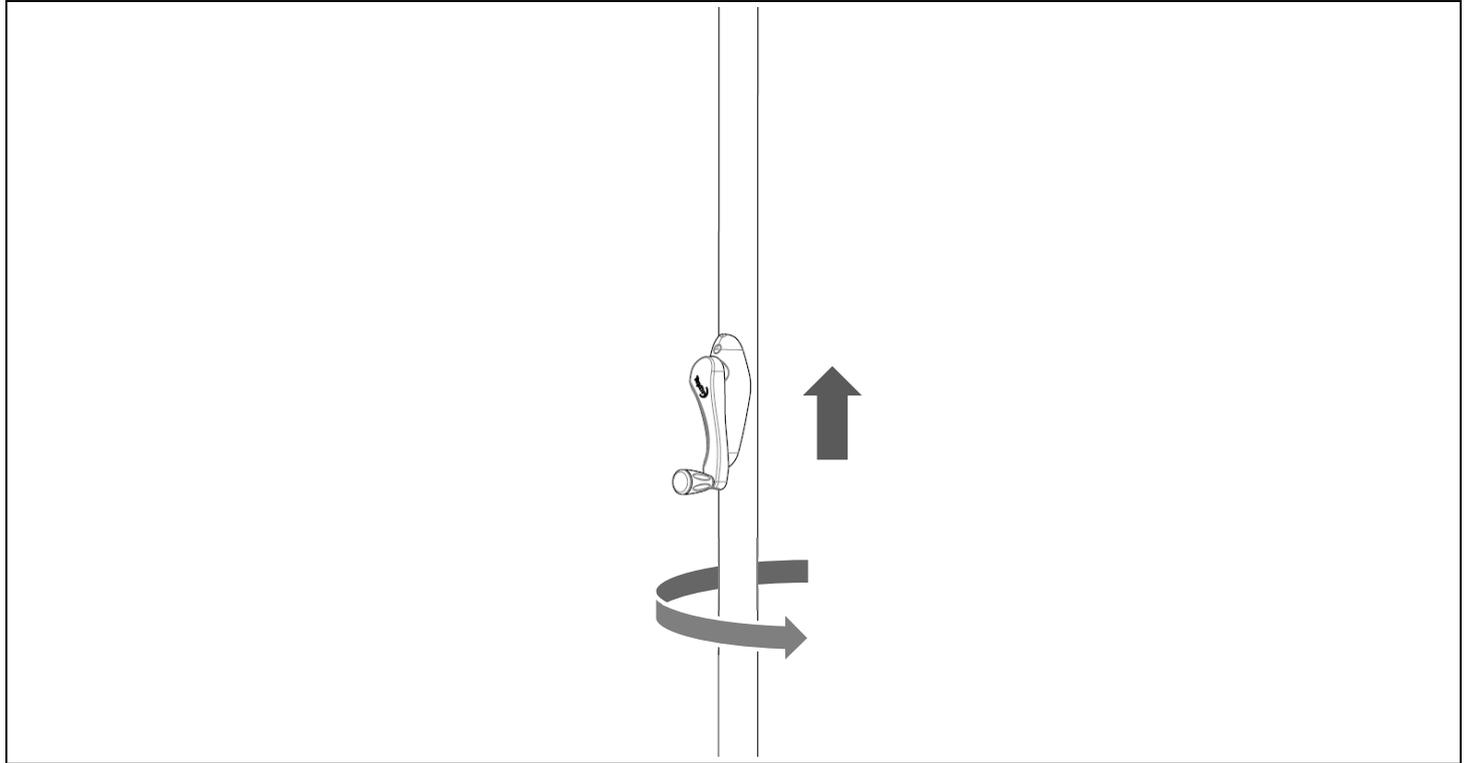

Your clothesline can be removed from the ground socket for storage. The Main tube locks to the ground socket for safety

- To remove lift while rotating anti clockwise.
- To replace lower into ground socket and rotate clockwise until it drops into place.

Care and Maintenance

We recommend checking your clothesline periodically for damage and wear and tear. If the clothesline is damaged don't use it until the necessary parts have been replaced. Contact Sales Force National Pty Ltd (t/a Zenexus) for spare parts.

No lubrication is necessary – lubricant applied at the factory will last the life of the product.

To clean your clothesline, use a damp soft cloth with mild detergent. It is important to ensure the lines remain clean so that dust and dirt do not mark light coloured washing.

Over time it is possible that soil will enter the ground socket making it difficult to remove your clothesline. To ensure your clothesline does not become stuck we recommend removing it twice a year.

Clean and polish the powder coated metal parts with automotive products annually to keep your clothesline looking its best.

Warranty - Terms and Conditions

Any claim under this warranty must be made within ten years of the date of purchase of the product. Please note that the PVC line is only covered for 12 months from date of purchase.

To make a claim under the warranty, take the product (with proof of purchase) to any Bunnings store (see www.bunnings.com.au for store locations).

Sales Force National Pty Ltd (t/a Zenexus) bears reasonable, direct, expenses of claiming under the warranty. You may submit details and proof into any Bunnings store for consideration.

The warranty covers manufacturer defects in materials, workmanship and finish under normal use.

This warranty is provided in addition to other rights and remedies you may have under law: our goods come with guarantees which cannot be excluded under the Australian Consumer Law. You are entitled to replacement or refund for a major failure and to compensation for other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. If the clothesline is repaired or partly replaced under warranty the original warranty will not be extended

The warranty excludes damage resulting from product misuse or product neglect. The warranty covers domestic use only and does not apply to commercial applications.

This warranty is given by Sales Force National Pty Ltd (t/a Zenexus), ABN: 60 110 379 587. Phone: 1300 734 714 (AU), 0800 800 040 (NZ). E-mail: customerservice@zenexus.com.au(AU), customerservice@zenexus.co.nz (NZ). Website: www.zenexus.com.au

WARRANTY EXCLUSIONS

Fading due to weather exposure or damage to the frame and line through accident misuse or negligence.