



2-IN-1
**+ STEAM
+ CLEAN™**
WITH SWIPES™
Washable Microfibre
Scrubbing Pad

Model # DDQC205



1·2·3...

MANUAL



LET'S GO.™

TABLE OF CONTENTS



1·2·3...

Quick Start Assembly ————— 6



How to ————— 8

 Insert mop pad 8

 Fill the steam water tank 8

 Fill the solution bottle 9

 Steam clean the floors 10

 Sanitise floor surfaces 11

 Quick clean floors 13

 Clean microfibre cleaning pads 14

 Care & clean 15

 Storage 16



Troubleshooting ————— 18

WARNING

IMPORTANT: READ CAREFULLY BEFORE ASSEMBLY AND USE. THIS PRODUCT IS INTENDED FOR HOUSEHOLD USE ONLY. IF USED COMMERCIALY WARRANTY IS VOID.

When using the steam cleaner, basic safety precautions should always be observed, including the following:

IMPORTANT: Please refer to floor manufacturer's care recommendations before use and test the steam cleaner on a discrete area of flooring to begin with.

When using the steam cleaner, basic safety precautions should always be observed, including the following:

WARNING: The steam cleaner head gets very hot during operation.

WARNING:  Danger of scalding

1. Do not leave the steam cleaner unattended when plugged in. Turn off and unplug the product from the socket when not in use.
2. Only use the steam cleaner indoors. Keep the steam cleaner away from rain and moisture.
3. Always unplug the steam cleaner and allow it to cool before connecting or disconnecting accessories.
4. Children should be supervised to ensure that they do not play with the appliance.
5. This appliance is not intended for use by children and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
6. The appliance should only be used as described in this User Guide.
7. Only Dirt Devil recommended accessories should be used with this appliance.
8. Do not use this steam cleaner if it has been dropped, damaged, left outdoors or dropped into water. Do not use this steam cleaner with a damaged cord or plug. If the supply cord is damaged call us on AU: 1300 361 505 / NZ: 0800 800 900 for your nearest Dirt Devil authorised Service Agent.
9. Do not pull or carry this appliance by the cord. Do not use the cord as a handle, close a door on the cord or pull the cord around sharp edges or corners. Do not run the steam cleaner over the cord. Keep the cord away from heated surfaces.
10. Do not unplug the product by pulling on the cord.
11. Do not handle the plug or the steam cleaner with wet hands.
12. Do not use without the water tank cap in place. Ensure that the water tank cap has been screwed down fully before use.
13. Do not touch any hot areas on the steam cleaner. It is normal for the steam cleaner to heat up during operation.
14. Accessories will become hot during use – allow them to cool down before handling.
15. Do not use the steam cleaner to treat any items of clothing that are still being worn on the body.


16. The force and heat of the steam may have an adverse effect on some materials. Always check whether a surface is suitable for treatment with the steam and cleaning solution by carrying out a test beforehand on a concealed area.
17. The steam cleaner must be kept level during operation.
18. Never immerse the steam cleaner in water or in other liquids.
19. Do not operate the steam cleaner without water in the tank. Always top up with water in good time.
20. Always remove the mains plug from the socket and allow the steam cleaner to cool down completely before topping up with water.
21. Never aim the steam cleaner at people, animals or plants (there is a risk of scalding). Never touch the steam jet from a short distance with your hands. Do not aim the steam cleaner at electrical items or wires.
22. Keep hair, loose clothing, fingers and all parts of the body away from openings.
23. Never fill the water tank with anything other than water. Never put additives (such as perfume, stain remover or products containing alcohol) in the water tank as they may damage the steam cleaner or make it dangerous to use.
24. Only carry the steam cleaner by the carry handle.
25. Store the steam cleaner in a cool, dry area.
26. Do not use an extension cord with this product.
27. Using improper voltage may result in damage to the steam cleaner and possible injury to the user. The correct voltage is listed on the rating label.
28. Do not use your steam cleaner if it is damaged or faulty. Please make sure that the product is unplugged from the mains and call the Dirt Devil Service Line on AU: 1300 361 505 / NZ: 0800 800 900.
29. Do not use the unit on leather, wax polished furniture or floors, synthetic fabrics, velvet or other delicate steam or water sensitive materials.
30. Do not use on acrylic and non-sealed surfaces.
31. In wet rooms, e.g. bathrooms, connect the appliance to sockets with an RCD adaptor (Earth leakage circuit breaker) connected in series.
32. The device should not be used to clean electrical appliances such as ovens, microwaves, televisions and electrical heating systems etc.
33. Keep the unit on the floor.
34. Empty the water tank and cleaning solution bottle when the steam cleaner is not in use.
35. Do not overfill the tanks. Do not exceed the maximum prescribed filling level. Please use the jug included.
36. Always show these instructions to a third party if you are passing the steam cleaner on to them.
37. Please ensure all parts are correctly fitted before using the product.
38. Take extra care when cleaning on the stairs.
39. Keep cleaning area well lit.
40. Please refer to the manufacturer's care recommendations before use and test the steam cleaner on a discrete area of flooring to begin with. Do not use steam cleaner on non-sealed floor surfaces.


WARNING: Always switch off and unplug the steam cleaner from the electrical outlet before assembling, opening or emptying the water tank and cleaning solution bottle, or before connecting/disconnecting any accessories.

IMPORTANT: The liquid or steam must not be directed towards equipment containing electrical components, such as the interior of ovens.

IMPORTANT: We recommend the use of a Residual Current Device with a Residual Current rating of 30mA or less.

WARNING: Never leave the steam cleaner in one spot on any surface for an extended period of time as this may damage the floor surface.

 **IMPORTANT:** This steam cleaner IS NOT suitable for floating floorboards and unsealed floors – please check with your floor manufacturer first prior to use.

 **IMPORTANT:** Only use Dirt Devil branded cleaning solution with this steam cleaner. Other cleaning solutions may damage the solution bottle.

 
DAMAGE TO THE STEAM CLEANER CAUSED AS A DIRECT RESULT OF NOT ADHERING TO THE GENERAL SAFETY INFORMATION AND THE INSTRUCTIONS IN THIS USER GUIDE INVALIDATES THE WARRANTY.

This machine is intended for household use only, and NOT for commercial or industrial use.

PLEASE KEEP THESE INSTRUCTIONS FOR FURTHER USE.


QUICK START

1

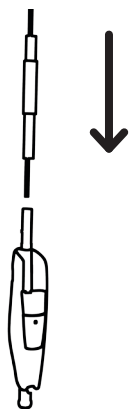


POP THE HANDLE ONTO THE BODY. IT'LL CLICK.

 2




THEN INSERT THE HANDLE GRIP ONTO THE HANDLE. IT'LL CLICK TOO.

 3

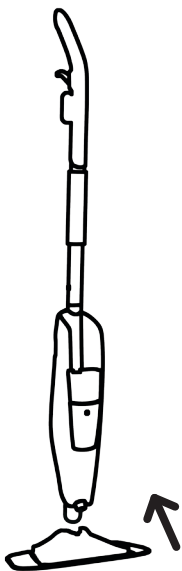

POP ON THE MOP HEAD.

 4

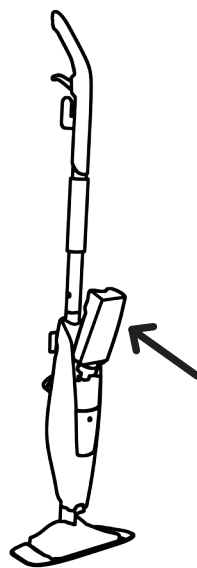


TIP THE SOLUTION BOTTLE IN EXACTLY LIKE THIS AND PUSH DOWN. IT'LL CLICK.



5

 
ADD WATER IN THE BACK TANK FOR STEAM CLEANING.

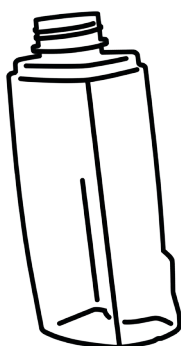

ONLY USE DIRT DEVIL BRAND CLEANING SOLUTION


6

 ADD CLEANING SOLUTION IN THE FRONT BOTTLE FOR SPRAY CLEANING.

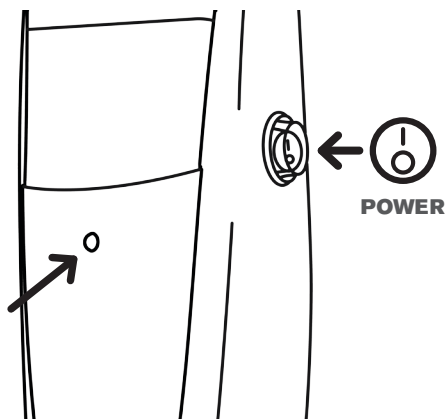

7

 PLUG IN AND TURN ON. THE STEAM LIGHT WILL TURN GREEN WHEN IT IS READY.

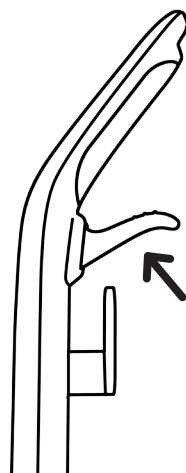

8

 
FOR QUICK MESSSES WITH NO STEAM, JUST PULL THE SPRAY TRIGGER WITHOUT PLUGGING IN.

HOW TO

⚠ WARNING
To reduce the risk of personal injury - Unplug before cleaning or servicing.

INSERT MOP PAD


1. Slide one side in pocket and then the other.

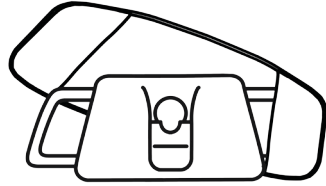

NOTE: In hard water areas, or to prevent calcium and mineral deposits from accumulating on the heating element and mop head, you may use distilled or demineralised water in place of tap water.

FILL THE STEAM WATER TANK


 
1. Pull out the steam water tank cap.
2. Fill cup with clean water and add it to the steam water tank.
3. Replace the steam water tank cap.

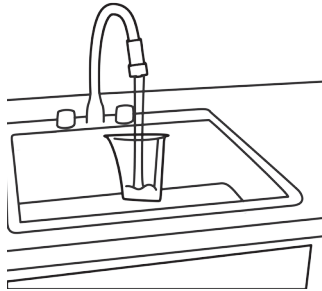

HOW TO


FILL THE SOLUTION BOTTLE

  1. Tilt the solution tank out exactly like this and pull up.
2. Unscrew the solution tank cap.

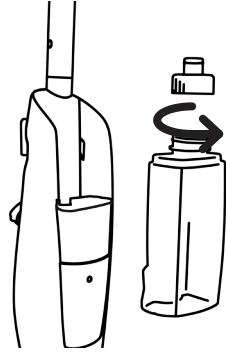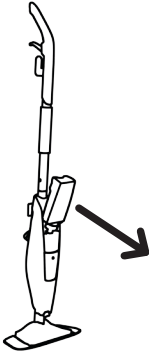


3. Pour solution into the solution tank.

 
**ONLY USE DIRT DEVIL BRAND
CLEANING SOLUTION**

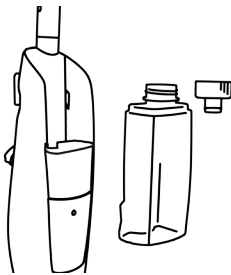

 4. Replace solution tank cap.

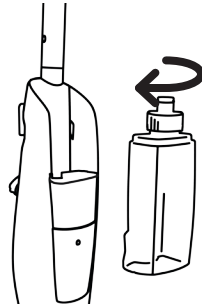

 5. Replace the solution tank by pressing the bottle down then pushing it back exactly like this.

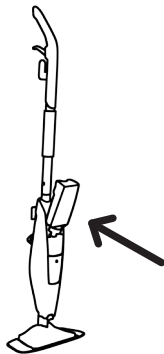

! WARNING

To reduce the risk of personal injury - Unplug before cleaning or servicing.

! IMPORTANT

Never use the STEAM+CLEAN without a cleaning pad properly attached to the mop head.

 
! IMPORTANT

Check the steam water tank to ensure there is adequate water in the tank.


HOW TO

STEAM CLEAN FLOORS


1. Vacuum floors before steam cleaning.



 
2. Plug in then press the power switch on your Steam+Clean. The steam light will turn green when it's ready.

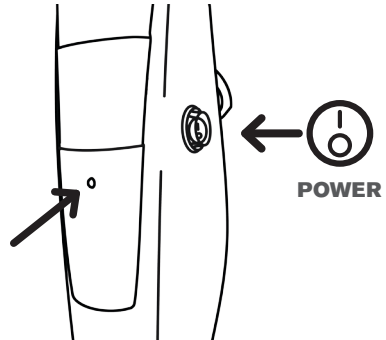

 3. Steam will start to flow from the base and wet the cleaning pad.

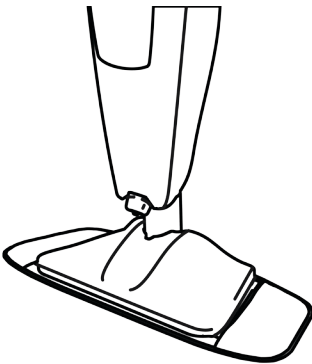

 4. Tilt the handle back to clean the floor area.

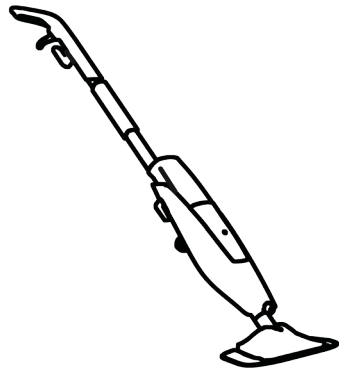

⚠ WARNING

Never leave the Steam Mop in one spot on any surface for an extended period of time with a damp or wet cleaning pad attached as this may damage the floor surface.

⚠ CAUTION

Cleaning pad and mop head may be hot.

 
⚠ IMPORTANT

Do not store unit with a damp or wet microfibre cleaning pad attached.


HOW TO

SANITISE FLOOR SURFACES

1. Vacuum floors before sanitizing.



 
2. Plug in then press the power switch on your Steam+Clean. The steam light will turn green when it's ready.

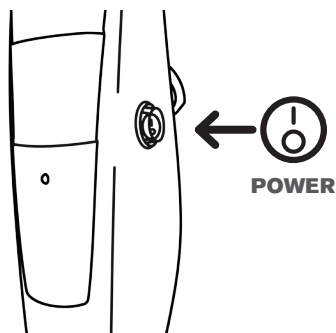

3. Use steam alone on your Steam+Clean, Do not use cleaning solution.



 4. With cleaning pad attached, run a minimum of 4 strokes at a medium pace (5-7 seconds per 80cm stroke) across same area. Allow to air dry.

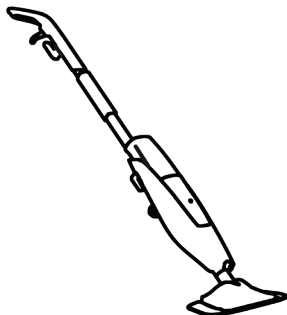


HOW TO

SANITISE FLOOR SURFACES CONT.

WARNING

Never leave the product on the floor with a damp or wet cleaning pad still attached when not in use.

 
5. Turn off when finished.

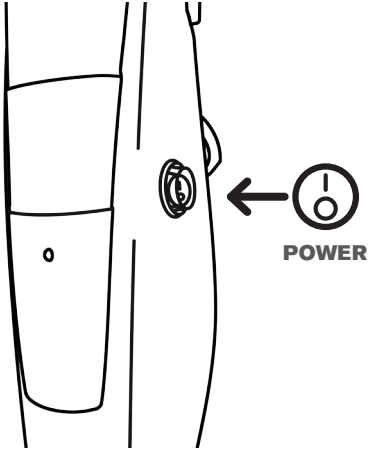

6. Unplug and let the unit cool.



 7. Then carefully remove the mop pad from the steam mop head.

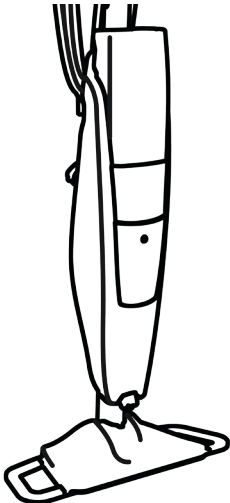

NOTE: For best results: The cleaning pad should be changed when it gets too wet or if it is noticeably dirty.

⚠ WARNING

Never leave the product on the floor with a damp or wet cleaning pad still attached when not in use.

⚠ IMPORTANT

Never use the STEAM+CLEAN without a cleaning pad properly attached to the mop head.

 
 
⚠ IMPORTANT

Check the solution tank to ensure there is adequate solution in the tank.



HOW TO

QUICK CLEAN FLOORS

1. Vacuum floors before cleaning.
2. Tilt the handle back to clean the floor area.

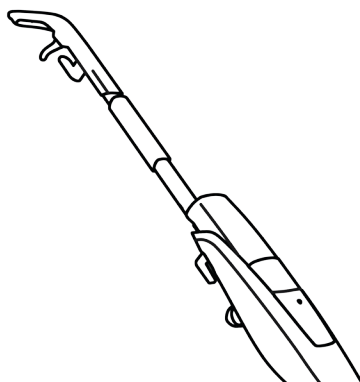

  3. Pull the spray trigger to dispense cleaning solution as you clean.
4. Carefully remove the dirty mop pad.

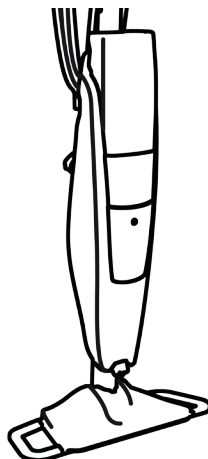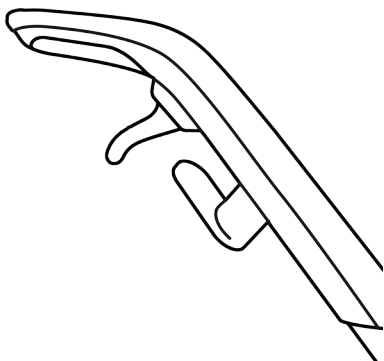

WARNING

To reduce the risk of personal injury - Unplug before cleaning or servicing.

CAUTION

Never use bleach or fabric softener.

IMPORTANT

Only use liquid detergent or soap.

IMPORTANT

 
Wash microfibre cleaning pads regularly. As with any fabric, dirt particles can cause the fibers to break down. Therefore regular cleaning will help preserve the cleaning efficiency of the microfibre cleaning pads.

HOW TO


CLEAN MICROFIBRE CLEANING PADS

To ensure long life and continued cleaning ability, proper care of your microfibre cleaning pad is required.

- 1. Toss in the washing machine with mild detergent after each use or when dirty. Air dry for 24 hours or until dry.**

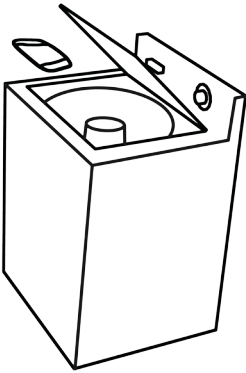

 - 2. With use, sometimes a thread will loosen. Simply trim any loose threads with a pair of sharp scissors.**

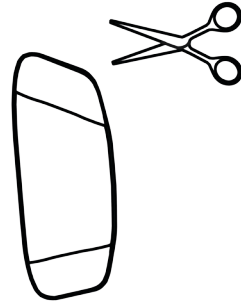

NOTE: To avoid picking up lint from the cleaning pads, wash separately. Cleaning pads may be machine tumble dried on low heat, or place them in a garment bag.

HOW TO

STEAM+CLEAN CARE & CLEANING

 
1. Always unplug and allow your Steam+Clean to cool completely before emptying, storing or removing the pad.



CAUTION

Carefully remove the cleaning pad from the mop head, as mop pad may be hot.

2. Any water remaining in the water tank should be emptied before storing.

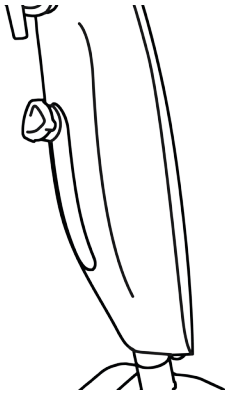


! WARNING

To reduce risk of personal injury - Unplug before cleaning or servicing.



 3. Wipe down exterior with a damp or dry, soft cloth.

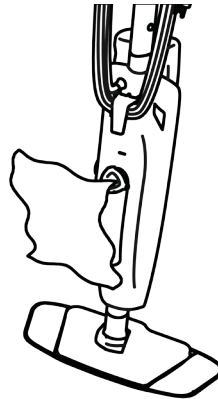


Any other servicing should be done by a Dirt Devil authorised service agent. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, call us on AU: 1300 361 505 / NZ: 0800 800 900.


HOW TO

STORE YOUR STEAM+CLEAN

 
1. Never store the Steam+Clean while it's still plugged in.

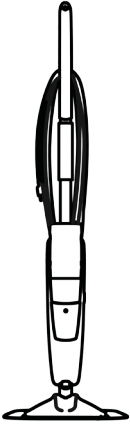

 
2. Once cooled down, empty water from the Steam water tank before storing.

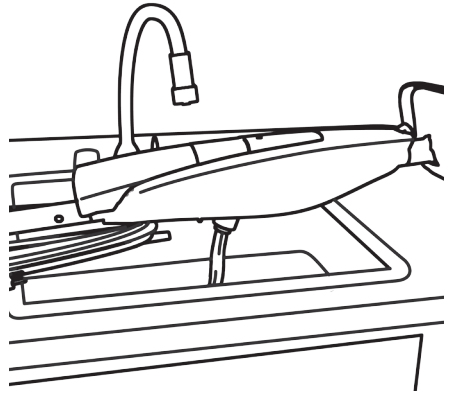

 
3. Empty solution from the solution tank before storing.

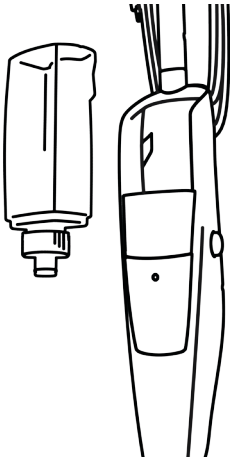

 4. Twist the quick-release upper cord wrap to face upwards. Wrap cord on cord hooks for convenient storage.

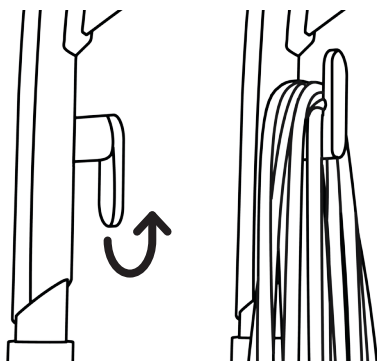

 5. Store upright in a protected, dry area. Keep water fill cup handy for future use.

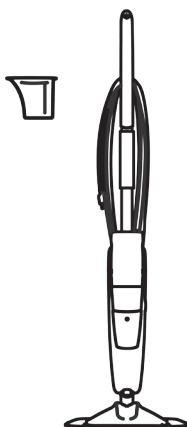

ANY OTHER SERVICING SHOULD BE DONE BY A DIRT DEVIL AUTHORISED SERVICE AGENT. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, call us on AU: 1300 361 505 / NZ: 0800 800 900.

TROUBLESHOOTING

Any other servicing should be done by a Dirt Devil authorised service agent. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, take it to a service center prior to continuing use.



WARNING To reduce the risk of personal injury - Unplug before cleaning or servicing.

PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
Cleaner won't run	1. Power cord not firmly plugged into outlet.	1. Plug unit in firmly.
	2. Blown fuse or tripped breaker.	2. Check fuse or breaker in home. Replace fuse/ reset breaker in home.
	3. Needs service.	3. Call AU: 1300 361 505 / NZ: 0800 800 900
Reduced steam or no steam	1. Water tank is empty.	1. Fill water tank.
Product worked intermittently and then stopped steaming	1. Not enough water in the steam water tank.	1. Fill steam water tank.
Cleaning pad is very wet and no longer picking up dirt	1. Cleaning pad is saturated.	1. Change pad.
Product left white spot on floor	1. Product left in one spot too long.	1. Never leave the product on the floor with a damp or wet cleaning pad still attached when not in use.
	2. Hard water.	2. Use distilled water.
Product will not dispense cleaning solution from front nozzle.	1. Not enough solution in the solution tank.	1. Fill solution tank.
	1. Solution not dispensing when trigger is pulled and tank is full.	2a. Tank not fully seated. 2b. Solution spray nozzle is clogged. Gently clean tip of spray nozzle with finger nail and test spray again. If still clogged, remove spray nozzle by turning spray nozzle 1/4 turn counter clockwise and remove from unit. Clean inside surfaces of spray nozzle with cotton swab and warm water or gently clean with a straightened paper clip.

TECHNICAL SPECIFICATIONS

Model no.:	DDQC205
Wattage:	1200W – 1400W
Voltage:	220-240V ~ 50Hz
Cord length:	6m
Water tank capacity:	200ml
Solution bottle capacity:	450ml
Steam preparation time:	20 seconds
Steam run time:	13 minutes

Subject to technical change without notice.



This product
meets applicable
regulatory
requirements



Indoor
Use



Read
Instructions



Distributed by Techtronic Industries Australia Pty. Ltd.

31 Gilby Road, Mt Waverley

Victoria, 3149, Australia

www.dirtdevil.com.au

Service Line:

AU: 1300 361 505 / NZ: 0800 800 900

LET'S GO.