

jumbuck®

Rondo Medium Charcoal Spit Roaster With Rotisserie

MONTH
12
WARRANTY

- Powder Coated Steel
- 240V Rotisserie Motor – Turns 20kg Weight
- Adjustable Cooking Height
- Easy To Manouvre On Castors
- Rotisserie Support Bracket & Prongs included
- Dimensions: 1270Lx560Wx1020Hmm



Grill



Chrome Plated
Steel
Cooking
Surface



Solid Fuel



JUMBUCK RONDO MEDIUM 3180887 CHARCOAL SPIT ROASTER (HS-FP002)

SAFETY INSTRUCTIONS

**FOR
OUTDOOR
USE ONLY**



- For outdoor use only.
- Improper installation, adjustment, alteration, service or maintenance can cause property damage, injury or death.
- Read the installation instructions thoroughly before installing this equipment.
- Warning: accessible parts may be very hot. Keep young children away.
- Do not move the appliance during use.
- Any modification of the appliance may be dangerous and will void the warranty.
- Installer to leave instructions with the consumer and consumer to retain them for future reference.
- Please ensure all packaging and transit protection materials are removed prior to using the spit roaster.

IMPORTANT! PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE USE!

**IMPORTANT: READ THE ASSEMBLY INSTRUCTIONS IN THIS BOOKLET
BEFORE REMOVING THE CONTENTS OF THIS CARTON**

IMPORTANT SAFETY INSTRUCTIONS

This appliance must only be used in an above ground open-air situation with natural ventilation, without stagnant areas, where products of combustion are rapidly dispersed by wind and natural convection

- This SPIT ROASTER is an **outdoor appliance only**. Under no circumstances should it be use indoors.
- Do not store chemicals or flammable materials near this appliance.
- Unsupervised children should not be near the SPIT ROASTER while cooking or during warm up or cool down.
- People with flammable clothing such as nylon etc. should keep well away from the SPIT ROASTER when it is operating.



DO NOT	OPERATE THIS APPLIANCE BEFORE READING THE INSTRUCTION BOOKLET
DO NOT	PLACE ARTICLES ON OR AGAINST THIS APPLIANCE
DO NOT	STORE CHEMICALS OR FLAMMABLE MATERIALS OR SPRAY AEROSOLS NEAR THIS APPLIANCE
DO NOT	OPERATE THIS APPLIANCE INDOORS
DO NOT	ENCLOSE THIS APPLIANCE
DO NOT	LIGHT OR OPERATE WITH THE COVER ON(COVER NOT INCLUDED)

SPIT ROASTER OPERATING GUIDELINES

Lighting the spit roaster

- solid fuel is to be used for this product (fire wood, charcoal etc.)
- place solid fuel into the spit roaster and light using fire starters
- let the solid fuel light (check occasional to ensure fire is lit)

Cooking

- ensure solid fuel is lit and that there is sufficient heat for cooking
- secure the food on the skewer, position skewer at desired height and switch on the motor
- the cooking grid can also be used to cook
- regularly monitor temperature to ensure food is not under or over cooked


Cleaning

- once finish cooking, remove left over solid fuel from the spit roaster
- always ensure spit roaster is clean and free from oil or grease (internally and externally) to ensure longevity of the spit roaster
- always keep spit roaster dry and under cover to protect from weather and moisture

Pre-caution


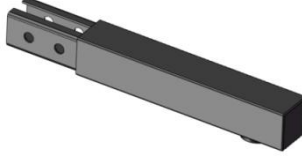



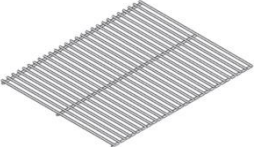
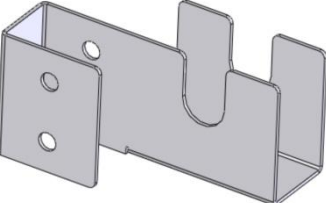
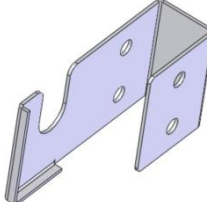


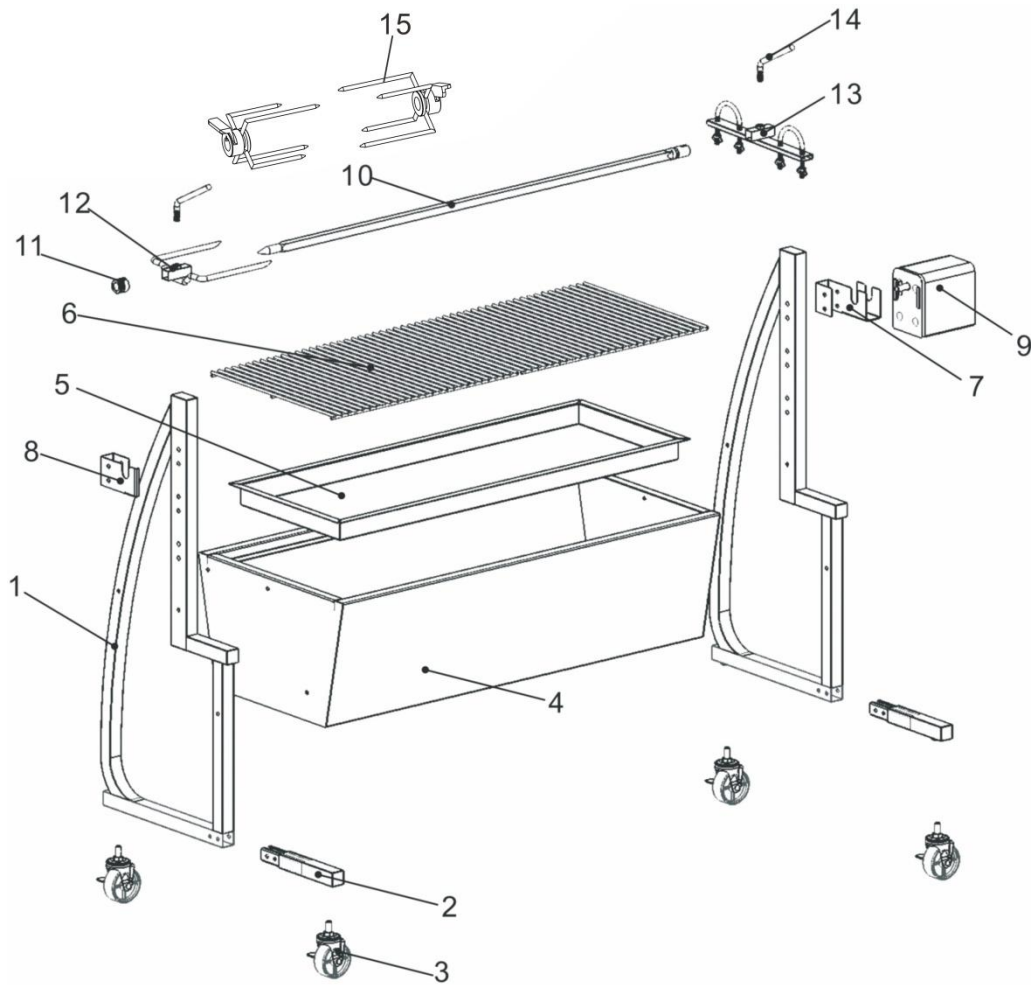
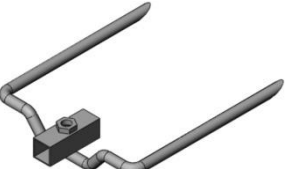
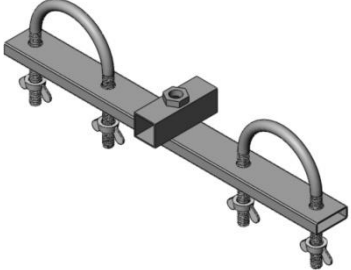

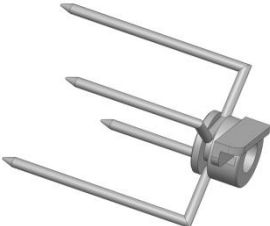
- always ensure hands are protected when putting or removing food from the spit roaster
- always ensure spit roaster is cool before touching or cleaning the internal areas
- always ensure hands are protected when making adjustments to the air vent
- do not use flammable liquids for igniting and re-igniting
- open flames and burning embers must never be left unattended
- after use, make sure the unit is allowed to cool before moving

EXPLODED VIEW AND PARTS CODE











Part Number	Parts Description	Parts Code
1	Leg Back Asm	FP00201
2	Front Leg	FP00202
3	Wheel	FP00203
4	Body Asm	FP00204
5	Carbon Box	FP00205
6	Cooking Grid	FP00206
7	Right Motor Support	FP00207
8	Left Motor Support	FP00208
9	Motor	FP00209
10	Rotisserie Rod	FP00210
11	Rotisserie Brace	FP00211
12	Large Rotisserie Prong	FP00212
13	Rotisserie Support	FP00213
14	Rotisserie Handle	FP00214
15	Small Rotisserie Prong	FP00215

CARTON CONTENTS

<p>1. Leg Back Asm 2pcs</p> 	<p>2. Front Leg..... 2pcs</p> 	<p>3. Wheel..... 4pcs</p> 
<p>4. Body Asm.....1pc</p> 	<p>5. Carbon Box.....1pc</p> 	<p>6. Cooking Grid2pcs</p> 
<p>7. Right Motor Support...1pc</p> 	<p>8. Left Motor Support.....1pc</p> 	<p>9. Motor1pc</p> 
<p>10. Rotisserie Rod.....1pc</p> 	<p>11. Rotisserie Brace.....1pc</p> 	<p>12. Large Rotisserie Prong.....1pc</p> 
<p>13. Rotisserie Support....1pc</p> 	<p>14. Rotisserie Handle....2pcs</p> 	<p>15. Small Rotisserie Prong....2pcs</p> 


HARDWARE PACK CONTENTS

A	<p>Bolt M6x40mm</p> 	10pcs	B	<p>Shrapnel ϕ 6</p> 	10pcs
C	<p>Washer ϕ 6</p> 	10pcs	D	<p>Nut M6</p> 	10pcs
E	<p>Bolt M8X50</p> 	4pcs	F	<p>Nut M8</p> 	4pcs
G	<p>Bolt M6X10</p> 	1pc	H	<p>Spanner</p> 	1PC


ASSEMBLY INSTRUCTIONS

Remove all contents from packaging, and make sure all the parts are present before attempting to assemble! Tighten all bolt connections by hand first. When the spit roaster is fully assembled, retighten the screws, nuts and bolts by using a wrench and screwdriver.


Step 1: Assemble Front Leg (Part 2) to the Back Leg (Part 1), Use Bolt A, Shrapnel B Washer C Nut D to tighten as shown.

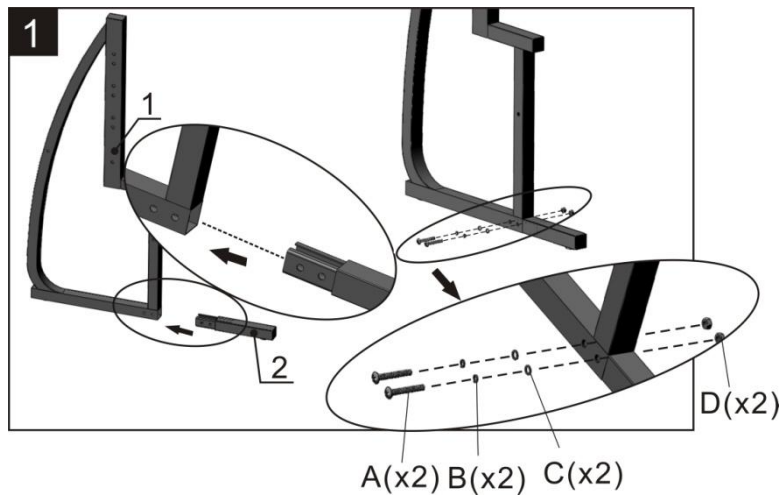


Step 2: Assemble universal wheels to the legs.

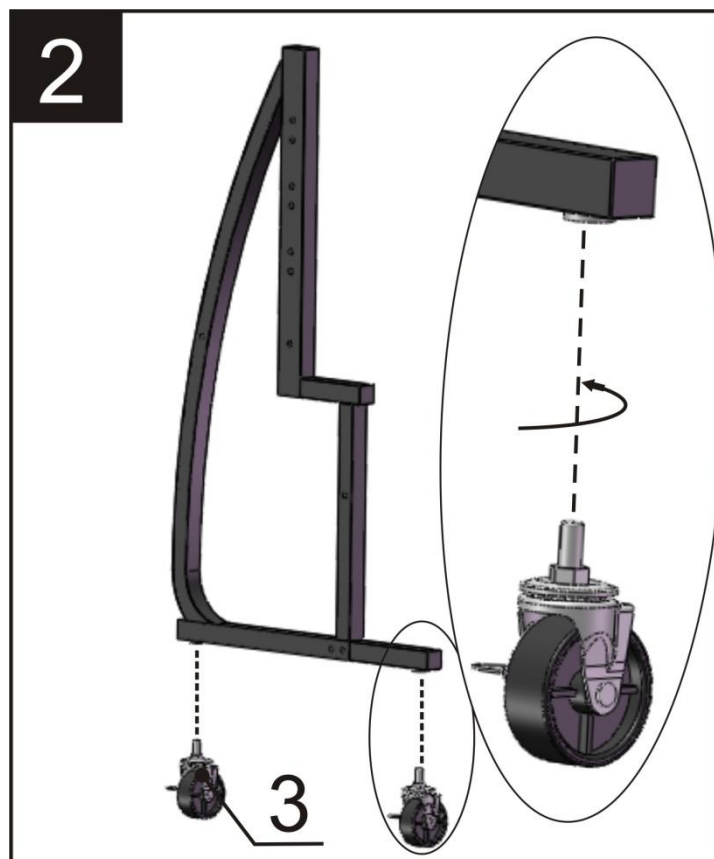


Step 3: Assemble the two Leg Asm to the Body (Part 4), Use Bolt A, Shrapnel B Washer C Nut D to tighten as shown.

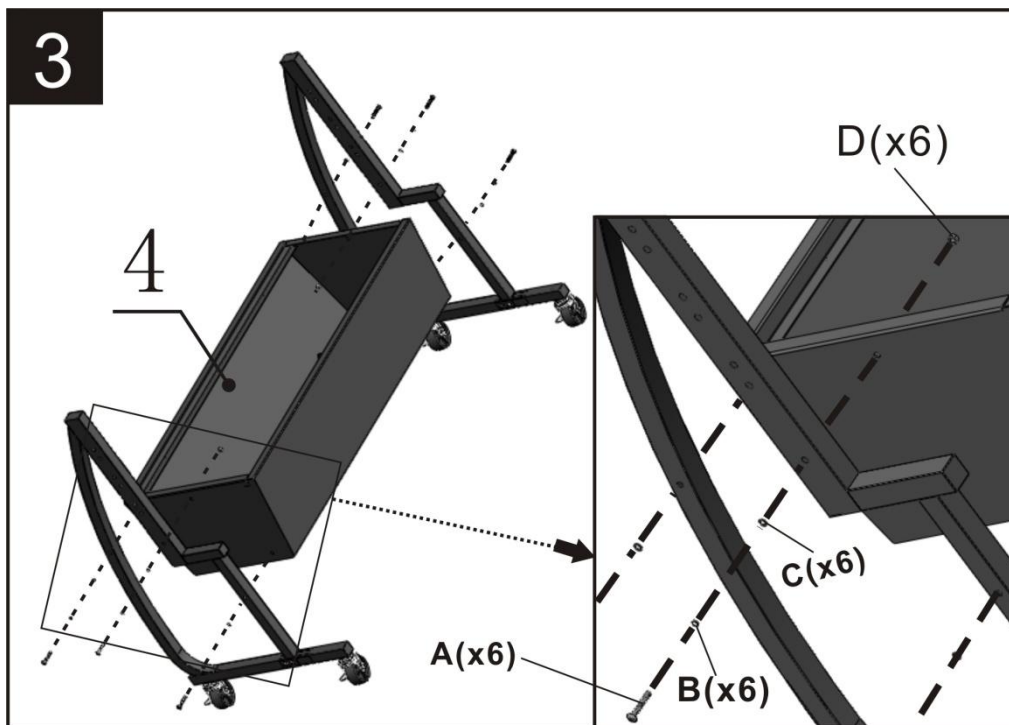


Step 4: Put the Carbon Box (part 5) into the Body as shown.

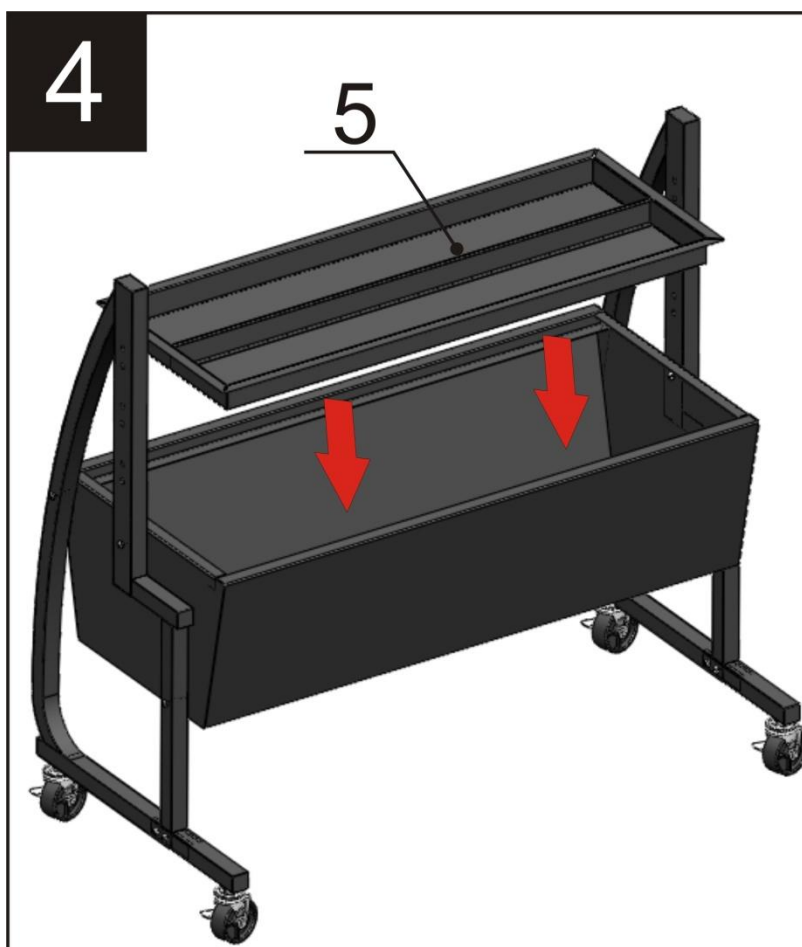


Step 5: Insert the Cooking Grid (part 6) into the Body as shown.

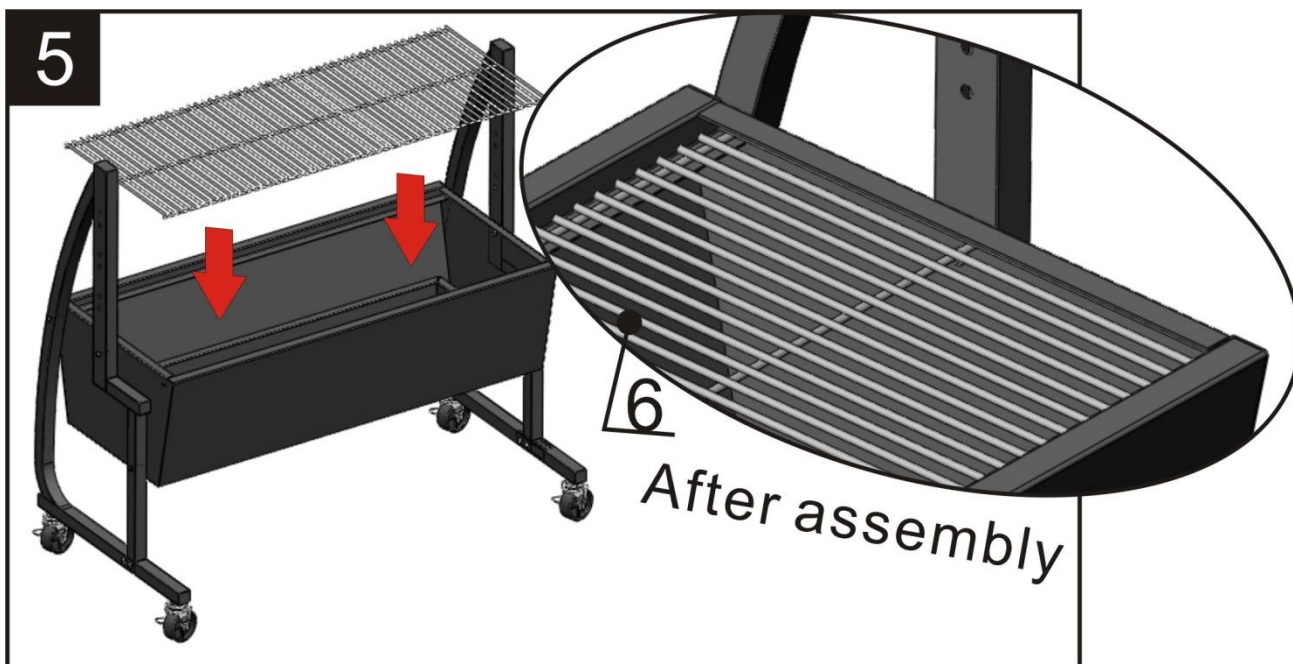


Step 6: Assemble Right Motor Support (part 7) and Left Motor Support (Part 8) to the Leg, Use Bolt E Nut F to tighten as shown.

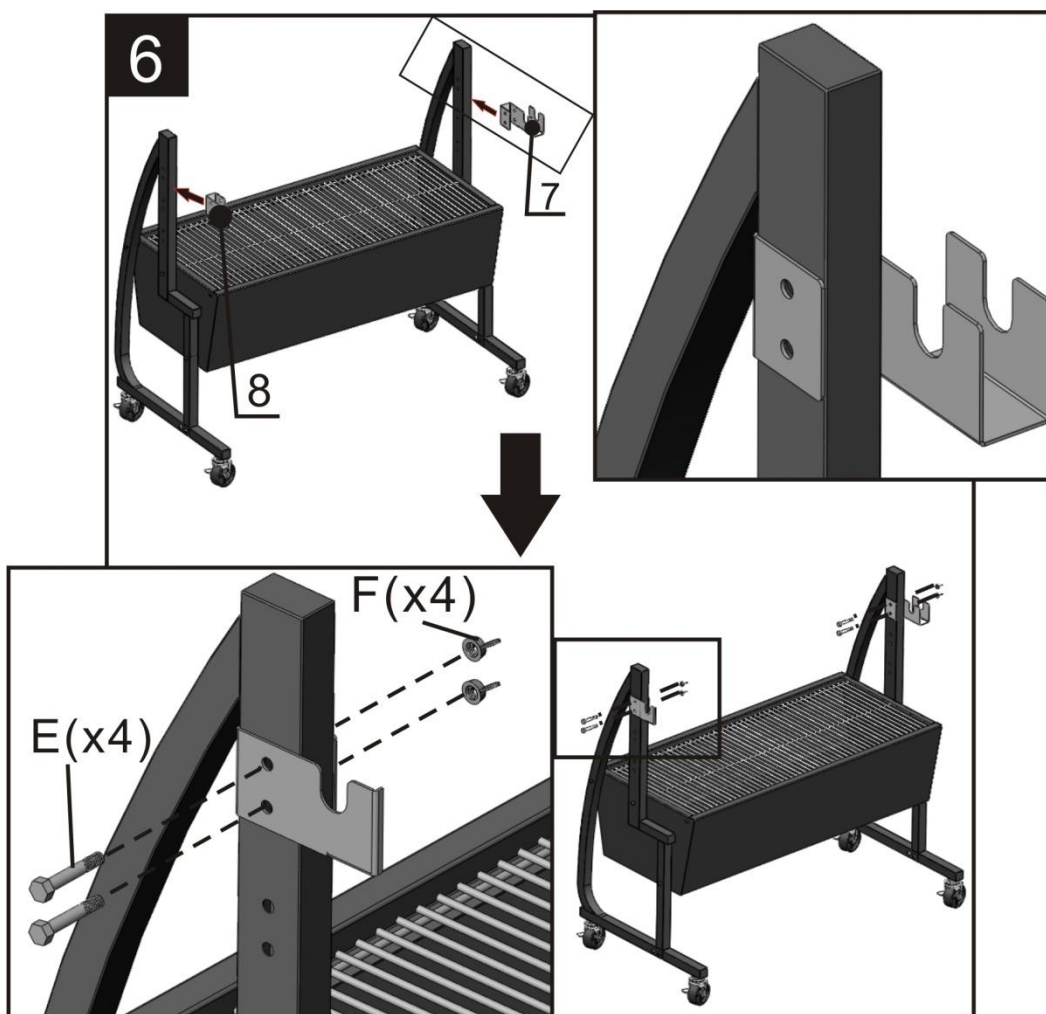


Step 7: Insert Motor (Part 9) in the Right Motor Support (Part 7), as shown

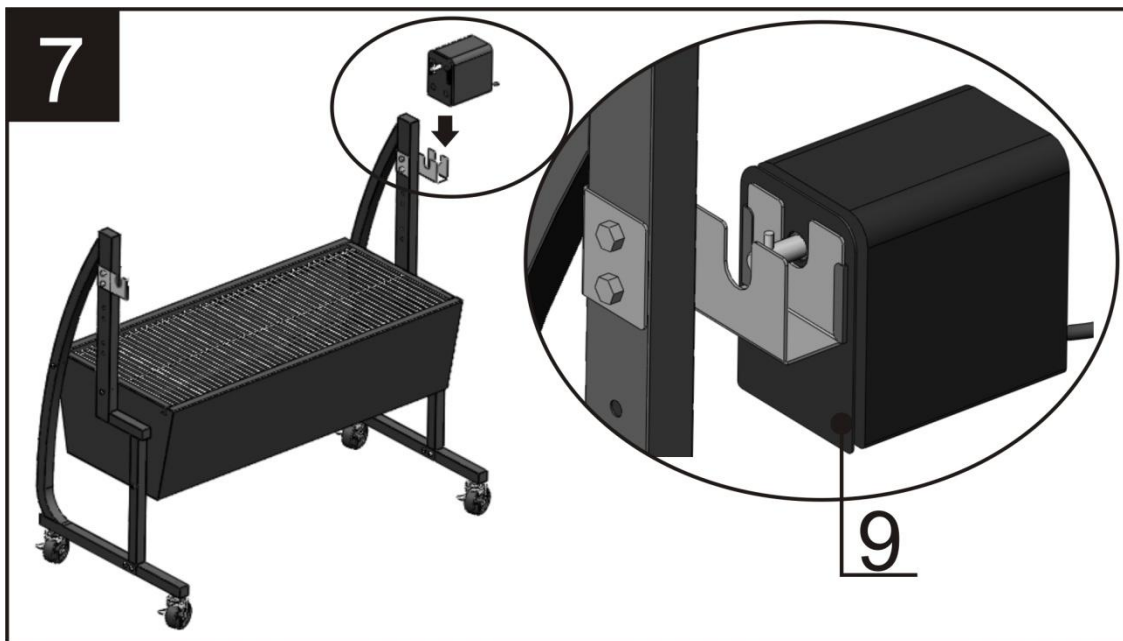

Step 8: Insert Rotisserie Support (Part 13), Large Rotisserie Prong (Part 12), Rotisserie Brace (Part 11) , Small Rotisserie Prong (Part 15) onto Rotisserie Rod (Part 10) as shown. Then assemble Rotisserie Handle (Part 14) onto Rotisserie Support (Part 13) and Large Rotisserie Prong (Part 12), as shown.

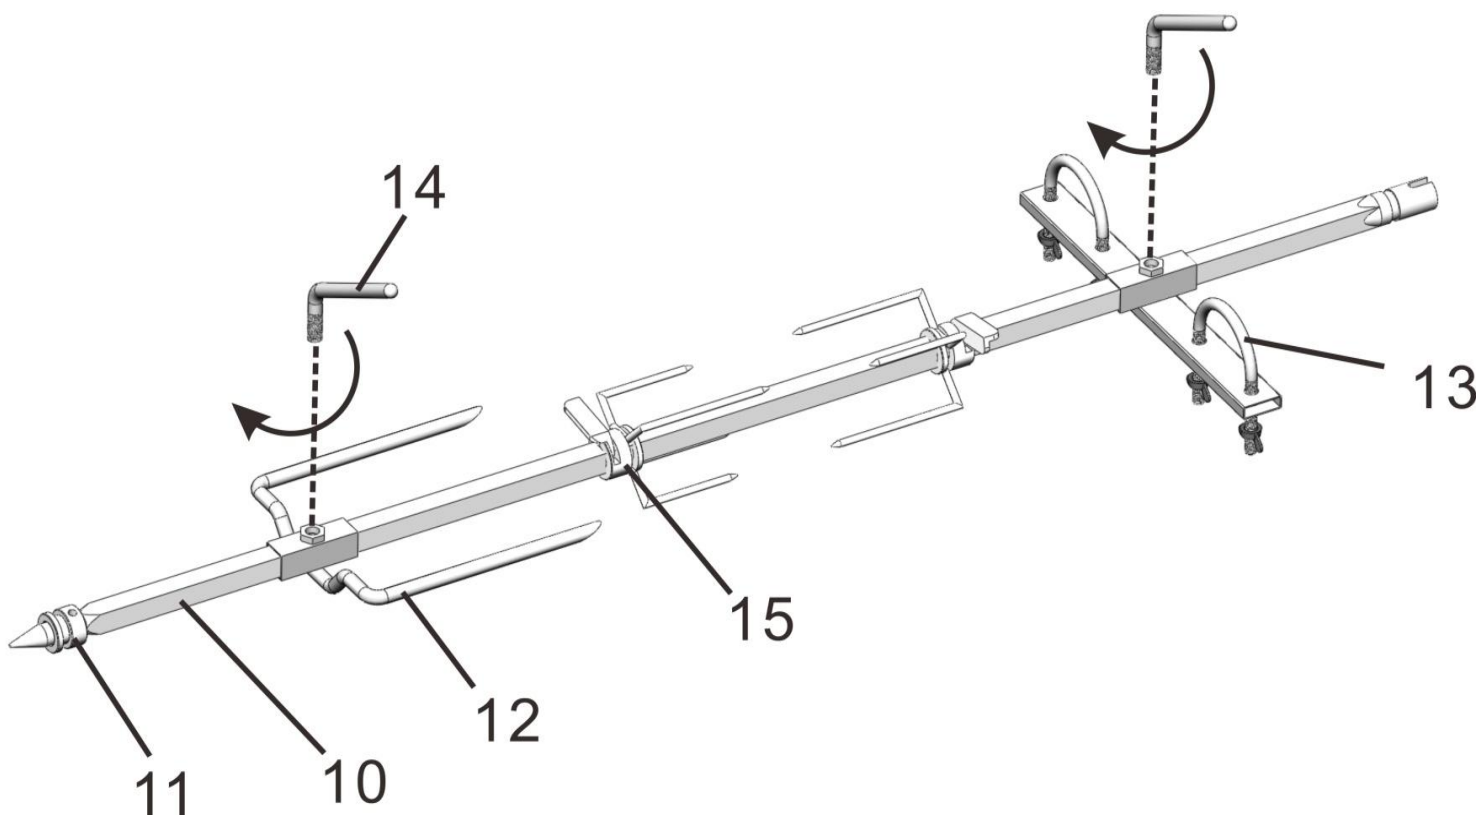

Step 9: Insert the Rotisserie Rod (after step 8) to the Motor, and use Bolt G to tighten for the Rotisserie Brace (Part 11)

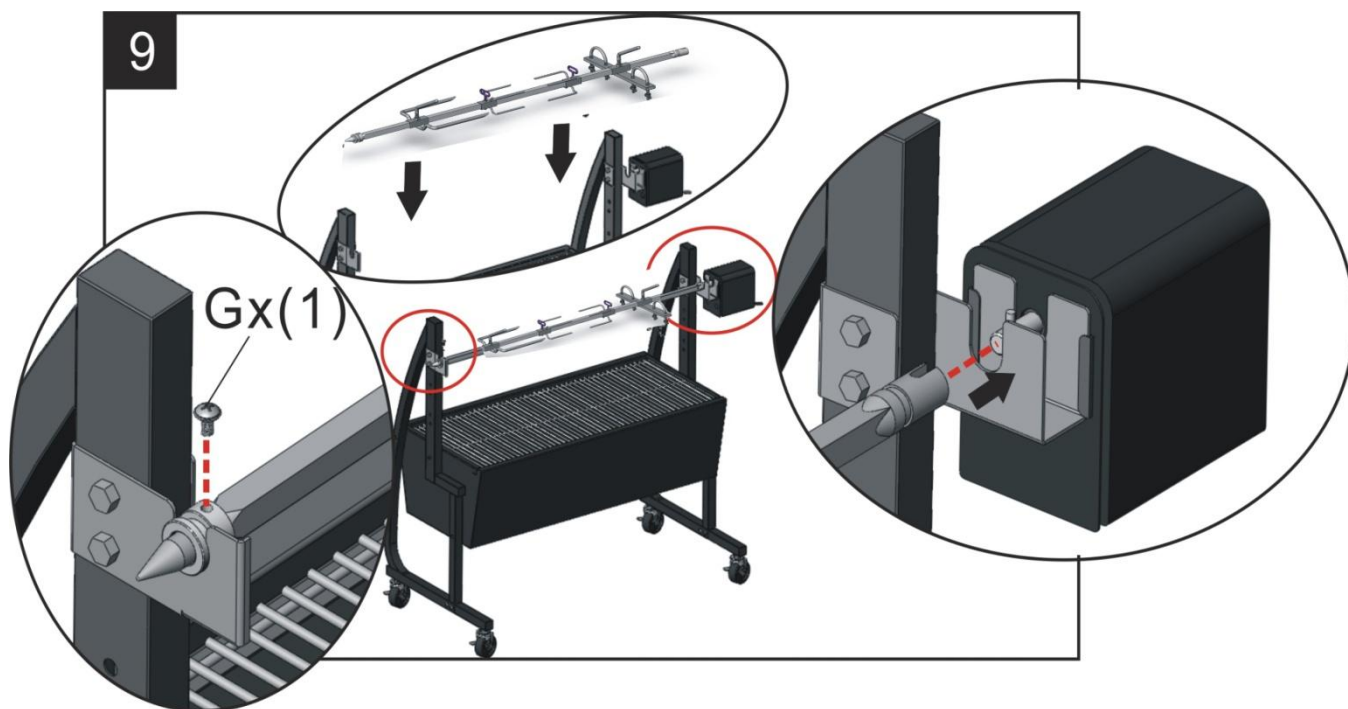

Your spit roaster is now ready for use.
Please take care when lighting your spit roaster.
Keep children away from the spit roaster at all time.



WARRANTY

Thank you for purchasing one of our quality
Jumbuck Spit Roaster.

**YOUR JUMBUCK SPIT ROASTER IS COVERED
AGAINST DEFECTS FOR A PERIOD OF 12 MONTHS
FOR PARTS AND LABOUR, REPAIR OR
REPLACEMENT**

**THIS WARRANTY EXCLUDES SURFACE RUST AND
DAMAGE CAUSE BY ABUSE OR NEGLIGENCE**

CONDITIONS OF THE WARRANTY

- The appliance must be operated and maintained in accordance with the instructions supplied in the operating manual.
- Any repair does not extend the warranty period.
- Any parts other than original Jumbuck parts will void this warranty.

FOR WARRANTY CLAIMS

The warranty for Australia is given by :

Genesis Australia Corporation Pty Ltd
2/26 Industry St
Malaga
Western Australia 6090

AUSTRALIA

(08) 9248 9822

service@genesiscorp.com.au

Proof of purchase must be presented.

The warranty for New Zealand is given by :

Bunnings NZ Limited
PO Box 14436,
Panmure, Auckland, 1471

NEW ZEALAND

(09) 978 2200

marketing@bunnings.co.nz

Proof of purchase must be presented.

Any claims under this warranty must be made within 12 months of the date of purchase of the product.



WARRANTY

For Australian Customers

Any claim under this warranty must be made within 12 months of the date of purchase of the product. To make a claim under the warranty, please contact Genesis Australia at service@genesiscorp.com.au or return the product (with proof of purchase) to any Bunnings store. Visit www.bunnings.com.au for store locations.

Genesis Australia bears reasonable, direct expenses of claiming under the warranty. You may submit details and proof to us for consideration.

The warranty covers manufacturer defects in materials, workmanship and finish under normal use.

This warranty is provided in addition to other rights and remedies you may have under law: our goods come with guarantees which cannot be excluded under the Australian Consumer Law. You are entitled to replacement or refund for a major failure and to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The warranty excludes damage resulting from product misuse or product neglect. The warranty covers domestic use only and does not apply to commercial applications.

For New Zealand Customer

Any claim under this warranty must be made within 12 months of the date of purchase of the product. To make a claim under the warranty, take the product (with proof of purchase) to any Bunnings store. Visit www.bunnings.co.nz for store locations.

Bunnings NZ Ltd bears reasonable, direct, expenses of claiming under the warranty. You may submit details and proof to our store for consideration.

The warranty covers manufacturer defects in materials, workmanship and finish under normal use.

This warranty is provided in addition to other rights and remedies you may have under law: our goods come with guarantees which cannot be excluded under the Consumer Guarantees Act 1993 (NZ). You are entitled to replacement or refund for a major failure and to compensation for other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Goods presented for repair may be replaced by refurbished goods of the same type rather than being repaired. Refurbished parts may be used to repair the goods.

The warranty excludes damage resulting from product misuse or product neglect. The warranty covers domestic use only and does not apply to commercial applications.



WARRANTY

WHAT IS NOT COVERED IN THE WARRANTY

- Removal or re-installation costs. This warranty does not cover costs for transit, nor in home service
- Liability will only be accepted for loss or damage during transit if at the time the product was being transported by Bunnings or a Bunnings approved contractor.
- Lack of maintenance, abuse, neglect, misuse, accidental or improper installation of this appliances
- Scratches, dents, corrosion or discoloration caused by heat, abrasive chemicals cleaners
- Corrosions or damage caused by exposure to elements such as insects, weather, hail or grease and fat fires
- Rusting of cooking grill
- Cleaning and wear and tear, service calls of this nature are chargeable
- Commercial use of this product
- Unauthorized repairs or modification during warranty period

RECORD THE FOLLOWING INFORMATION

Attached the copy of the purchase receipt here

Date of Purchase.....

Purchased From.....

Location.....

Model Name and Number.....

Serial Number.....

Receipt Number.....

Note: The serial number is located either on the outside of the packing carton or inside on the appliance

FOR TECHNICAL ASSISTANCE

For Australia customers if you experience any technical issues with your JUMBUCK SPIT ROASTER, in the first instance review the instructions manual or contact the warranty service agent

For New Zealand customers if you experience any technical issues with your JUMBUCK SPIT ROASTER, in the first instance review the instructions manual or contact your local Bunnings warehouse

FOR SPARE PARTS

Call your local Bunnings warehouse and ask them to order a part for you. You should provide the following information:

Model of SPIT ROASTER
.....

Year of Purchase
.....

Name of warranty service company
.....

Part that requires replacement (refer to the parts list in the instructions manual)
.....

