


The INX logo is located in the bottom right corner of the page. It features the letters 'INX' in a bold, stylized, italicized font. The letters are white with a thick black outline, giving it a three-dimensional appearance.

**12 MONTHS HOME USE  
REPLACEMENT WARRANTY**

**ALWAYS WEAR EYE, FACE  
AND EAR PROTECTION**

## Warning

**Do not use the tool with abrasive or masonry/wet diamond wheels.  
Only use blade diameter(s) in accordance with the markings on the tool.**

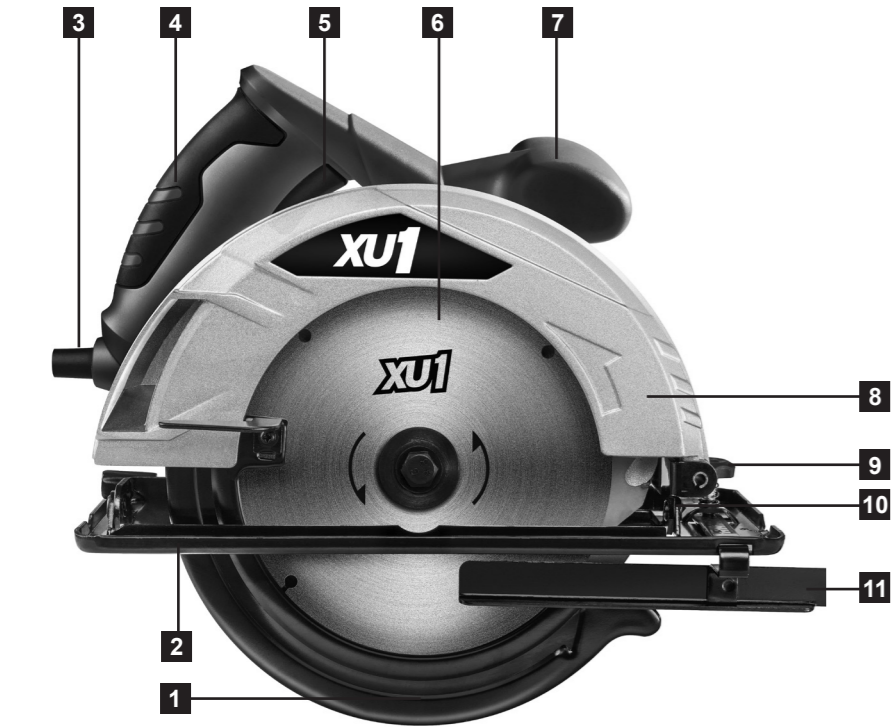

1. Lower Blade Guard

2. Pressed Metal Base Plate

3. Power Cord

4. Rear Handle


5. On/Off Switch
6. 24 Tooth TCT (Tungsten Carbide Tipped) Metal Cutting Blade

7. Front Handle





8. Aluminium Upper Guard

9. Rip Fence Lock Knob

10. Bevel Adjustment Knob

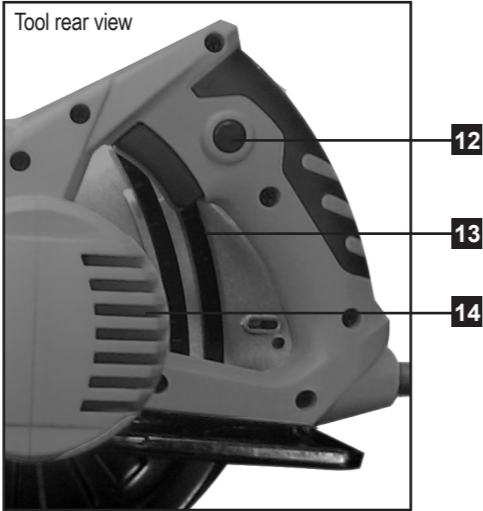

11. Guide Fence
12. Lock-Off Button
13. Depth Adjustment Scale
14. Spindle Lock Button

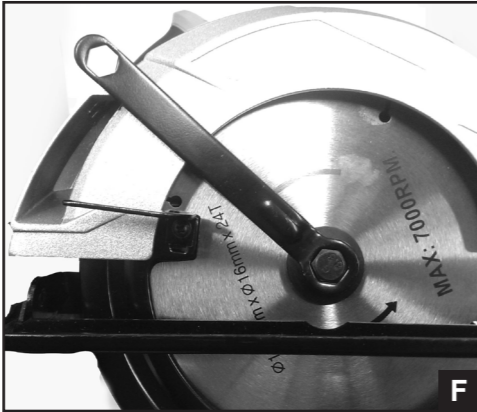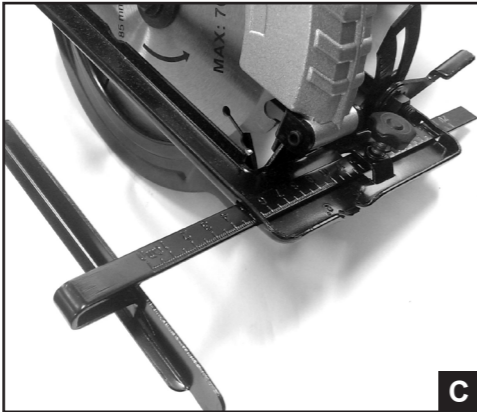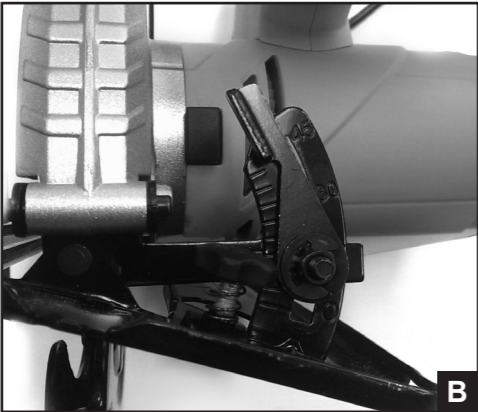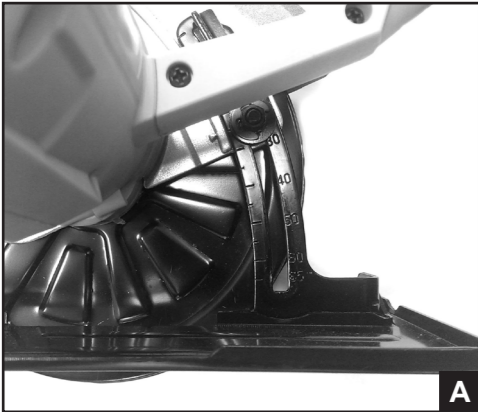

## SPECIFICATIONS

Motor:	1250W
No Load Speed:	5500 /min
Blade Diameter:	185mm (7 <sup>1/4</sup> "
Bevel Adjustment:	0° - 45°
Depth of Cut:	63mm @ 90°
	42mm @ 45°
Weight:	3.75kg

## USING YOUR CIRCULAR SAW

**WARNING!** Be sure to disconnect the circular saw from the power supply before fitting or removing blades or accessories.

This tool is intended for use in a DIY (Do It Yourself) context or for hobbyist purposes. It is not built for continuous daily use in a trade or professional capacity.

Before using the machine, carefully read these instructions, especially the safety rules to help ensure that your machine always operates properly.

Before attempting to operate the machine, familiarise yourself with the controls and make sure you know how to stop the machine quickly in an emergency.

Save these instructions and the other documents supplied with this machine for future reference.

**WARNING!** Ensure the tool is disconnected from the power supply before performing any of the following operations.

### Depth Adjustment

The depth should be adjusted so that no more than one tooth is protruding through the timber. This helps to minimise splintering.

- Loosen the depth adjustment knob.
- Hold the baseplate down with one hand. Raise or lower the saw to the desired depth using the depth scale as a guide. **FIG. A**
- Tighten the depth adjustment knob to secure in position.

### Bevel Adjustment

- Loosen the bevel adjustment knob.
- Hold the baseplate down with one hand. Tilt the saw to the desired bevel angle using the bevel scale as a guide. **FIG. B**
- Tighten the bevel adjustment knob to secure in position.

## OPERATION

### Rip Fence

The rip fence allows for fast easy rip cuts by guiding the saw along an edge at a specified distance.

- Loosen the rip fence locking knob to allow the rip fence to slide into the recess.
- Slide the rip fence into the recess in the base plate and under the locking knob. **FIG. C**
- Set the desired width by aligning the scale with the cutting guide notch.
- Tighten the rip fence locking knob to secure in place.

**WARNING!** The power supply for this product should be protected by a residual current device (rated at 30mA or less).

### On/Off Switch

- To turn the saw on, first depress the lock-off button and then squeeze the on/off switch. **FIG. D**

Note: Allow the blade to reach full speed before cutting.

- To turn the saw off, release the on/off switch.

**WARNING!** After use, hold the saw away from your body until the blade stops completely. This may help to prevent serious injury.

### Blade Fitment

The tool is recommended for wood cutting only it must not be used with abrasive wheels or masonry/diamond cutting wheels. Only use 185mm wood cutting blades.

- Press and hold the spindle lock button. **FIG. E**
- Use the provided spanner to rotate the blade until lock engages. **FIG. F**
- Loosen and remove the blade bolt and outer blade flange by rotating in an anti-clockwise direction.
- Remove and replace the blade.

Note: Ensure arrows on the blade point in the same direction as the arrow on the upper blade guard.

- Fit the outer blade flange and blade bolt.

- Press and hold the spindle lock while tightening the blade bolt in a clockwise direction using the provided spanner.

## MAINTENANCE

Keep the ventilation slots of the saw clean at all times. If possible prevent foreign matter from entering the vents.

After each use, blow air through the saw housing to ensure it is free from all dust particles that may build up.

**CAUTION: Excessive build-up of dust particles may cause the saw to overheat and fail.**

If the enclosure of the tool requires cleaning, use a soft, moist cloth only. Do not use solvents.

**CAUTION: Never immerse any part of the circular saw in liquid.**

Carbon brushes will wear out after many uses, causing the saw to spark and/or stop. The brushes are a wearing component of the saw and should be replaced prior to the carbon wearing out completely. Take the saw to a suitably qualified electrician or power tool repairer for replacement. Always replace both brushes at the same time.

**Note:** XU1 will not be responsible for any damage or injuries caused by the repair of the tool by an unauthorised person or by mishandling of the tool.

## WARRANTY

YOUR WARRANTY FORM SHOULD BE RETAINED BY YOU AT ALL TIMES. IN ORDER TO MAKE A CLAIM UNDER THIS WARRANTY YOU MUST RETURN THE PRODUCT TO YOUR NEAREST BUNNINGS WAREHOUSE WITH YOUR BUNNINGS REGISTER RECEIPT. PRIOR TO RETURNING YOUR PRODUCT FOR WARRANTY. PLEASE TELEPHONE OUR CUSTOMER SERVICE HELPLINE:

Australia 1800 069 486

New Zealand 0508 069 486

TO ENSURE A SPEEDY RESPONSE PLEASE HAVE THE MODEL NUMBER AND DATE OF PURCHASE AVAILABLE. A CUSTOMER SERVICE REPRESENTATIVE WILL TAKE YOUR CALL AND ANSWER ANY QUESTIONS YOU MAY HAVE RELATING TO THE WARRANTY POLICY OR PROCEDURE.

The benefits provided under this warranty are in addition to other rights and remedies which are available to you at law.

Our goods come with guarantees that cannot be excluded at law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Generally you will be responsible for all costs associated with a claim under this warranty, however, where you have suffered any additional direct loss as a result of a defective product you may be able to claim such expenses by contacting our customer service helpline above.

### 1 YEAR REPLACEMENT WARRANTY

Your product is guaranteed for a period of 12 months from the original date of purchase and is intended for DIY (Do It Yourself) use only. If a product is defective it will be replaced in accordance with the terms of this warranty. Warranty excludes consumable parts, for example: cutting blades.

### WARNING

The following actions will result in the warranty being void.

- Professional, Industrial or high frequency use.
- If the tool has been operated on a supply voltage other than that specified on the tool.
- If the tool shows signs of damage or defects caused by or resulting from abuse, accidents or alterations.
- Failure to perform maintenance as set out within the instruction manual.
- If the tool is disassembled or tampered with in any way.

### XU1

Australia/New Zealand (Head Office)

1-23 Letcon Drive, Bangholme, Victoria, Australia 3175