











Homelite® Petrol Blower Quick Start Guide





HBL26BVB

⚠ WARNING: This Quick Start Guide is not a substitute for reading the operator's manual. To reduce the risk of injury, the user must read and understand the operator's manual before using the product.


TO START A COLD ENGINE:

- 1  Set the switches to the "I" (ON) position.
- 2  Press the slider plates to the positive (I) switch slots and tighten the screw.
- 3  Set the choke lever to "FULL" position.
- 4  Press the primer bulb 10 times.
- 5  Squeeze the throttle trigger and pull the starter grip until the engine attempts to start (8x maximum).
- 6  Set the choke lever to "HALF" position.
- 7  Squeeze the throttle trigger and pull the starter grip until the engine starts (6x maximum).
- 8  When engine starts, wait for 10 seconds.
- 9  Set the choke lever to "RUN" position.
- 10  To stop the engine, toggle either the blower or vacuum switch to the "STOP" position.

TO START A WARM ENGINE:

- 1  Set the switches to the "I" (ON) position.
- 2  Press the primer bulb 10 times.
- 3  Set the choke lever to "RUN" position.
- 4  Squeeze the throttle trigger and pull the starter grip until the engine starts (6x maximum).

TO STOP THE PRODUCT:

- i  To stop the engine, toggle either the blower or vacuum switch to the "STOP" position.

