





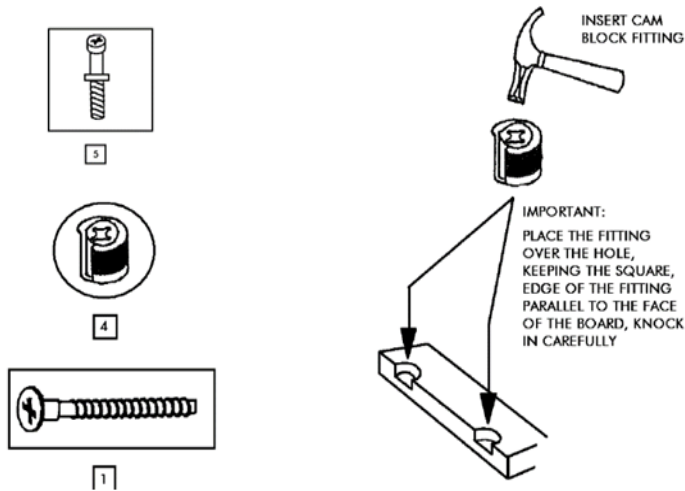


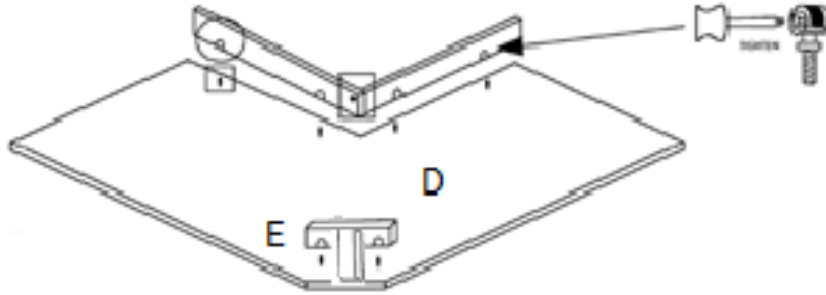


ASSEMBLY INSTRUCTION FOR EXC-HALF



 HARDWARE LIST

NO	MODEL	DESCRIPTIONS	QTY
1		CONFIMAT SCREWS	16
2		CAPS	12
3		SHELF SUPPORT PINS	10
4		WHITE CAM BLOCKS	6

NO	MODEL	DESCRIPTIONS	QTY
5		CAM BLOCK PIN	6
6		"L" BRACKET	2
7		25mm PANHEAD	2
8		5/8 PANHEAD SCREW	2



 
WARNING:

Serious injury or death can be caused by toppling furniture

Help prevent tip-over:

- Anchor this product to a wall or other suitable surface
- Check anchors regularly


- Avoid placing TVs on top unless the TV is also anchored
- Use drawer locks to prevent children climbing



TOP of UNIT

When attaching unit to wall put safety bracket in middle of unit with 16mm pan head screw then 25mm pan head screw into wall. For plasterboard without a stud it is recommended to use a plug with screw (not provided).

ASSEMBLY INSTRUCTION FOR EXC-HALF

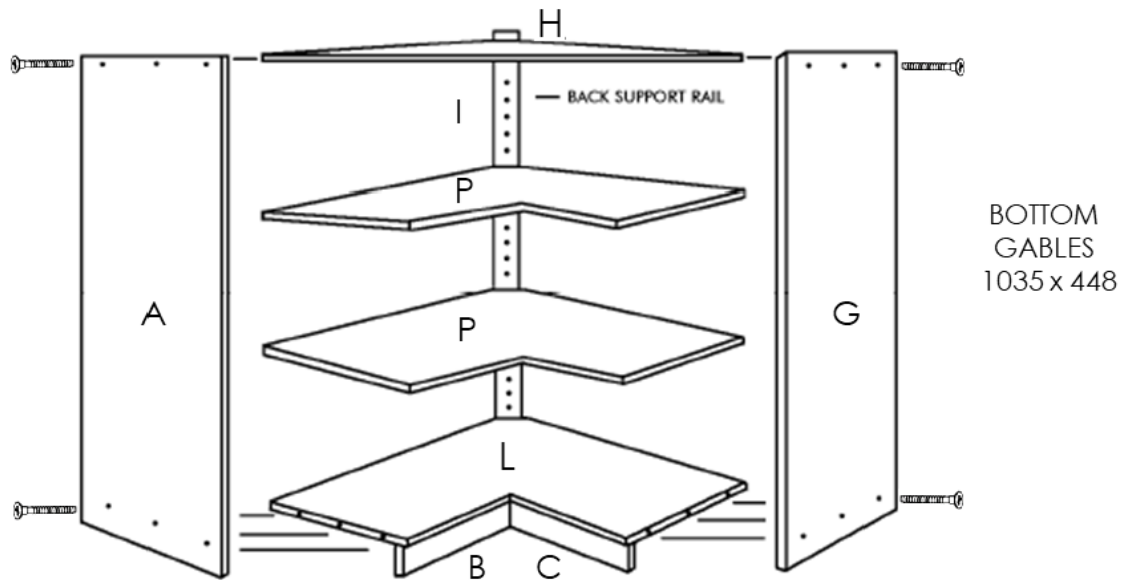

1. GRAB YOUR BOTTOM FIXED SHELF AND FIX YOUR KICKS TO UNDERNEATH OF THE SHELF WITH CAM AND PINS PROVIDED.
2. NOW PUT BOTH ADJUSTABLE SHELVES ON TOP OF THE BOTTOM BEFORE FIXING GABLES AND FIXED SHELF, THIS MAKES IT EASIER FOR YOU LATER.
3. ADD YOUR BACK SUPPORT TO THE BOTTOM FIXED SHELF AND THEN SCREW YOUR GABLES ON BY USING THE SCREWS PROVIDED AND THEN YOU CAN PUT THE TOP FIXED SHELF ON..
4. ONCE YOUR CARCASS IS STURDY LIFT YOUR FIRST SHELF UP TO THE DESIRED HEIGHT AND ADD YOUR PINS IN THE HOLES PROVIDE ON THE BACKING STRIP AND GABLES.
5. LIFT UP THE SECOND SHELF AND DO THE SAME.

