


# WAXSTIX®

## Wax Touch Up Crayons

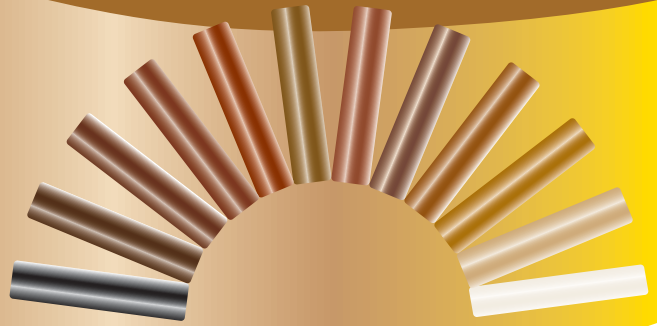

### Touch It Up With A WAXSTIX®

#### Won't shrink or sink!

**WAXSTIX** are so easy to use and so handy for quick repairs to scratched or damaged timber.

For most scratches, simply rub the stick over the damaged area. For larger, deeper indentations where Timbermate Water-based Woodfiller cannot be used, heat a knife blade with a flame and fill damaged area with hot wax. Remove excess wax by rubbing with the smooth side of sandpaper or a piece of cardboard.

- ◆ **There is no beeswax in WAXSTIX® which means they will readily accept coatings.**



#### SPECIFICATIONS

Product Code	Description	Barcode
WB1	Baltic Pine	9315284510000
WC1	Cedar	9315284510017
WE1	Ebony	9315284510123
WM1	Mahogany	9315284510024
WMA1	Maple	9315284510031
WJ1	Jarrah	9315284510109
WN1	Natural	9315284510130
WP1	Pine	9315284510048
WR1	Rosewood	9315284510055
WO1	Tas Oak	9315284510062
WT1	Teak	9315284510079
WW1	Walnut	9315284510086
WWH1	White	9315284510093

#### Fix Imperfections Instantly!



NAIL HOLES



JOINTS



SCRATCHES



**COLOURS TO  
SUIT ALMOST  
ANY TIMBER**

Also available in natural

Distributed by Timbermate Products Pty Ltd

Phone **(03) 9873 4811** or call  
Toll Free **1800 354 811** (Except Mobiles)