

MINI Soldering Torch Kit 10 in 1

PART NO. 211189

B

TO IGNITE:

1. Face the Exhaust Vent upwards.
2. Push Ignition Lock Switch while sliding finger down on the Ignition Switch.
3. Adjust flame level with the Flame Adjustment Lever.
 - a. + to increase
 - b. – to decrease

TO EXTINGUISH:

1. Let go of the Ignition Switch if continuous flame switch is in Off position.
2. If Continuous Flame Switch is set to On, slide to Off position to turn off.

HOT BLOWER:

1. Unscrew the Soldering Tip (counter clockwise) from the Soldering Base.

BLOW TORCH:

1. Unscrew (counter clockwise) the Lock Collar and remove the Blow Torch and Lock Collar assembly.
2. Remove the Soldering Base, then install the Blow Torch and refit the Lock Collar.
3. Tighten securely, do not overtighten.

THIS PRODUCT IS SUPPLIED WITHOUT GAS. IT REQUIRES FILLING BEFORE USE.

FILLING/REFILLING GAS:

1. Ensure the Gas On/Off Adjustment Slide is OFF and torch has cooled down.
2. Hold the torch in an upside down position.
3. Insert the butane canister refill nozzle into the Refilling Valve and push down.
4. Stop refilling when the gas starts to overflow.

For use with TradeFlame Butane Gas Refill 60 g - Part No. 2312 or 200g - Part No. 2323

WARNING

To avoid injury or damage only ignite the torch when clear of face, hand, clothing or combustible materials. The burner/tip becomes extremely hot during and after operation, care must be taken to avoid accidental burns. Ensure flame is completely out after use. Do not expose to temperature above 50°C / 120F. Contains flammable gas under pressure, do not disassemble, puncture, drop or incinerate after use

