


ASSEMBLY INSTRUCTION FOR MAXI-ULTRA 715

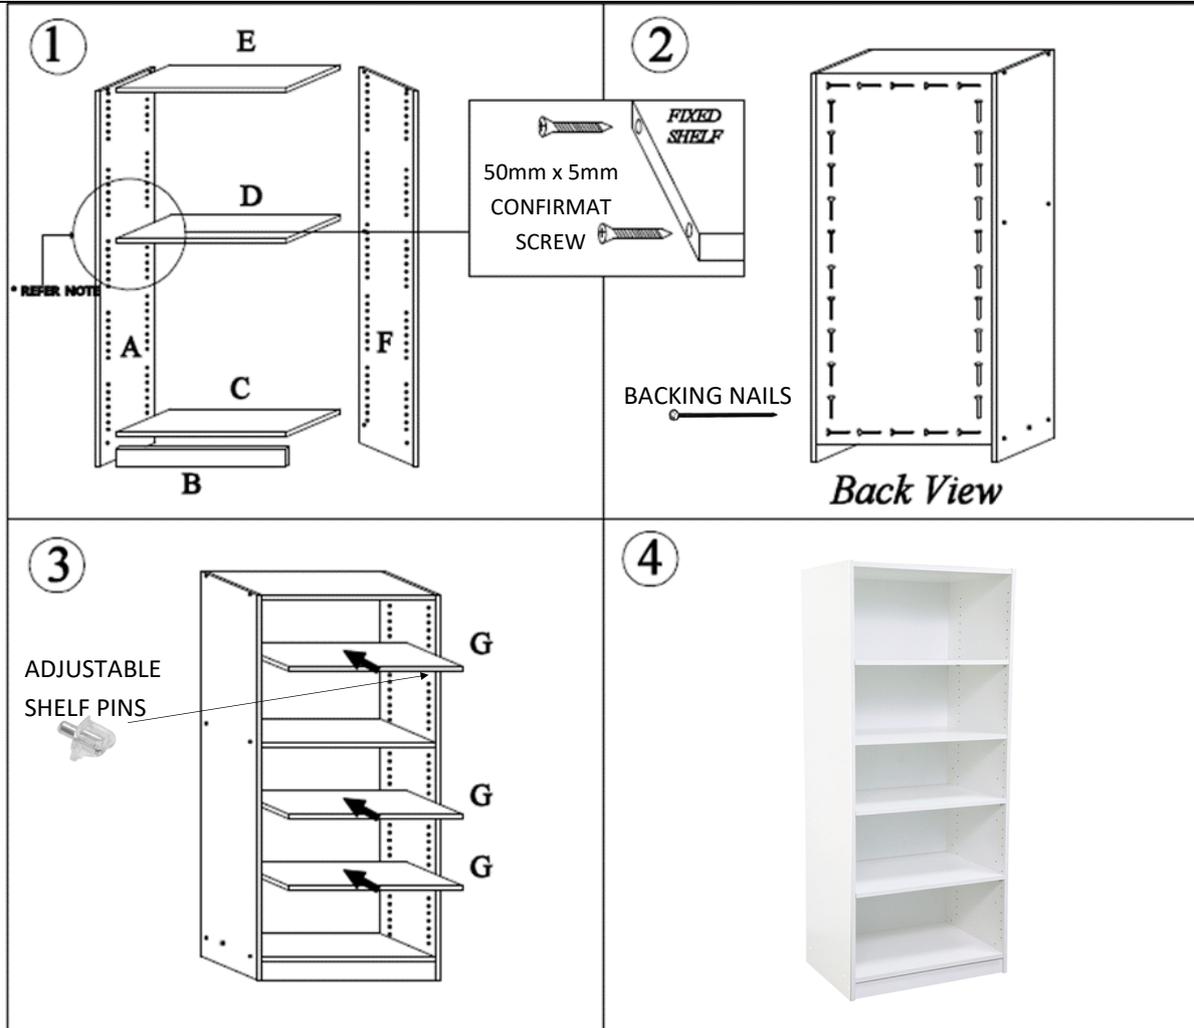


PARTS IDENTIFICATION LIST

WARNING: Serious injury or death can be caused by toppling furniture

Help prevent tip-over:

- Anchor this product to a wall or other suitable surface
- Check anchors regularly
- Avoid placing TVs on top unless the TV is also anchored
- Use drawer locks to prevent children climbing

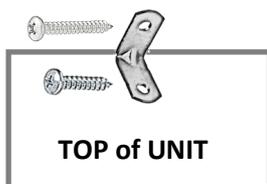

NO	MODEL	DESCRIPTION	QTY
1		50 x 5mm CONFIRMAT SCREW	14
2		CAPS	14
3		SUPPORT PINS	12
4		BACKING NAILS	60
5		16mm PAN HEAD SCREWS	1
6		25mm PAN HEAD SCREWS	1
7		"L" SAFETY BRACKET	1

When attaching unit to wall put safety bracket in middle of unit with 16mm pan head screw then 25mm pan head screw into wall. For plasterboard without a stud it is recommended to use a plug with screw (not provided).