

SHS-P718

USER MANUAL

Samsung SMART Doorlock

Convenient Opening
Easy push/pull handle access

Welcome Function
When a user gets close to the door lock, the authorization standby mode will automatically activate.

Silent-Mode Function
When going in or out, the sound of the key entering and door opening will be suspended.


Automatic Card Reading Function
When a card touches the reader, the reader will conveniently recognize the card.

Double Authorization
Requires fingerprint & password combination to open

Security Assurance Function
When someone is inside the house, authorization for entry from the outside will be prohibited.

Built-in Fire Detection
Generates alarm in case of a fire

Security Function
Prevents intrusion from the outside

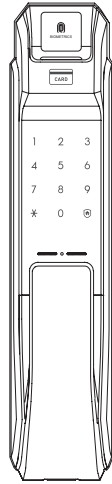

www.sds.samsung.com


Master Password Change

The password can be 4~12 digits number. Only one password can be registered.

- Pressing the [Register] Button (from the inside)
- Entering the Current Master Password (from the outside)




Press the [Register] button briefly.

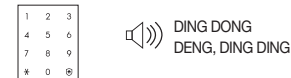

Enter the current master password when the number pad is lighted, and press the [*] button.

- Entering a New Master Password (from the outside)

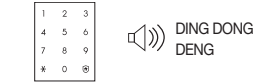

Enter the new master password (4 to 12 digits) and press the [*] button.

Warning

- Manage your password with care so that unauthorized people will not have access to it. Regularly changing your password can reduce the risk of it being leaked.


Master Card and Key Tag Registration

Only one Master Card/Key Tag can be registered and it has the same authority as that of Master Password.

- Pressing the [Register] Button (from the inside)
- Entering the Current Master Password (from the outside)



Press the [Register] button briefly.

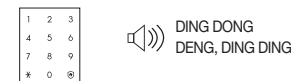

Enter the master password when the number pad is lighted, and press the [*] button.

- Enter Master Function Code



Enter '98' when the number pad is lighted, and press the [*] button.

- Placing the Master Card or Key Tag on the Card Reader (from the outside)



Place the card or key tag to be registered on the card reader of the outer body. You will know the card or key tag has been registered when "DING DONG DENG" sounds.


Deleting Master Cards

You can delete master cards.

- Pressing the [Register] Button (from the inside)
- Entering the Current Master Password or Card (from the outside)



Press the [Registration] button for 3 seconds.

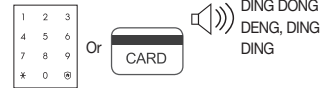

Enter the current master password when the number pad is lighted, and press the [*] button or contact a registered card.

- Enter Master Function Code



If you want to delete all cards data, press [98] + [*].

 
User Master Password Registration

The password can be 4~12 digits number. Only one password can be registered.

- Pressing the [Register] Button (from the inside)
- Entering the Current Master Password or Card (from the outside)



Press the [Register] button briefly.



Enter the current master password when the number pad is lighted, and press the [*] button or contact a registered card.

- Enter Master Function Code



Enter '99' when the number pad is lighted, and press the [*] button.

- Entering a New User Master Password (from the outside)



Enter the new password (4 to 12 digits) and press the [*] button.

User Master Password Change

The password can be 4~12 digits number. Only one password can be registered.

- Pressing the [Register] Button (from the inside)
- Entering the Current Master Password or Card (from the outside)



Press the [Register] button briefly.



Enter the current master password when the number pad is lighted, and press the [*] button or contact a registered card.

- Entering a New User Master Password (from the outside)



Enter the new password (4 to 12 digits) and press the [*] button.


Deleting User Master Password

You can delete individual or all registered password.

- Pressing the [Register] Button (from the inside)
- Entering the Current Master Password or Card (from the outside)




Press the [Registration] button for 3 seconds.

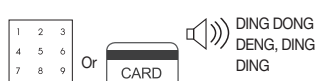

Enter the current master password when the number pad is lighted, and press the [*] button or contact a registered card.

- Enter Master Function Code

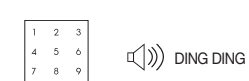

Enter '98' when the number pad is lighted, and press the [*] button.

User Fingerprint Registration

You can register and use up to 100 fingerprints.

- Pressing the [Register] Button (from the inside)
- Entering the Current User Master Password (from the outside)

 


Open the battery cover of the inner body and briefly press the [Register] button.



Enter the current user master password when the number pad is lighted, and press the [*] button.


- Reading the Fingerprint to Be Registered
- Exiting Fingerprint Registration Mode



When LED light on the Fingerprint Reading Panel is on, touch the panel with the fingerprint to be registered. When a "ding" sound is heard and LED light goes off, then remove the finger. (Must do it 3 times)



To end the registration, please press the [Registration] button on the inner body.

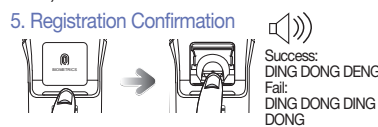

Press the [Open Fingerprint Cover] button on the outer body to open the lid of the Fingerprint Reading Panel and touch the panel with the registered fingerprint.

Deleting Registered User Fingerprints

You can delete individual or all registered fingerprints.

- Pressing the [Register] Button (from the inside)
- Entering the Current User Master Password (from the outside)



Press the [Registration] button for 3 seconds.



Enter the current user master password when the number pad is lighted, and press the [*] button.

- Reading the Fingerprint to Be Deleted



When LED light on the Fingerprint Reading Panel is on, touch the panel with the fingerprint to be deleted.

- Exiting Fingerprint Deletion Mode



To end the deletion mode, press [Registration] button.

User Card Registration

You can register and use up to 20 cards.

- Pressing the [Register] Button (from the inside)
- Entering the Current User Master Password (from the outside)



Open the battery cover of the inner body and briefly press the [Register] button.



Enter the current user master password when the number pad is lighted, and press the [*] button.

- Placing the Card or Key Tag on the Card Reader (from the outside)



Place the card or key tag to be registered on the card reader of the outer body. You will know the card or key tag has been registered when "DING DONG DENG" sounds.

- Confirming Card or Key Tag Registration (from the outside)



Place the registered card or key tag to the card reader on the outer body.

Warning

- To register multiple cards or key tags, lightly place another card or key tag to the card reader within 20 seconds after registering the previous card or key tag.
- ID number is given automatically in order of the registration.

Deleting Registered User Cards

You can delete individual or all registered user cards.

- Pressing the [Register] Button (from the inside)
- Entering the Current User Master Password (from the outside)



Press the [Registration] button for 3 seconds.



Enter the current user master password when the number pad is lighted, and press the [*] button.

- Enter Function Code



If you want to delete all cards data, press [98] + [*].