


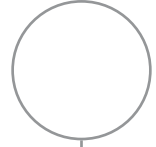

# DESCALING PIN

## IMPORTANT PRODUCT MAINTENANCE



Should you notice a significant decrease in steam output, please use the unblocking pin provided to remove any mineral deposits built up inside the steam outlet nozzle.

**ATTENTION!** Switch off and unplug the appliance from the mains power before performing any maintenance.

**ATTENTION!** Wait until the appliance has cooled down completely before proceeding.

**STEP 1:** Remove the mop head from the main appliance body (Fig.1 & 2).



Fig. 1



Fig. 2

**STEP 2:** Insert the pin provided into the steam outlet hole as shown in (Fig. 3). Slide the pin back & forth at least 10 times to clear any mineral deposits and then turn so nozzle is pointing downwards to allow any loosened deposits to fall out.

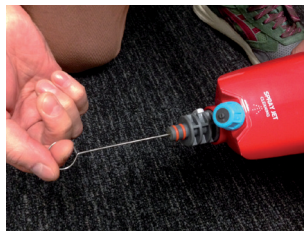


Fig. 3

**STEP 3:** Re-assemble the mop head by pushing the body of steam mop onto the floor head.

**STEP 4:** Plug the appliance to the mains power to test the steam output.

**STEP 5:** Repeat steps 1 to 4 again if the steam output is still low.