

ASSEMBLY INSTRUCTION FOR EXB-4J




2 x GABLES



2 x FIXED SHELF



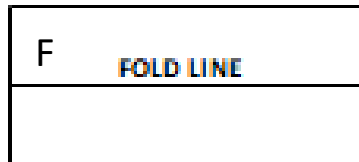


1 x BACKING BOARD






1 x BOTTOM KICK




PARTS IDENTIFICATION LIST


NO	MODEL	DESCRIPTION	QTY
1		CONFIRMAT SCREWS 50mm x 5mm	14
2		CAPS	14
3		BACKING NAILS	45

NO	MODEL	DESCRIPTION	QTY
4		16mm PANHEAD UNITSCREWS	1
5		25mm PAN HEAD SCREWS	1
6		"L" SAFETY BRACKET	1




1

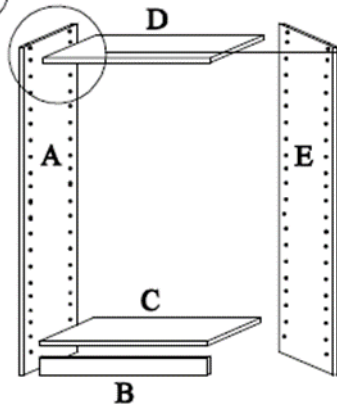

USE
50mm X 5mm
screws

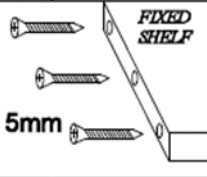

2

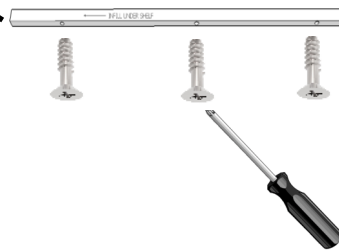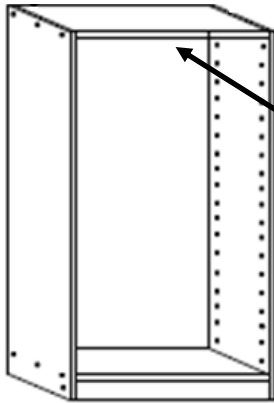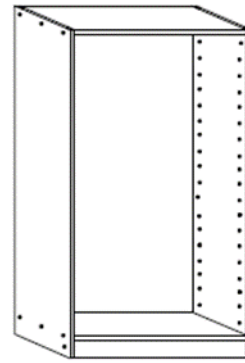

NEXT

YOU WILL NEED TO RETRIEVE THE INFILL FROM PART 2, USING 3 X 60mm SCREWS PROVIDED, ATTACH THE INFILL TO THE UNDER-SIDE OF THE FIXED SHELF.

3


Fixing of the Backing Panel F

1. Place unit face down on the floor.

IMPORTANT

2. To ensure that the side gables **A** & **E** remain straight, start by placing the back panel **F** flush with the bottom of fixed shelf **C** keeping in the centre of side gables **A** & **E** nail (tack) at each side.

Then keeping the back **PARALLEL** to the side gables nail (tack) the middle of each side, then the top, check measure the top middle and bottom are the same measurement, adjust if necessary! If ok, continue by placing nails approx 100mm apart.

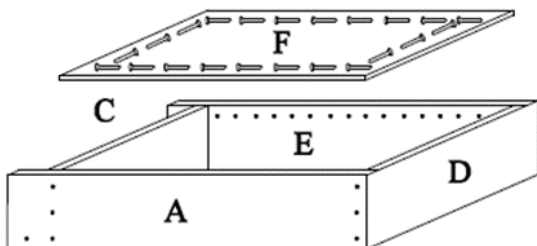


4



Bottom Section Complete

When attaching unit to wall put safety bracket in middle of unit with 16mm pan head screw then 25mm pan head screw into wall. For plasterboard without a stud it is recommended to use a plug with screw (not provided).

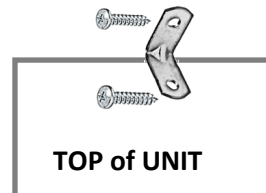

TOP of UNIT



WARNING:

Serious injury or death can be caused by toppling furniture

Help prevent tip-over:

- Anchor this product to a wall or other suitable surface
- Check anchors regularly
- Avoid placing TVs on top unless the TV is also anchored
- Use drawer locks to prevent children climbing