

# jumbuck®



## 118L Bar Fridge

Double Glazed Glass Door

- Compressor refrigerator
- Adjustable shelves
- Interior light
- Adjustable thermostat for temperature control
- Magnetic door seal
- Height adjustable feet
- Powder coated black finish
- Size: 503mm W x 520mm D x 900mm H



Important: Retain these instructions for future use.

03561 03/17

## Product Description

Inspect contents of the box to ensure all parts are included and undamaged.

1. Double glazed glass door.
2. Adjustable thermostat control inside fridge.
3. Adjustable shelves.
4. Light is located at the top front of fridge cabinet.
5. Light switch.
6. Door lock.



**jumbuck®**

## Installation & Operation

### Electrical Installation

The electrical system of this refrigerator must be connected with an automatic 30mA circuit breaker and/or residual current device (RCD). If uncertain have a qualified electrician check your electrical system before installation and/or use.

### Safety

Before attempting to operate this refrigerator, the following basic safety precautions should be taken to reduce the risk of fire, electric shock and personal injury. It is important to read the instruction manual and to understand it's applications, limitations and potential hazards associated with this refrigerator. This refrigerator is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. This refrigerator is not designed for use within 1m or above a water source. It is important that you read, understand and follow these instructions very carefully. They are designed for the safety of yourself and others ensuring a long and trouble free service life from your refrigerator. This electric refrigerator complies with Australian and International standards and safety requirements. Repairs should only be carried out by qualified persons using original spare parts. Failure to do so may result in considerable danger to the operator.

### SAFE OPERATION

#### Beware of Children and Pets

Children should not be allowed to touch or operate refrigerators or touch extension cords, if used. All refrigerators should be kept out of reach of children, preferably stored or locked in a secure room when not in use.

#### Do Not Abuse the Power Cord

Never yank or pull on the power cord to disconnect it from the mains supply socket. Never carry or move your refrigerator by it's power cord. Keep the power cord away from heat, oil, solvents and sharp edges. Check the power cord regularly for any damage and if the power cord becomes damaged have it replaced by an authorised service facility.

#### Extension Cords and Reels

This refrigerator is NOT designed to run off an extension cord. If you require an additional power point please have one installed by a qualified electrician.

The use of extension cords may cause power voltage loss which will result in damage to the compressor this will NOT be covered under warranty.



### FOR YOUR SAFETY

NOTE: If using the refrigerator outside in an alfresco area ensure that it is directly connected to an outdoors power point.

Ensure this fridge is not left in the weather or in direct sunlight.

The electrical system of this refrigerator must be connected with an automatic 30mA circuit breaker and/or residual current device (RCD). If uncertain have a qualified electrician check your electrical system before installation and/or use.

All electrical connections are to be made in a dry area.

Outdoor power points must be weatherproof and installed by a qualified electrician.

Sitro Group Australia Pty Ltd is not responsible for incorrectly located refrigerators.

**jumbuck®**

## Specific Safety Instructions



### WARNING

Do not use the refrigerator in areas where there is a risk of explosion or fire from flammable gases. Ensure that the area is kept clear of combustible materials. Do not use the refrigerator in damp areas, without suitable ventilation. This refrigerator is not designed for use within 1m or above a water source. Do not place within one metre (1m) of any water source.

Fire risk exists if this refrigerator is covered by or positioned close to curtains or other combustible materials.

- This refrigerator is intended for domestic/ household use only.
- DO NOT use this refrigerator in either the bathroom or ensuite.
- DO NOT use a 3rd party timer, or programmable system with this refrigerator.
- DO NOT clean the refrigerator while the refrigerator is on or plugged into the mains power supply.
- DO NOT attempt to modify the refrigerator, power cord, power plug or the supplied accessories in any way.
- DO NOT expose the refrigerator to rain, water, or use in damp wet conditions.
- DO NOT expose the refrigerator to direct sunlight.
- If left in direct sunlight the fridge may not operate as designed.
- NEVER use with the power cord coiled, bundled up or tied up. Always extend fully before use.
- NEVER use the refrigerator if any part of it is damaged.
- Ensure that the refrigerator is disconnected from the mains supply when installing, cleaning or removing/installing.
- Always turn the refrigerator OFF at the unit switch and the power point switch when not in use for extended periods of time.
- Always ensure that the power cord is fully extended.
- Always ensure that the refrigerator is kept clean and free from dust.
- Never use refrigerator with cracked/broken glass - replace glass before use.
- Only use this refrigerator on flat and level ground.
- Before you throw away your old refrigerator, take off the door, leave the shelves in place, so that children may not easily climb inside.
- Never allow children to operate, play with or crawl inside the appliance.
- This refrigerator is not designed for perishable foods. It is a drinks refrigerator.
- Adults and children should never sit or stand on the fridge as injury may occur.

**jumbuck®**



## WARNING

- When you dispose of your old refrigerators and freezers, remove any doors. Children can suffocate if they get trapped inside.
- This appliance contains insulation formed with flammable blowing gases. Avoid safety hazards by carefully disposing of this appliance.
- The appliance must be plugged into its own dedicated 220-240V, 50Hz AC electrical outlet.
- Ensure that the electric outlet is properly earthed to ground. Consult a qualified electrician if you are unsure.
- Do not use an extension cord or adaptor plug.
- Unplug the appliance before cleaning.
- Never unplug the appliance by pulling on the power cord. Always grip the plug firmly, and pull straight out of the receptacle to prevent damaging the power cord.
- Choose a location that is not too cold - the temperature should be above 10°C.
- Choose a location that is not affected by direct sunlight.
- Put the appliance in a dry place, avoiding areas of high moisture or humidity.
- Don't put the appliance in direct sunlight.
- Don't put the appliance near stoves, fires or heaters.
- The appliance shall not be exposed to rain.
- Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction. Do not use mechanical devices or other means to accelerate the defrosting process.  
Do not use electrical appliance inside the food storage compartments of the appliance.
- If power cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- The electrical system of this refrigerator must be connected with an automatic 30mA circuit breaker and/or residual current device (RCD). If uncertain have a qualified electrician check your electrical system before installation and/or use.

### Protection from Moisture

Avoiding placing the refrigerator in a place where heavy moisture is present so as to minimise possibility of rusting of metal parts. The refrigerator should be kept out of water or direct sprayed water, failure to do this could cause poor performance and/or an electrical short could occur.

### Protection from Heat

The refrigerator should be protected from excessive heat sources and out of direct sunlight.

### Moving

When fixed or moved, the refrigerator cannot be set horizontally or reclined to more than 45° or positioned upside down.

Never move while refrigerator is plugged in and operating.

Once you have moved the refrigerator, leave standing in a level position for 4 - 6 hours so that the gas can settle.

### Positioning

Ensure the sides and top have at least 50mm clearance and the rear at least 100mm clearance to ensure adequate ventilation.

Never cover the bottom front grill as this is required for ventilation.

After installation the appliance should be left for 4 - 6 hours before it is switched on in order to allow the refrigerant to settle.

### Disposal of Old Appliances

The majority of components are recyclable, however there are also dangerous chemicals inside. To dispose of old fridges remove the doors and contact your local council for recycling options.

### Electrical Installation

The electrical system of this refrigerator must be connected with an automatic 30mA circuit breaker and/or residual current device (RCD). If uncertain have a qualified electrician check your electrical system before installation and/or use

**jumbuck®**

## Electrical Data

### IMPORTANT

This product is fitted with a sealed electrical connection plug that is compatible with the fridge, the mains supply for Australia and meets the requirements of international standards. This fridge must be connected to a supply voltage that is equal to that stated on the rating label. If the mains connection plug or power cord becomes damaged it must be replaced with a complete assembly that is identical to the original, and this must be replaced by an authorised service centre. Always follow the Australian requirements for connection to the mains supply. If in doubt always consult a qualified electrician.

Note: Before using your fridge, unpack and correctly position. Once in position leave to stand for around 4-6 hours before turning on for the first time.

### MAINTENANCE

- The refrigerator should be cleaned and maintained once a month with a soft clean cloth.
- When performing maintenance, make absolutely sure that the power plug is first disconnected from the power outlet.
- Wipe the inner and outer surface of the refrigerator and its accessories with soft clean wet cloth. If they are too dirty, scrub them with neutral detergent, and then clean them with water and dry them with a clean cloth.
- Never use hot water, petrol, alcohol, kerosene, abrasive powder, alkaline detergent, acid, oven cleaners, etc. These could damage the lacquer finish and plastics.
- If the plastic parts in refrigerator become contaminated by oil (animal or vegetable), they could become brittle and possibly cracked.



### CAUTION

- Never lick icy drinks when they first come out of the fridge. This can freeze burn your lips and mouth.
- If the supply cord is damaged, it must be replaced by professional electrician. The cord must be replaced with a cord of the same specification.
- Before you throw away your old refrigerator, take off the door, leave the shelves in place, so that children may not easily climb inside.
- Never allow children to operate, play with or crawl inside the appliance.
- This refrigerator is not designed for perishable foods. It is a drinks refrigerator.

**jumbuck®**

## Using Your Refrigerator

### TEMPERATURE CONTROL


- The first time you turn the unit on, set the temperature control to position “Max”.
- The settings of the temperature control are “Min, Mid, Max”. After 6 hours you can adjust the temperature control setting to suit the types of drinks being cooled.
- To turn the refrigerator off, turn the temperature control to “Min”.

#### Note

- Turning the temperature control to “Min” position stops the cooling cycle, but does not shut off the power to the refrigerator.
- If the unit is unplugged, turned off or power is lost you must wait 3 to 5 minutes before restarting the unit. If you attempt to restart without waiting the refrigerator will not start and may damage the compressor.

### INTERNAL LIGHT

To turn light on use switch, located on bottom kick panel **I** for on and **O** for off. It is recommended that the switch be turned on only when required.

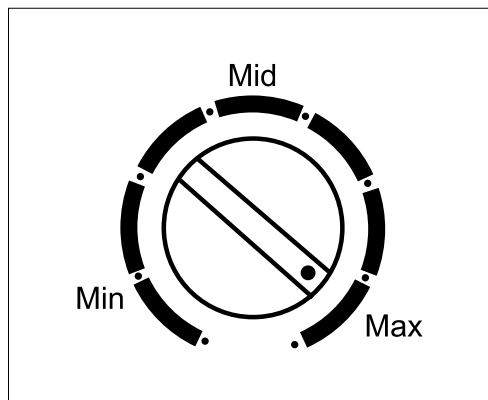

**jumbuck®**

## Trouble Shooting

### 1. When the refrigerator does not work:

Check if there is a power failure.

Check if the power plug is plugged into the power outlet.

Check that the R.C.D. has not been tripped.

If ambient temperature is above 40°C the Thermal Safety Cut may have operated. Check if unit has restarted once ambient temperature is below 30°C.

### 2. When the refrigerator is cooling excessively:

The temperature control dial may be set too high. If you place drinks containing a lot of water directly under the cool air outlets they may freeze. This does not indicate a malfunction.

### 3. When the refrigerator is not cooling sufficiently:

The drinks may be packed too tightly together which will block the flow of cool air. You may have put something hot or a lot of drinks into the refrigerator. The door may not have closed properly. There may be insufficient clearance between the refrigerator and the other surfaces, both sides, back and above. The temperature control dial may not be set low enough. Daily ambient temperature may be excessively high. Check there is no direct sun on front of fridge.

### 4. When condensation forms on the outside of the refrigerator:

Condensation may form on the outside when the humidity is high. This is the same result as the condensation formed when chilled water is poured into a glass. It does not indicate a malfunction. Wipe dry with a cloth.

### 5. When you hear a sound like water flowing:

A sound like water flowing is the refrigerant flowing. It does not indicate a malfunction.

### 6. When the cabinets side panel heats up:

The side panel of the cabinet will heat up when the door is opened and closed frequently, when starting the unit and when the unit operates in summer with high ambient outside temperature. Do not touch the side panel, it is a result of heat from inside the cabinet. It does not indicate a malfunction.

The logo for Jumbuck, featuring the brand name in a bold, lowercase, sans-serif font. The letter 'j' is lowercase and has a dot above it. The 'i' is lowercase and has a dot above it. The 'b' is lowercase and has a dot above it. The 'u' is lowercase and has a dot above it. The 'c' is lowercase and has a dot above it. The 'k' is lowercase and has a dot above it. The logo is set against a black rectangular background with rounded corners, which is centered within a larger grey semi-circular shape at the bottom of the page.

**jumbuck®**



## Technical Specifications

Specifications are subject to change without prior notice. If the technical specifications are different from the plate on the back of the refrigerator, please refer to the plate.

<b>Model</b>	<b>JF118</b>
<b>Doors</b>	1
<b>Capacity</b>	118L
<b>Rated Voltage</b>	220 ~ 240V AC
<b>Rated Frequency</b>	50Hz
<b>Rated Current</b>	1.7A
<b>Rated Input Power at 240V AC</b>	408W
<b>Energy Consumption</b>	0.87 kw.h/24h
<b>Light</b>	3W 12VDC
<b>Lamp Type</b>	LED
<b>Noise Level (db@3m)</b>	51 db
<b>Refrigerant</b>	R134a
<b>Refrigerant Charge Volume</b>	150gm
<b>Foam Blowing Agent</b>	Cyclopentane
<b>Net Weight</b>	33.3kg

The logo for Jumbuck, featuring the brand name in a bold, lowercase, sans-serif font. The text is white and set against a black, rounded rectangular background. The logo is positioned at the bottom center of the page, partially overlapping a large, light gray semi-circular shape that resembles a dome or a hill.



## PRODUCT WARRANTY

**Thank you for purchasing one of our quality Jumbuck products. Your Jumbuck fridge is covered against defects for a period of 12 months for parts and labour, repair or replacement. This warranty excludes surface rust and damage caused by abuse or neglect.**

This warranty in Australia is given by Sitro Group Australia Pty Ltd, Tel: 1300 174 876 Fax: 03 9543 9839. Email: sales@sitro.com.au

The warranty in New Zealand is given by Bunnings NZ Ltd, PO Box 14436, Panmure, Auckland, 1741. Tel: 09-9780000 Fax: 09-9782222. Email marketing@bunnings.co.nz

Any claim under this warranty must be made within 12 months of the date of purchase of the product. Proof of purchase must be presented.

Goods presented for repair may be replaced by refurbished goods of the same type rather than being repaired. Refurbished parts may be used to repair the goods.

### **For Australian Customers**

To make a claim under the warranty please contact the store where the fridge was purchased or Sitro Group directly.

This warranty is provided in addition to other rights and remedies you may have under law: our goods come with guarantees which cannot be excluded under the Australian Consumer Law. You are entitled to replacement or refund for a major failure and to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

### **For New Zealand Customers**

To make a claim under the warranty please contact the store where the fridge was purchased.

Goods presented for repair may be replaced by refurbished goods of the same type rather than being repaired. Refurbished parts may be used to repair the goods.

### **NZ WARRANTY CONDITIONS**

Any claim under this warranty must be made within 12 months of the date of purchase of the product. To make a claim under the warranty, take the product (with proof of purchase) to any Bunnings store (see [www.bunnings.co.nz](http://www.bunnings.co.nz) for store locations)

Bunnings NZ Ltd bears reasonable, direct, expenses of claiming under the warranty. You may submit details and proof to our store for consideration.

The warranty covers manufacturer defects in materials, workmanship and finish under normal use.

This warranty is provided in addition to other rights and remedies you may have under law: our goods come with guarantees which cannot be excluded under the Consumer Guarantees Act 1993 (NZ). You are entitled to replacement or refund for a major failure and to compensation for other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The warranty excludes damage resulting from product misuse or product neglect. The warranty covers domestic use only and does not apply to commercial applications.

Please thoroughly read conditions of warranty

## CONDITIONS OF WARRANTY

- The appliance must be operated and maintained in accordance with the instructions supplied in the operating manual.
- Any repair does not extend the warranty period.
- Any parts other than original Jumbuck parts will void this warranty.

## WHAT IS NOT COVERED IN THE WARRANTY

- Removal or re-installation costs. This warranty does not cover costs for transit, nor in home service.
- Liability will only be accepted for loss or damage during transit if at the time the product was being transported by Bunnings or a Bunnings approved contractor.
- Lack of maintenance, abuse, neglect, misuse, accidental or improper installation of this appliance
- Scratches, dents, corrosion or discolouration caused by heat, abrasive or chemical cleaners
- Corrosion or damage caused by exposure to the elements
- Rusting
- Cleaning and wear and tear; service calls of this nature are chargeable
- Commercial use of the product
- Unauthorized repairs or modifications during the warranty period
- Glass breakage due to misuse

## RECORD THE FOLLOWING INFORMATION

Attach a copy of the purchase receipt here:

Date of Purchase \_\_\_\_\_

Purchased from \_\_\_\_\_

Location \_\_\_\_\_

Model Name and Number \_\_\_\_\_

Serial number \_\_\_\_\_

Receipt number \_\_\_\_\_

Note: The serial number is located either on the outside of the packing carton or outside or inside the appliance

## FOR TECHNICAL ASSISTANCE

### For Australian Customers

If you experience any technical issues with your Jumbuck product, in the first instance review the instruction manual or call the warranty service agent below.

### For New Zealand Customers

If you experience any technical issues with your Jumbuck product, in the first instance review the instruction manual or call your local Bunnings warehouse.

## WARRANTY CLAIMS

### For Australian Customers

Please contact Sitro Group Australia Pty Ltd,  
Tel: 1300 174 876 Fax: 03 9543 9839  
Email: sales@sitro.com.au

### For New Zealand Customers

Please contact the store where the product was purchased.

**For any queries or assistance call**



**Customer Service**  
Australia Only

**1300 174 876**

Hours of operation: Mon to Fri 8.30am - 5.30pm EST

**Do not return to place of purchase.**

Keep your purchase receipt, this will be required to make any claims under the 12 month warranty.

Jumbuck® is a registered trademark of Bunnings Pty Ltd.