





WARNING: ONLY FOR DOMESTIC OUTDOOR USE. THIS PLAYSET SATISFIES ALL THE REQUIREMENTS OF THE AUSTRALIAN STANDARD AS/NZS ISO 8124 AND HAS BEEN CERTIFIED BY AN INDEPENDENT LABORATORY. TO GUARANTEE SAFETY, PLEASE GIVE SPECIAL ATTENTION TO THE ASSEMBLY, SAFETY, AND CARE INSTRUCTIONS DETAILED IN THIS DOCUMENT.


Warning: Maximum fall height is 118.5 cm




3-12 Years NOT TO BE USED BY ANYONE WEIGHING OVER 50KGS, SIMULTANEOUSLY NOT TO EXCEED A COMBINED WEIGHT OF 150KGS.

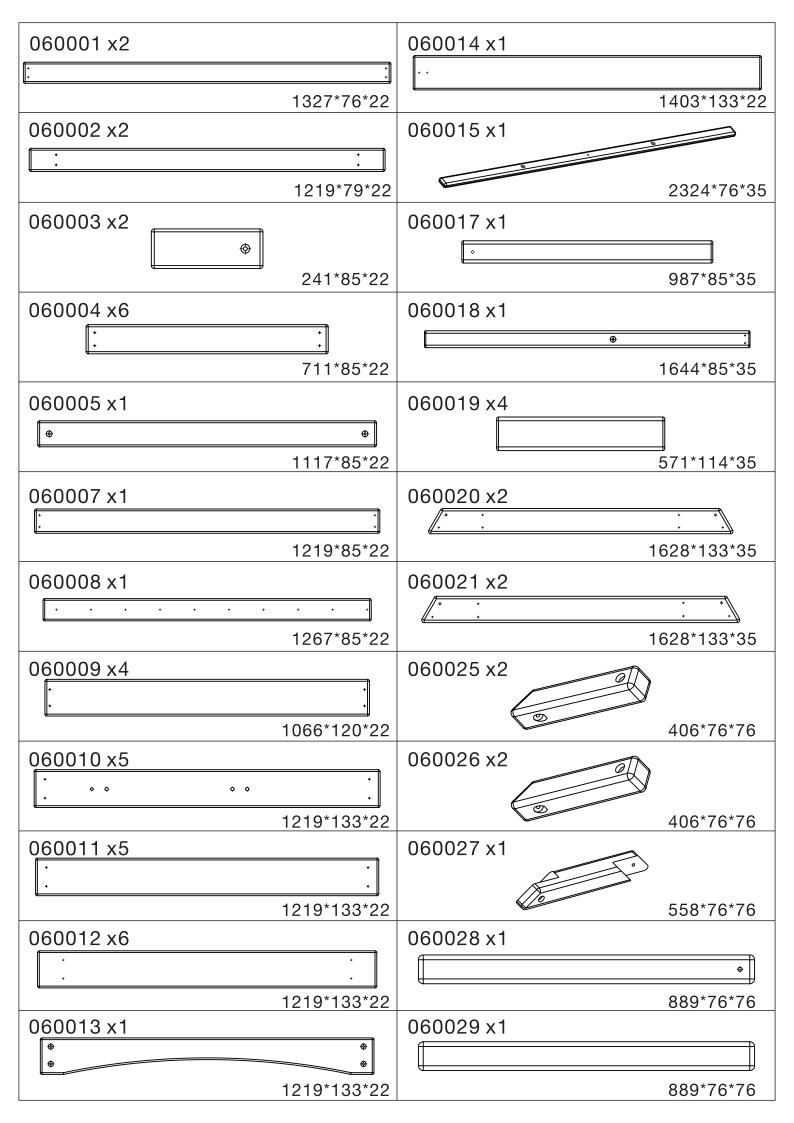

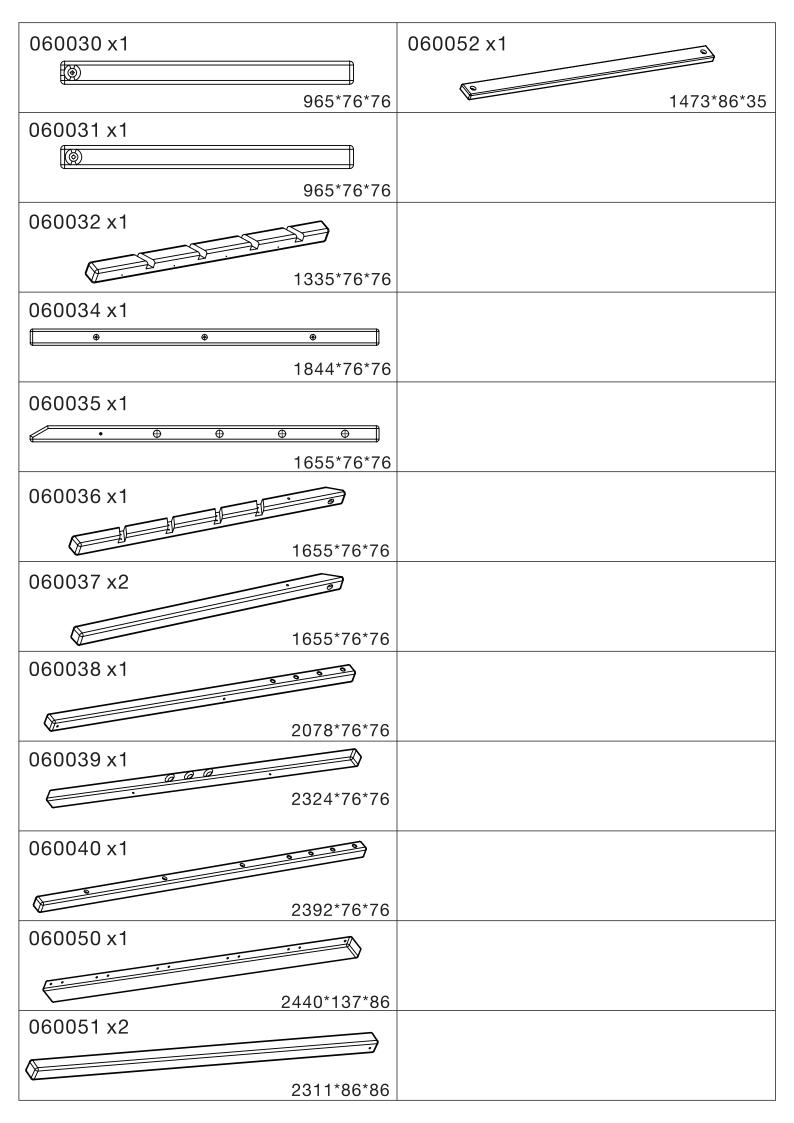

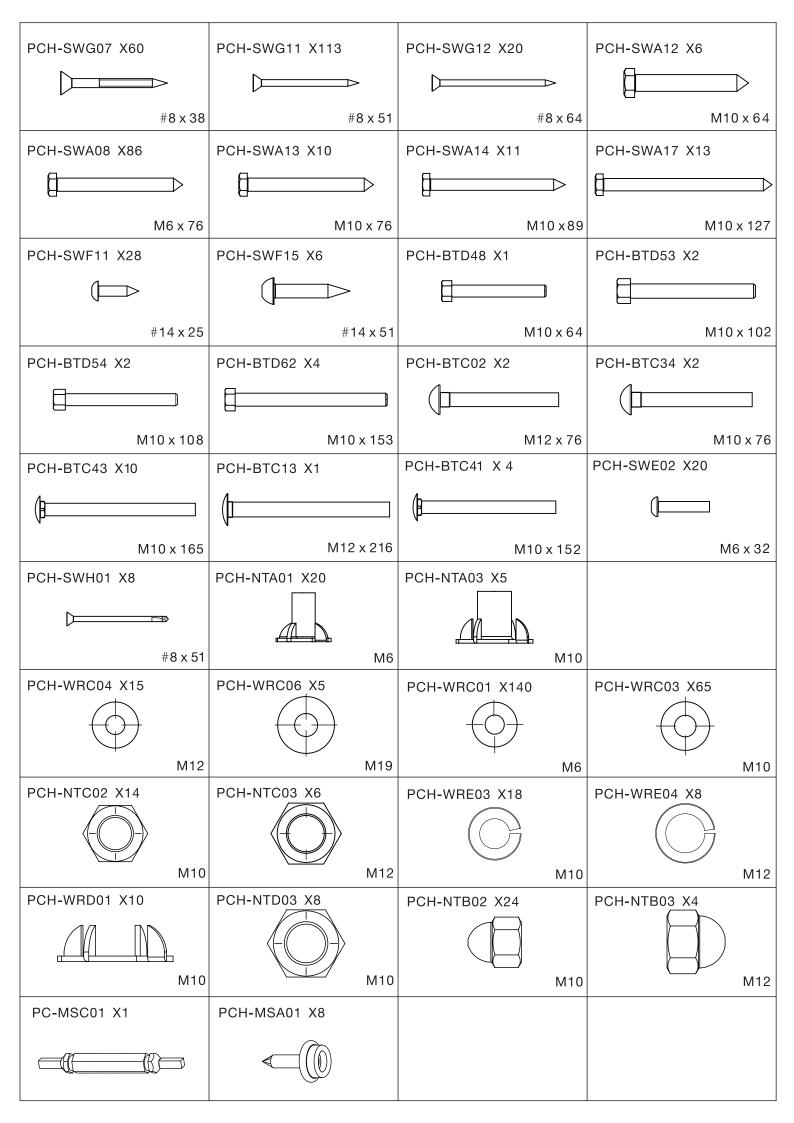


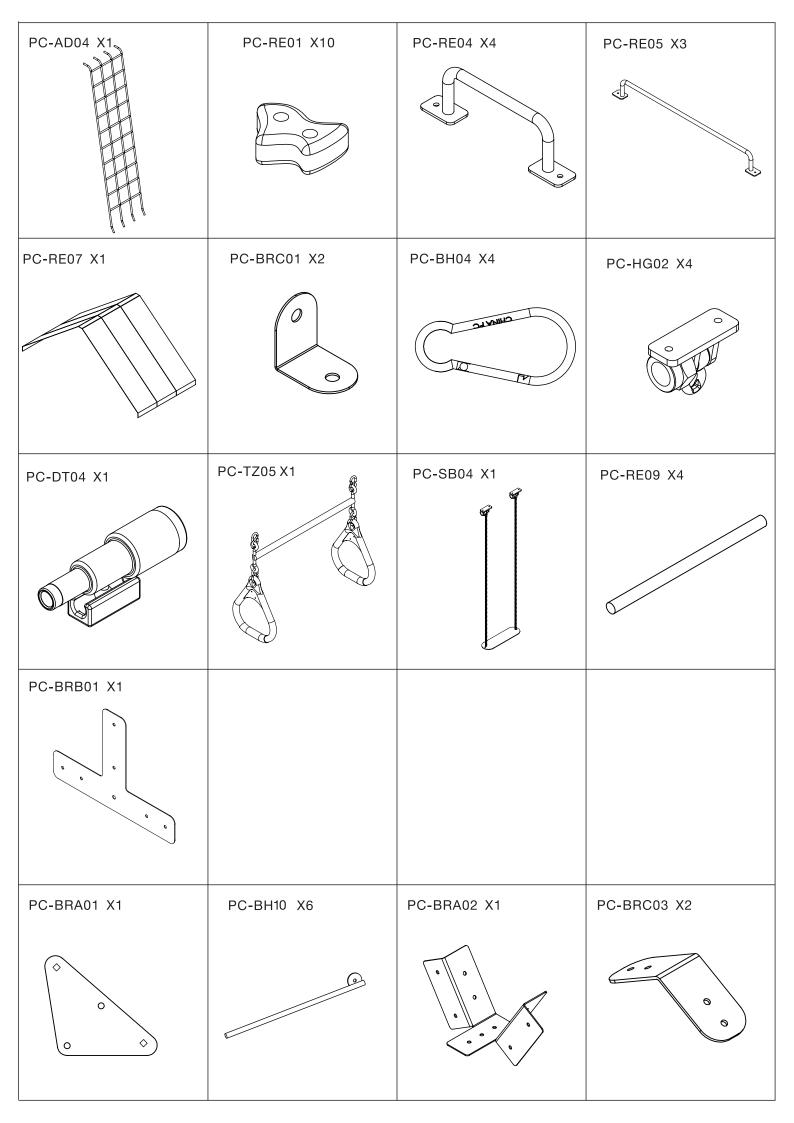


### Climbing Wall Assembly (Front)





# Lumber List 060010 x5 060011 x5 060025 x1 060026 x1 060040 x1 060037 x2

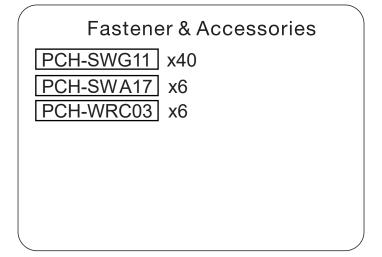


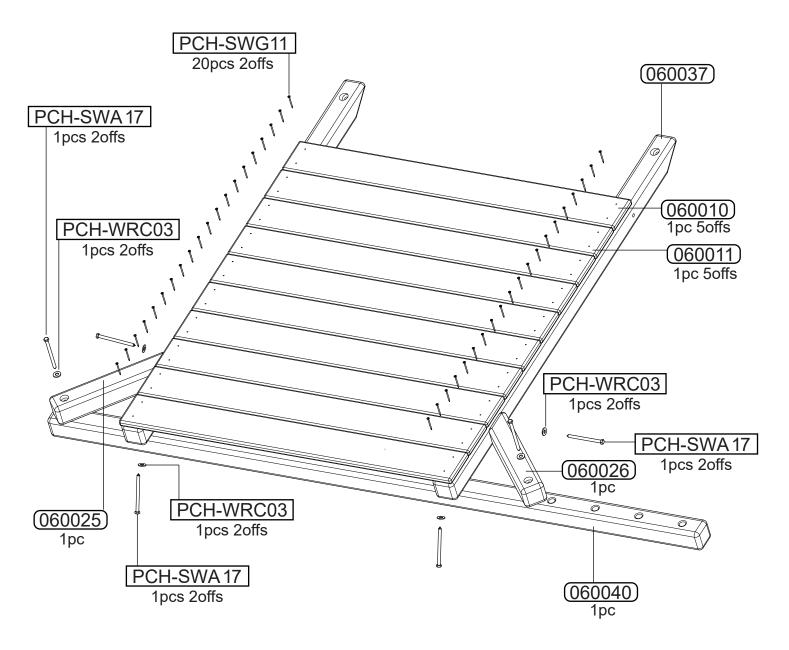

### Note: 060010 are predrilled with holes for climbing holds, please place the lumber pieces as the picture shows.

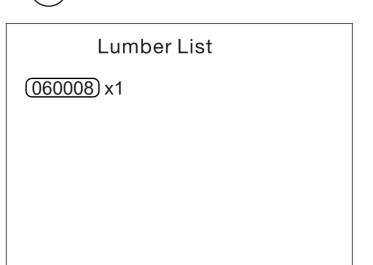

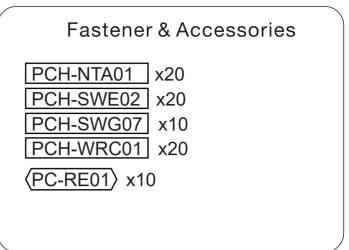

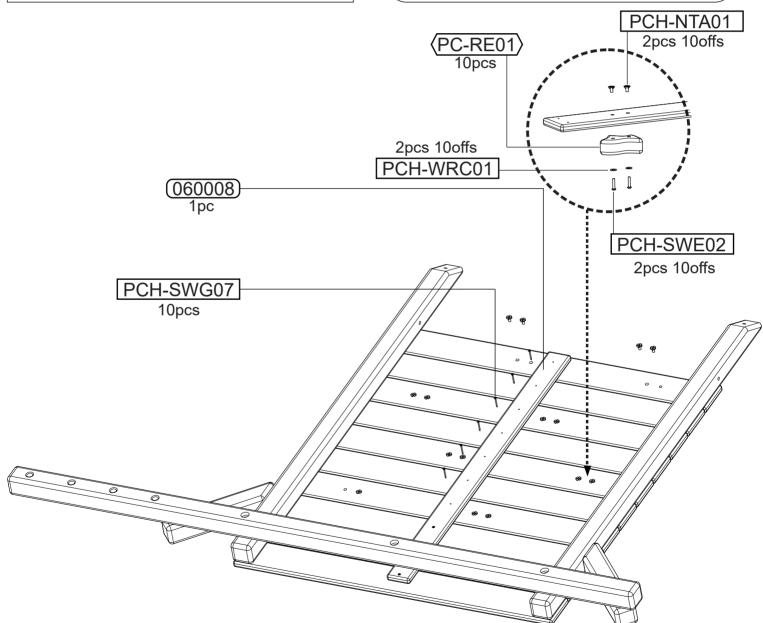


### Step Ladder & Rung Combo Assembly (Front)

### (3)

## Lumber List 060019 x4 060035 x1 060036 x1 060032 x1



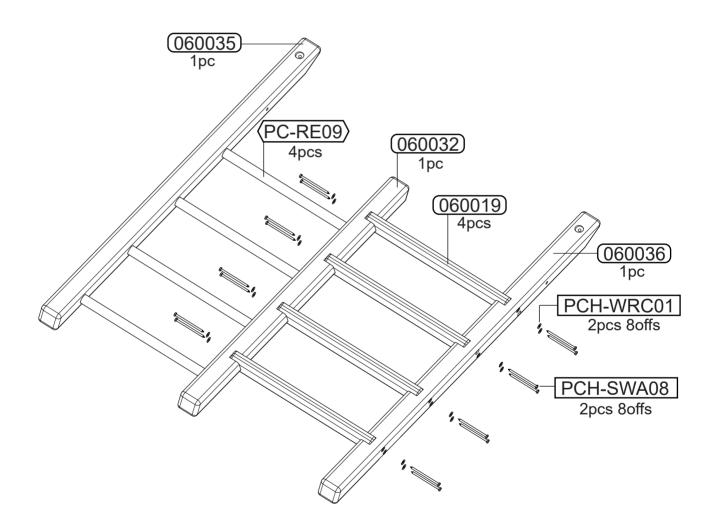


### Step Ladder & Rung Combo Assembly (Front)



# Lumber List 060025 x1 060026 x1 060034 x1

### Fastener & Accessories PCH-SWA17 x4 PCH-WRC03 x4

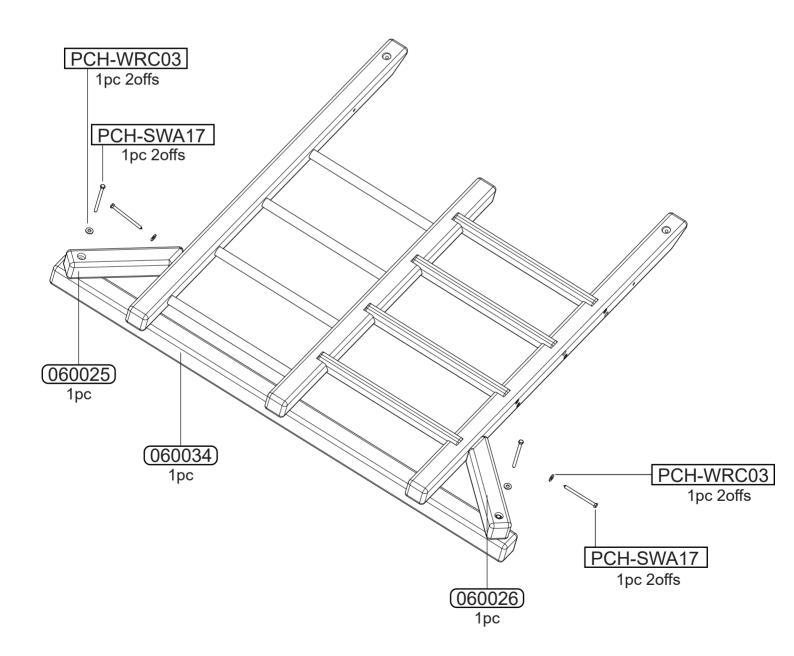



### Step Ladder & Rung Combo Assembly (Back)


Lumber List

### Fastener & Accessories

PCH-SWA17 x3

PCH-SWH01 x8

PCH-WRC03 x3

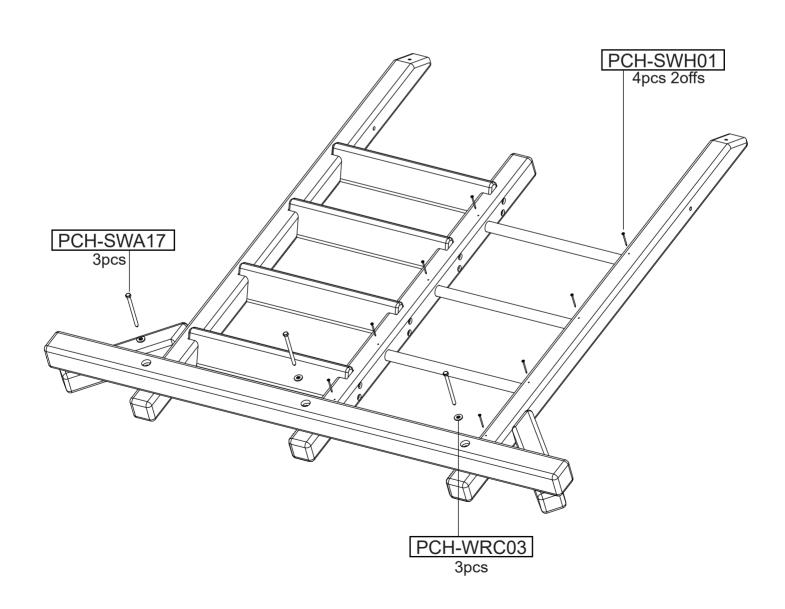

060020 x2 (060021) x2


### Fastener & Accessories

PCH-BTD62 x4

PCH-NTA03 x4

PCH-NTB02 x4

PCH-WRC03 x4

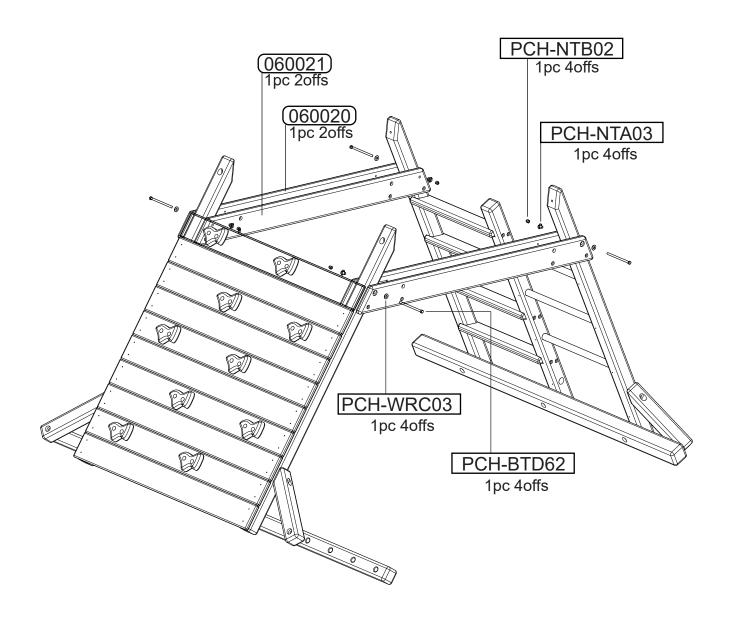

### Assemble Uprights for Deck



### Lumber List

060028) x1

060029 x1 060030 x1

(060031) x1


### Fastener & Accessories

PCH-SWA08 x24

PCH-SWA13 x4

PCH-WRC01 x24


PCH-WRC03 x4

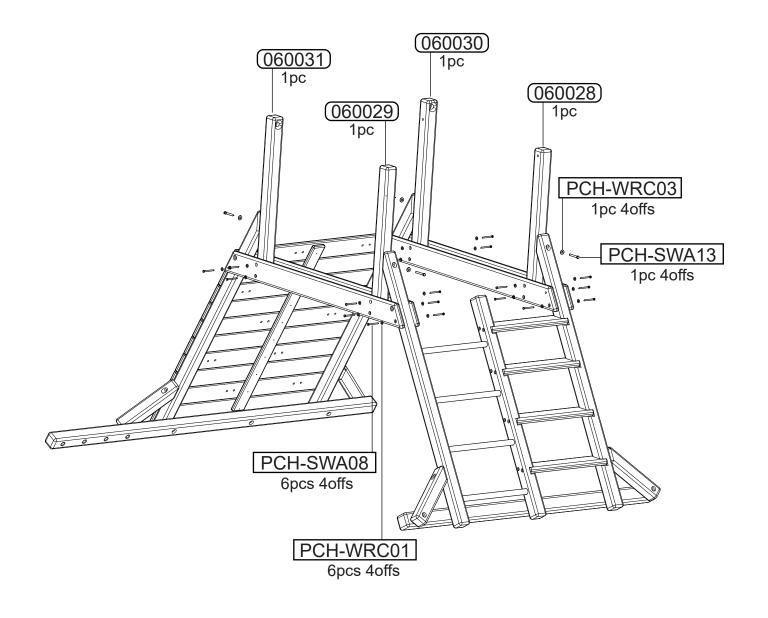


### Note:

For each position of PCH-SWA08, please screw from both outside and inside of the deck.

## Lumber List (060009) x4 (060012) x6 (060002) x2

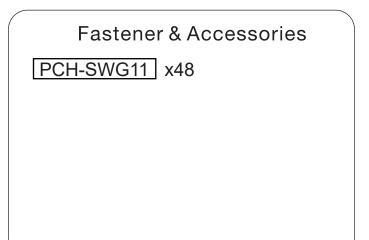


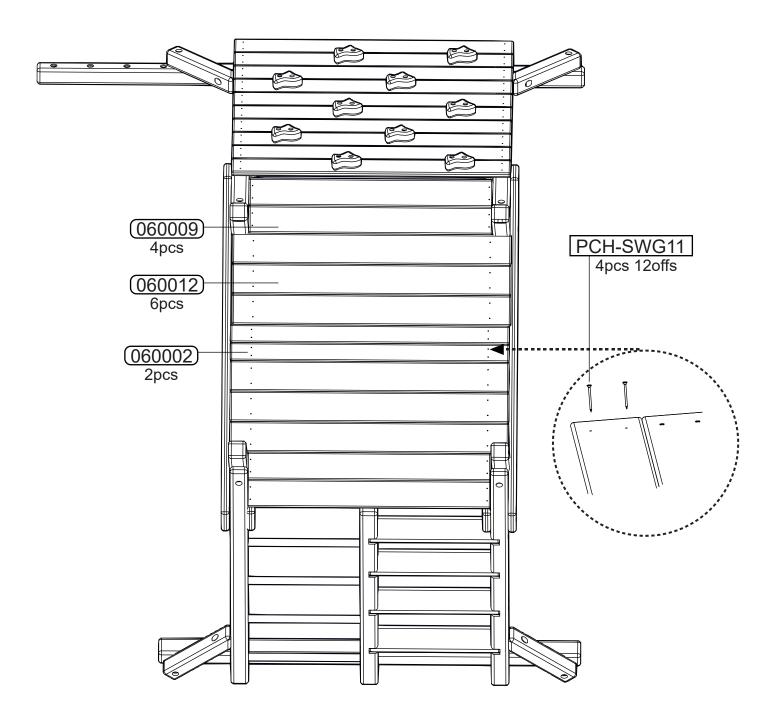



### Reinforce Deck Boards from Underneath

9

## Lumber List 060014) x1

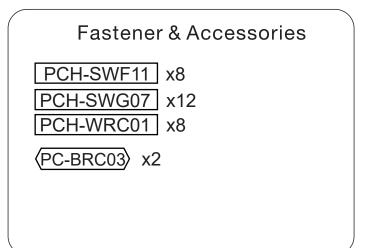

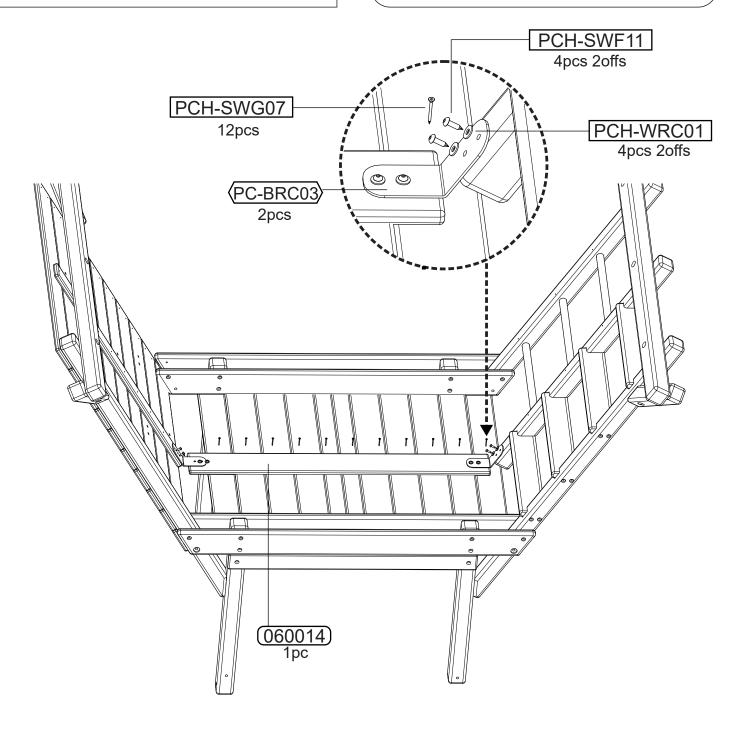


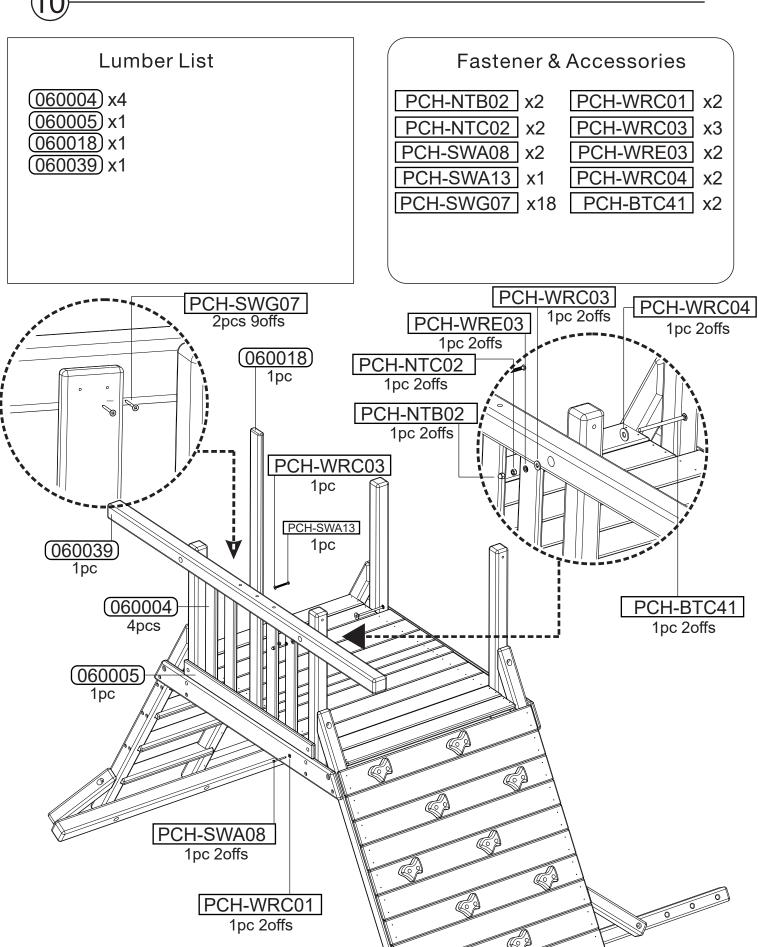




### Add Rope Ladder Beam and Climbing Wall Entrance

### Lumber List (060013) x1 (060027) x1 (060038) x1

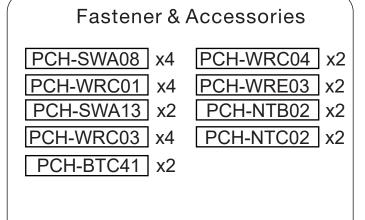

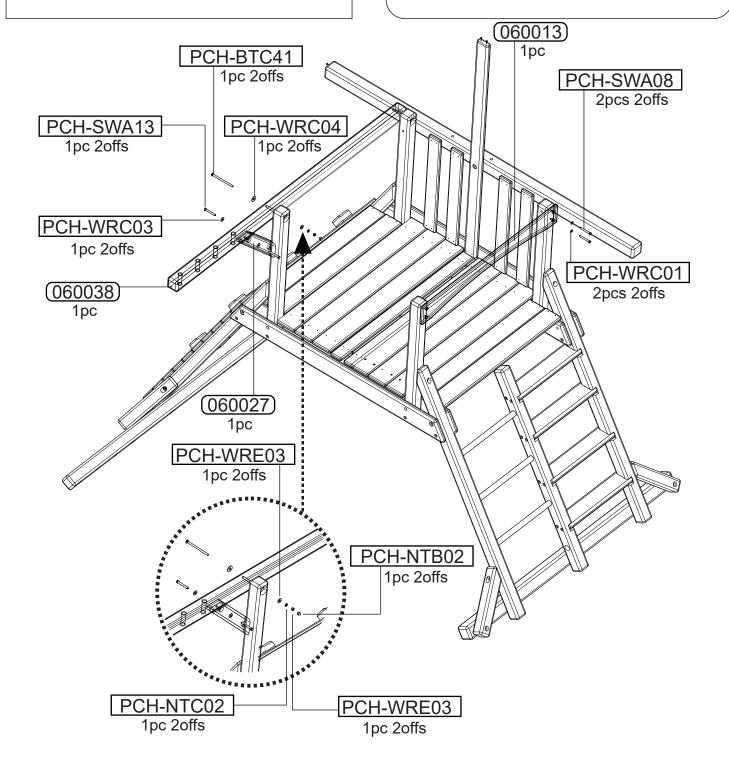


(060001) x2 (060007) x1 (060015) x1(060017) x1

### Fastener & Accessories

PCH-BTD48 x1 PCH-WRC03 x3 PCH-WRE03 x1 PCH-NTA03 x1 PCH-SWA14 x2 PCH-SWG11 x12

PCH-SWF11 x6

PCH-WRC01 x6

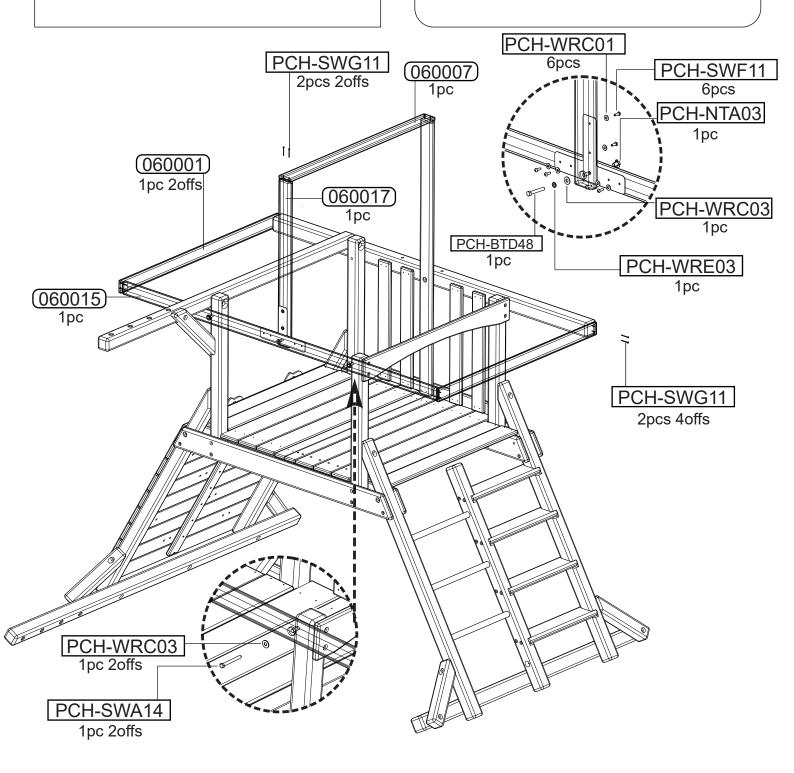

060003 x2 (060004) x2

### Fastener & Accessories


PCH-SWA08 x2

PCH-SWF11 x4

PCH-SWG07 x8


PCH-WRC01 x6


 $\langle PC-BRC01 \rangle x2$ 

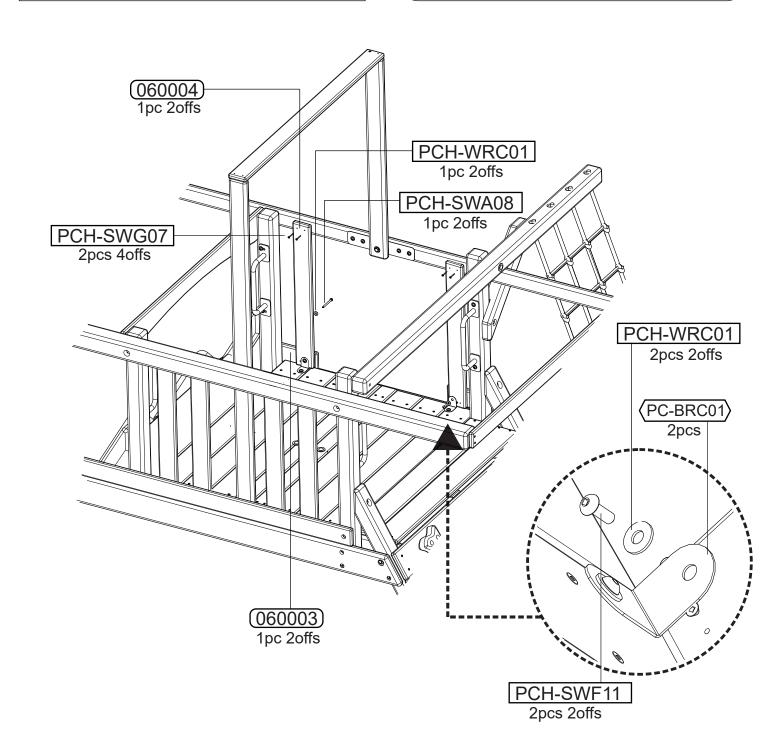




# Lumber List (060050) x1

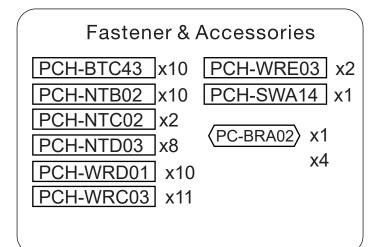

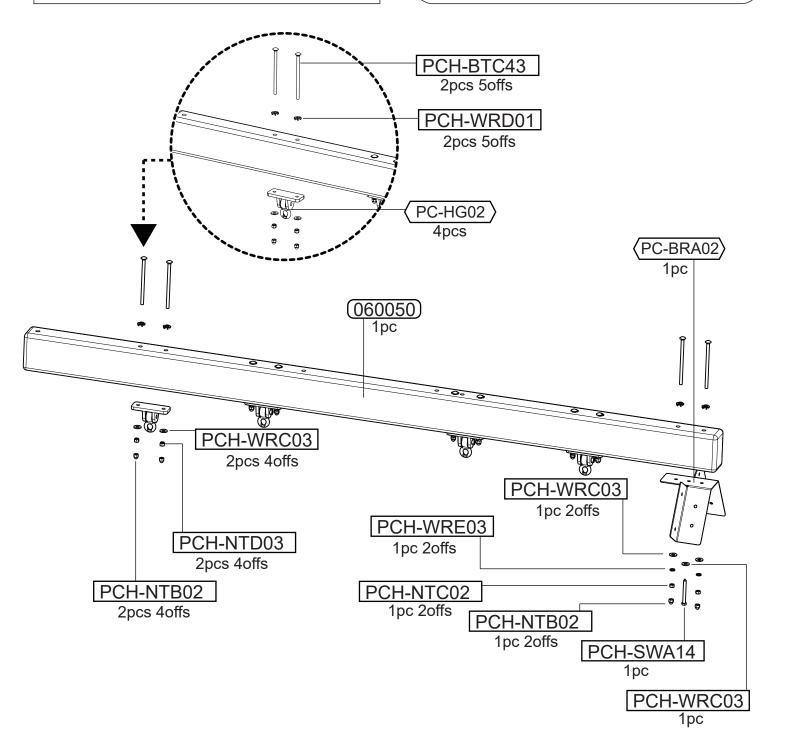

### Fastener & Accessories PCH-BTC13 x1 PCH-WRE04 x3 PCH-BTC02 x2 PCH-NTC03 x3 PCH-WRC06 x3 PCH-NTB03 x3 PCH-SWA14 x1 PCH-WRC03 x1 PCH-WRC04 x3

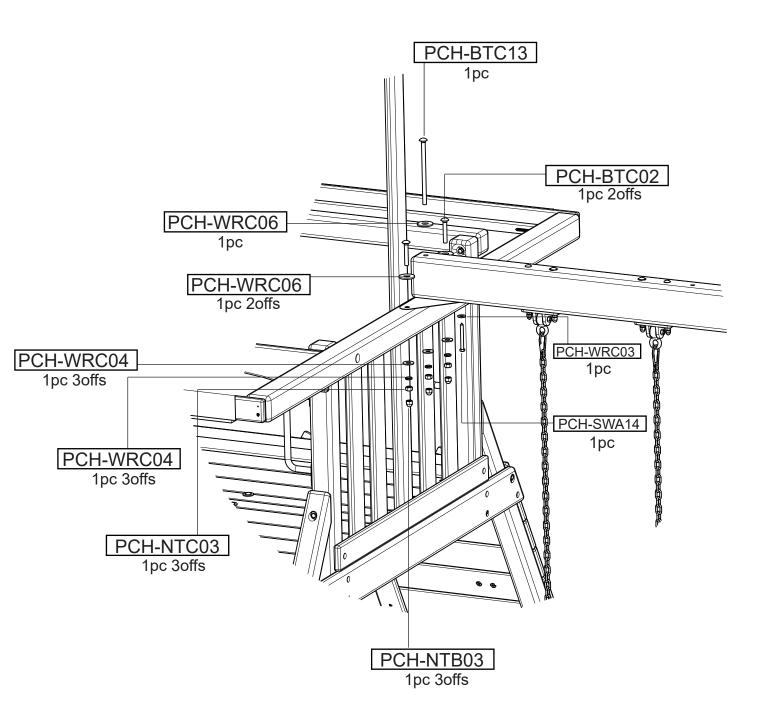



(060051) x2 (060052) x1

### Fastener & Accessories

PCH-SWA12 x6 PCH-SWA14 x2


PCH-WRC03 x12

PCH-WRE03 x2

PCH-NTC02 x2

PCH-NTB02 x2

PCH-BTD54 x2

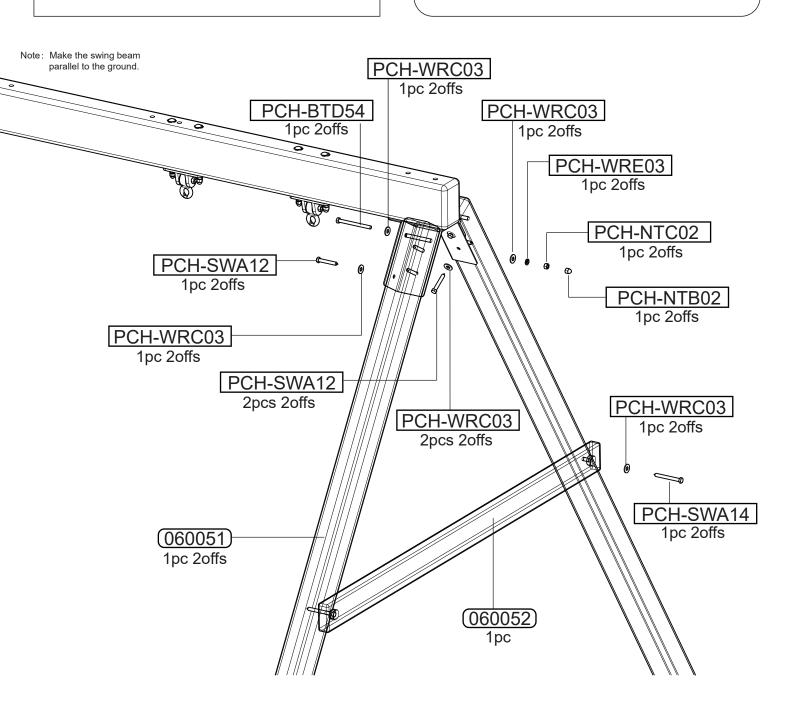


Fastener & Accessories

PCH-SWF11 x8

PCH-WRC01 x8

⟨PC-RE04⟩ x4

⟨PC-DT04⟩ x1

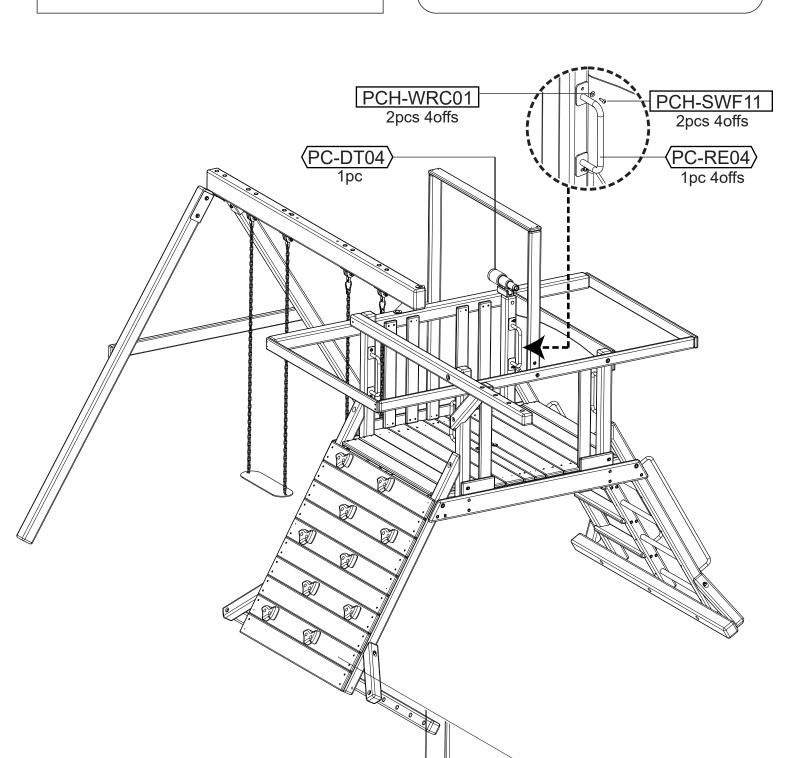


### Fastener & Accessories

PCH-SWF15 x6


PCH-WRC01 x6

(PC-AD04) x1

⟨PC-RE05⟩ x3

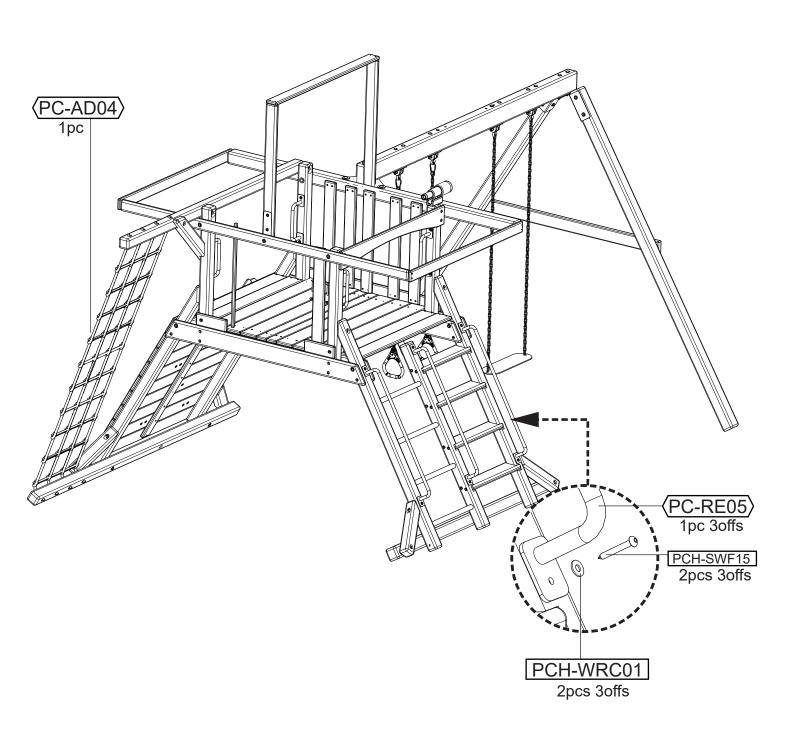


## Fastener & Accessories PCH-SWA08 x6 (PC-BH04) x4 (PC-BH10) x6 (PC-SB04) x1 (PC-TZ05) x1

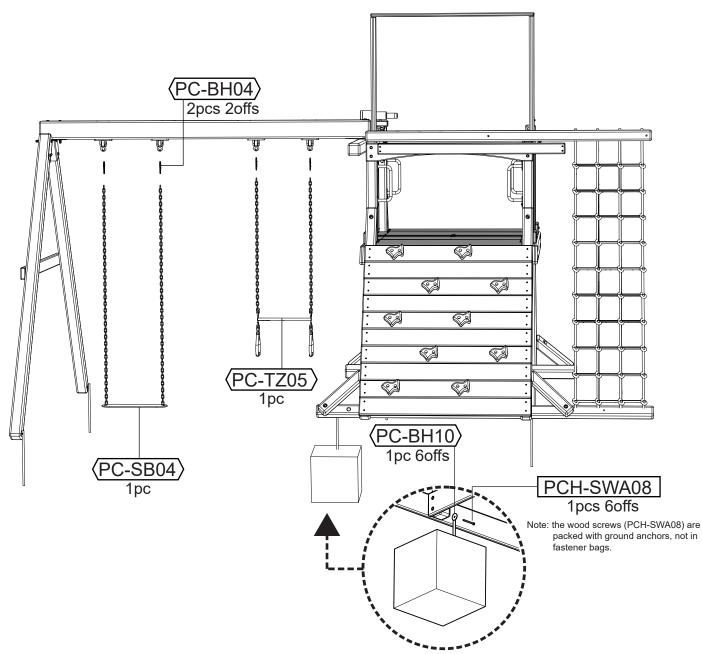

Fastener & Accessories


PCH-MSA01 x8

⟨PC-RE07⟩ x1

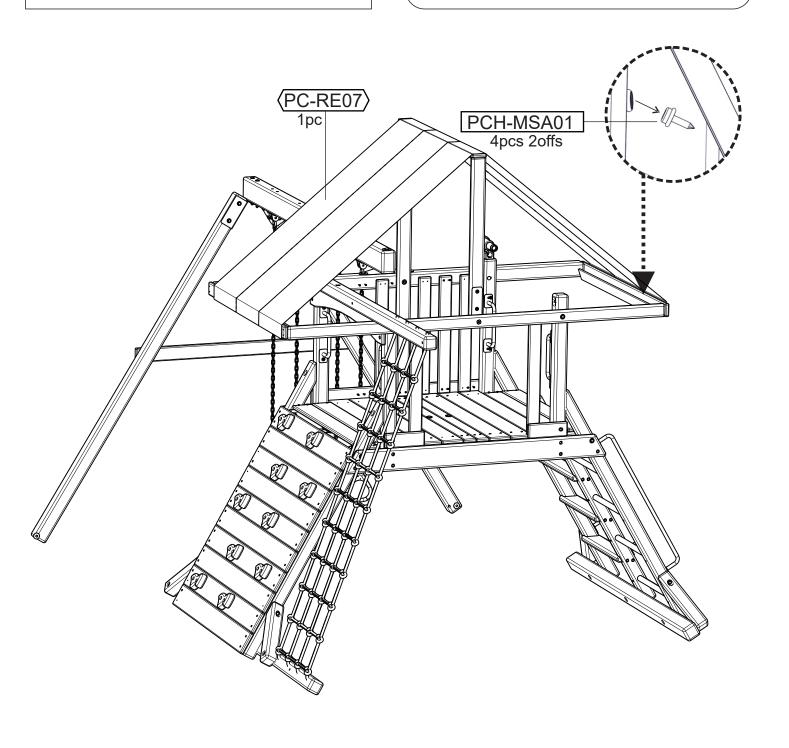

Fastener & Accessories

PCH-SWF11 x2 PCH-WRC01 x2

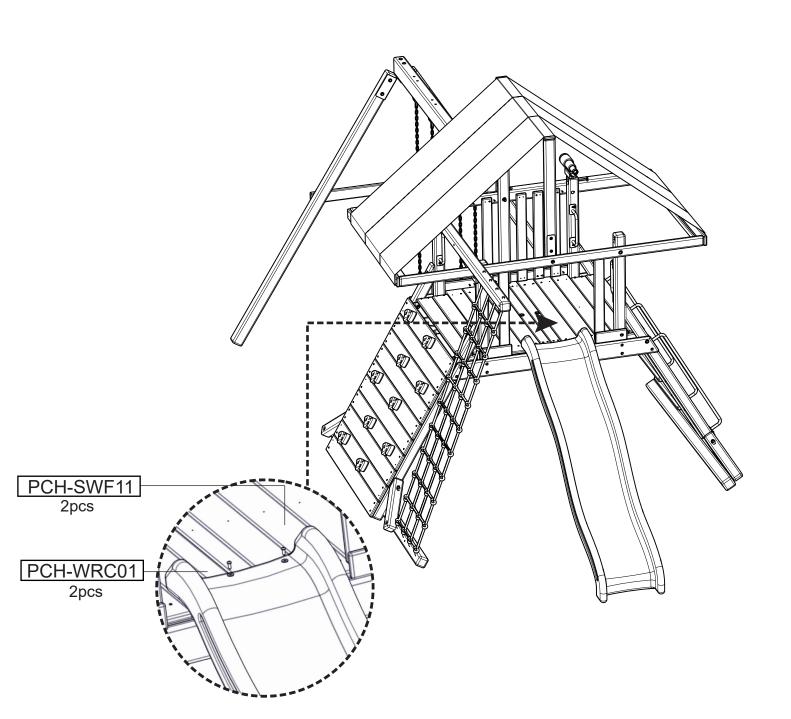


### Close the slide opening if no slide is purchased

Note: the lumber pieces and fasteners to close the opening for slide is not included, you can refer to below list and buy from local store.


### **Lumber List**

### **Accessories List**

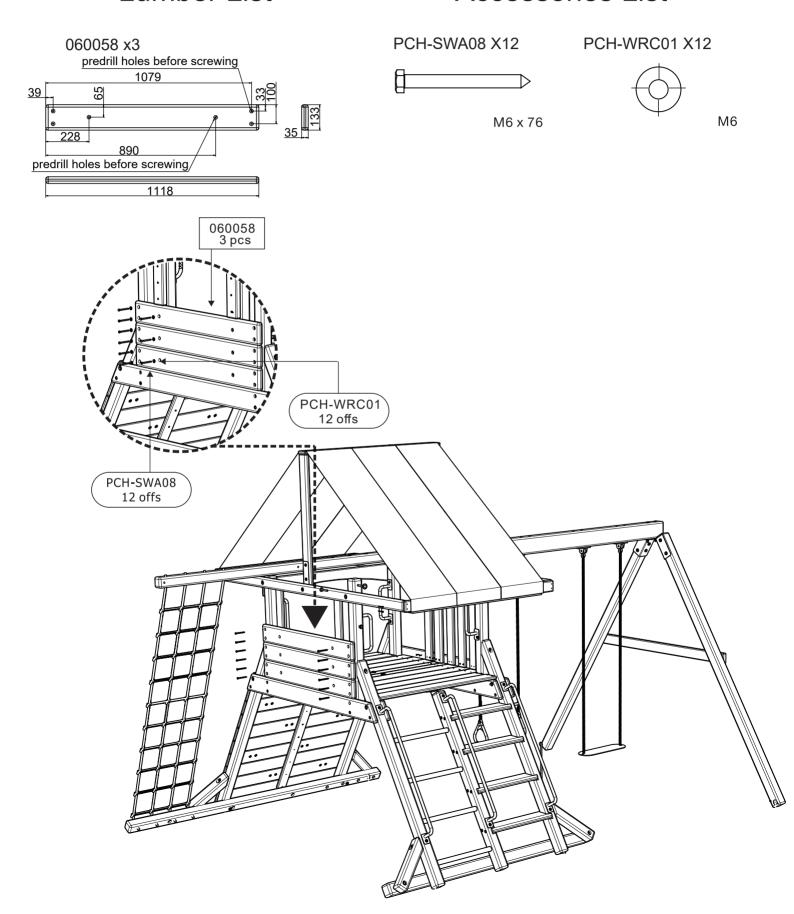


### Lumber Cutting List for Spiral Slide

Note: the lumber pieces for assembling spiral slide are not included. Please refer to below lumber and fastener list to buy from local stores.

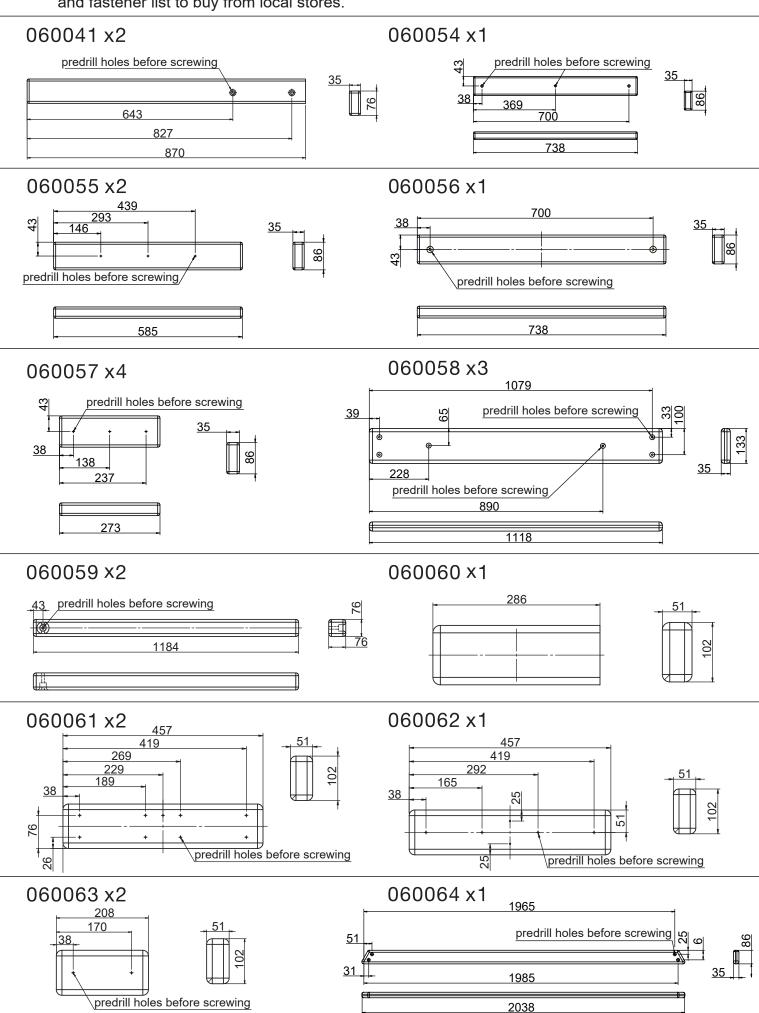

### Fastener and Part List for Spiral Slide

Note: the fastener and steel brackets for assembling spiral slide are not included. Please refer to below list to buy from local stores.

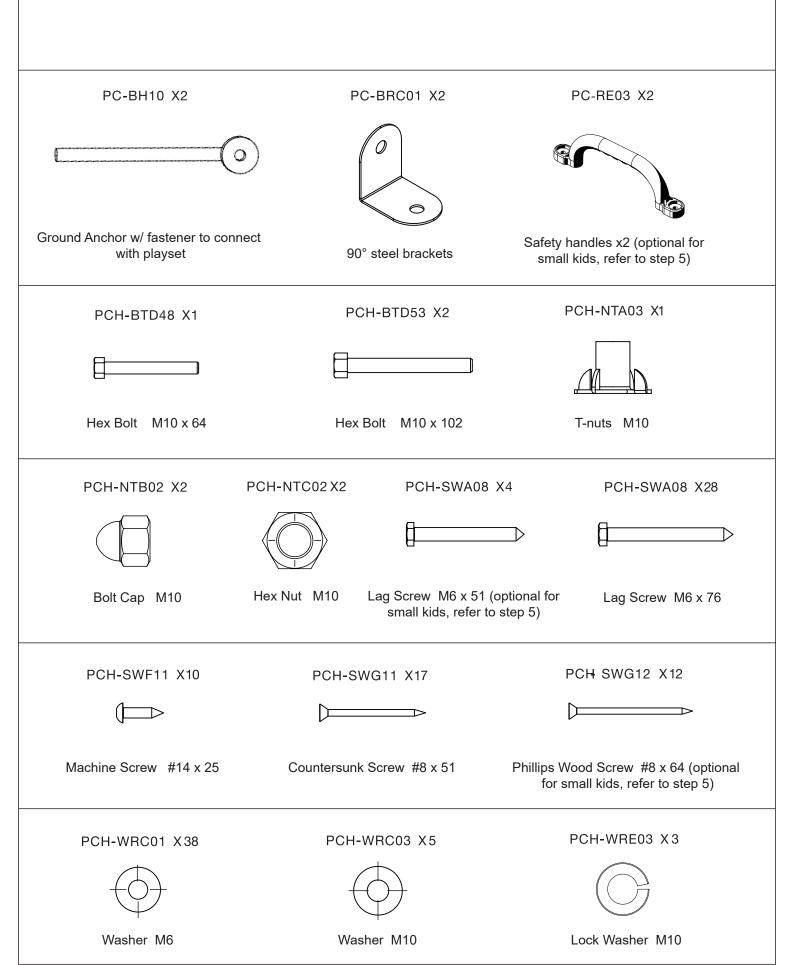




### Installation Of Tube Slide Remove canopy frame and cut vertical support

Lumber List


Fastener & Accessories

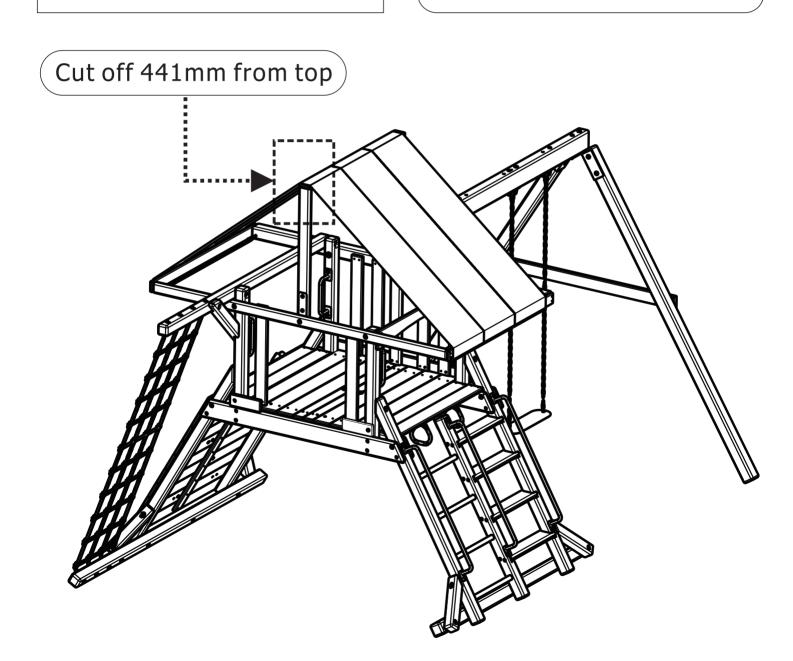

060041(2) 060057(2) 060058(3) 060059(2)

### Fastener & Accessories

PCH-SWA08 (4+18) PCH-SWG11 (2x4) PCH-SWG12 (6) PCH-WRC01 (4+18)

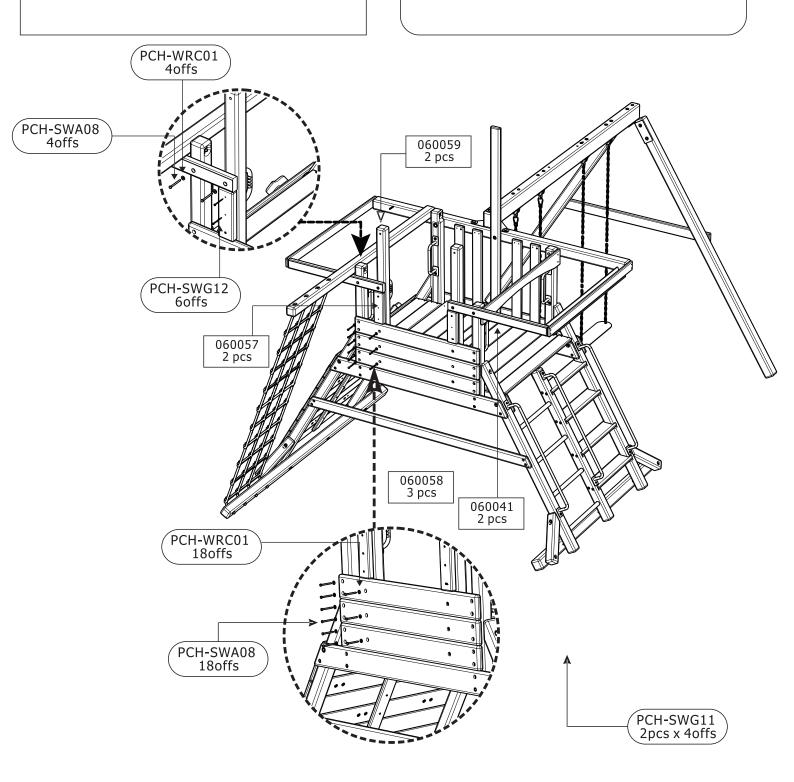





060054(1) 060056(1) 060057(2)

### Fastener & Accessories

PCH-NTB02 (2) PCH-NTC02 (2) PCH-WRE03 (2) PCH-WRC01(2+2) PCH-WRC03(2+2) PCH-SWA08 (2) PCH-BTD53 (2) PCH-SWF11 (2)

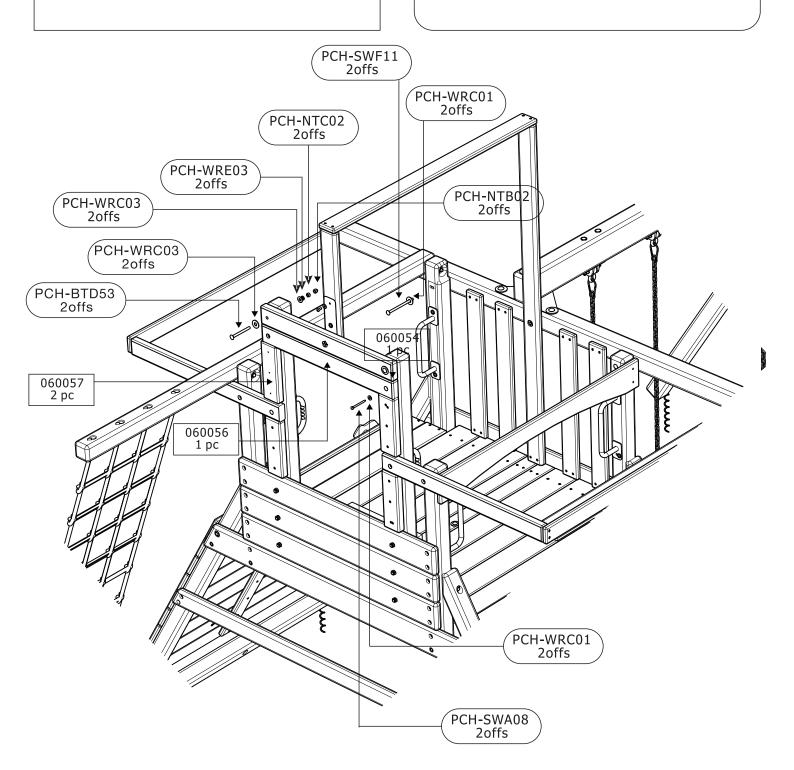


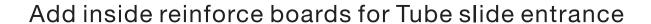




### Lumber List 060055(2)


### Fastener & Accessories PC-BRC01(2) PCH-SWG11(6) PCH-BTD48 (1) PCH-SWG11 (3) PCH-SWF11 (2 x 2+4) PCH-WRC01 (2 x 2+4) PCH-WRC03 (1) PCH-WRE03 (1) PCH-NTA03(1) PCH-SWG12(6)

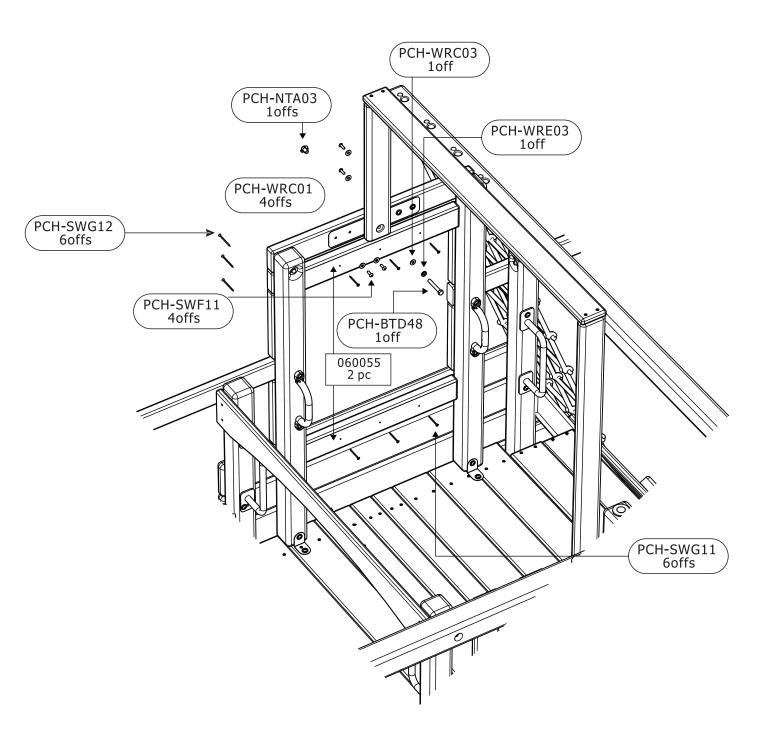


### Instructions for construction of step \*\*OPTIONAL ONLY for use of smaller children\*\*\*



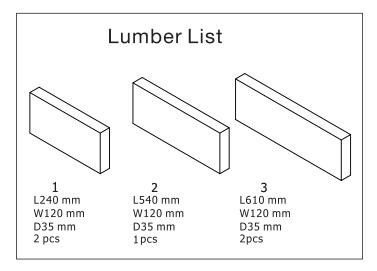

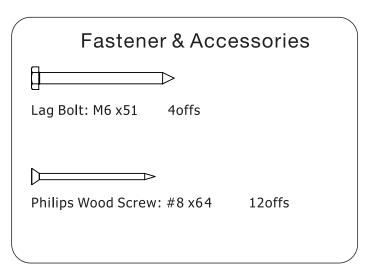

\*Timber and screws not included, need to purchase separately. Recommend Kiln Dried Hardwood or Pine

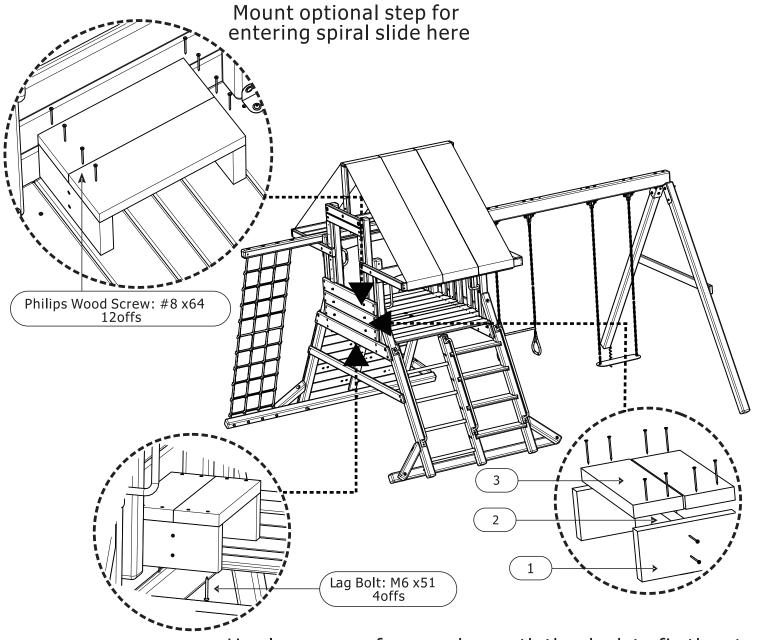

Use lag screws from underneath the deck to fix the step






060046(1) 060047(2) 060048(1) 060049(2) 060064(1)

### Fastener & Accessories

PC-BH10(2) PC-RE03(2) PCH-SWA08 (4) PCH-WRC01 (4)

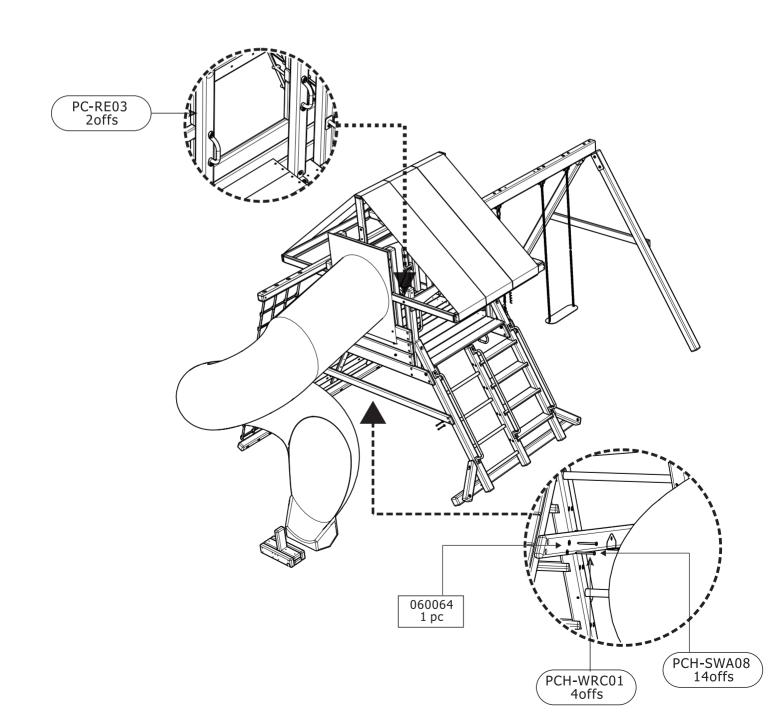

### Consumer information sheet for playground surfacing materials

The US Consumer Product Safety Commission (CPSC)estimates that about 100000 playground equipmentrelated injuries resulting from falls to the ground surface are treated annually in US hospital emergency rooms. Injuries involving this hazard pattern tend to be among the most serious of all playground injuries, and have the potential to be fatal, particularly when the injury is to the head. The surface under and around playground equipment can be a major factor in determining the injury-causing potential of a fall. It is self-evident that a fall on to a shock-absorbing surface is less likely to cause a serious injury than a fall onto a hard surface. Playground equipment should never be placed on hard surfaces, such as concrete or asphalt, and while grass may appear to be acceptable, it may quickly turn to hard-packed earth in areas of high traffic. Shredded bark mulch, wood chips, fine sand or fine gravel are considered to be acceptable shock absorbing surfaces when installed and maintained at a sufficient depth under and around playground equipment.

Table B.1 lists the maximum height from which a child would not be expected to sustain a life-threatening head injury in a fall on to four different loose-fill surfacing materials if they are installed and maintained at depths of 150 mm, 225 mm and 300 mm.

Table B.1 — Fall height in millimetres from which a life-threatening head injury would not be expected

Type of material	Depth of surfacing material		
	150 mm	225 mm	300 mm
Double shredded bark mulch	1800	3000	3300
Wood chips	1800	2100	3600
Fine sand	1500	1500	2700
Fine gravel	1800	2100	3000

However, it should be recognised that all injuries due to falls cannot be prevented, no matter what surfacing material is used.

It is recommended that a shock absorbing material extend a minimum of 1 800 mm in all directions from the perimeter of stationary equipment such as climbing frames and slides. However, because children may deliberately jump from a moving swing, the shock absorbing material should extend in the front and rear of a swing a minimum distance of twice the height of the pivot point measured from a point directly beneath the pivot on the supporting structure.

This information is intended to assist in comparing the relative shock-absorbing properties of various materials. No particular material is recommended over another. However, each material is only effective when properly maintained. Materials should be checked periodically and replenished to maintain correct depth as determined necessary for the equipment in question. The choice of a material depends on the type and height of the playground equipment, the availability of the material in a particular area, and its cost.

This information has been extracted from the CPSC publications "Playground Surfacing — Technical Information Guide" and "Handbook for Public Playground Safety".



### The Kosciusko Play Set (MPS149)

Thank you for purchasing the Kosciusko Playset (MPS149).

Warning: Only for domestic outdoor use.

PLEASE READ THESE INSTRUCTIONS CAREFULLY.

This cubby satisfies all the requirements of the Australian Standard AS/NZ ISO 8127 and has been certified by an independent laboratory. To guarantee safety, please give special attention to the assembly, safety and care instructions detailed in this document.

- This product must be assembled by adults.
- Once assembly has been completed, keep the instructions in a safe place for future reference. This can be particularly handy for identification of parts if after sales service is required.

### PRE ASSEMBLY:

- Before commencing assembly, use parts list as a checklist to ensure that none of the parts are missing. If you find that you are missing a part, please contact our after sales service department.
- Retain extra parts to use as spares in the future if necessary.
- PRE-DRILL TIMBER before fixing with screws to avoid cracks in the timber.

The dimensions given in the instructions are indicative only, they may vary according to the assembly method.

### **SAFETY ADVICE:**

- Warning: This product is only to be used by children between the ages of 3 and 12.
- Warning: Choking hazard-small parts can be dangerous for children.
- Warning: This play set must be used under adult supervision.
- This product is for private use at home only. Under no circumstances is it to used in parks, schools, camp sites, hotels, public leisure areas etc.
- The play set should be set up on a flat surface and 2 meters away from any structures or obstacles (walls, fences, trees, washing lines, cables etc.)
- The play set should be installed over impact absorbing surfaces such as sand, wood-bark chips, rubber and foam and must NOT be set up on a hard surface (concrete, tarmac, etc.) For detailed information about surfaces please refer to the attached consumer, information sheet.
- Please note this is a natural product and as such should be checked for any rough surfaces before use, if required these should be lightly sanded in order to prevent injury.
- Dispose of packaging thoughtfully.
- Do not allow children to play with packaging.

CAUTION! This product includes timber and/or fabric . PLEASE KEEP AWAY FROM FIRE.

IMPORTANT! Wait until the concrete is set before using and check anchorages regularly.

### **MAINTENANCE:**

- All parts should be checked at least once a month.
- Check all screws for tightness and tighten when required.
- The ground on which the play center is set up should be cleared regularly. All objects such as stones or anything else could cause injury in the case of fall should be removed.
- It is recommended that during the winter period when the equipment is not in use, all apparatus are removed to prevent deterioration due to bad weather.
- Modifications to the original activity toy should only be carried out under instructions from the manufacturer.
- Defective parts should only be replaced in accordance with the manufacturer's instruction.
- As timber is a natural product, it will deteriorate in the weather over time. For maximum longevity of your timber, it is highly recommended to apply an initial 3 coats of a timber protectant such as paint, lacquer or an exterior grade oil before first use of the play set.

### FIXING INTO THE GROUND

### IMPORTANT! For safety reasons, your playset must be embedded into the ground.

- Place your playset in the desired position and mark a square area 350mm x 350mm around each of the feet. Dig holes 350mm deep. (The feet must be in the center of the square)
- Fill the holes with concrete. Do not exceed the ground level. Fit the embedding piece into the center of the concrete so that fixtures for screwing the posts into place rise out of the concrete.
- When the concrete is dry, screw the posts to the embedding pieces.
- Anchors shall be placed level with or under ground in order to reduce tripping hazards.

IMPORTANT! Wait until the concrete is set before using and check anchorages regularly.

### **TIMBER CARE:**

As timber is a natural product, it will deteriorate in the weather over time. For maximum longevity of your timber, it is highly recommended to apply an initial 3 coats of a timber protectant such as paint, lacquer or an exterior grade oil before first use of the play set.

Minor twisting, warping, cracking and any other natural occurring property of wood will occur. PLEASE NOTE: These occurrences are cosmetic and will not affect the strength or integrity of the product, if you have any concerns or queries please contact the after sales service for further assistance.

At regular intervals, the application of a penetrating oil based sealer stain to all wooden components is essential. Please consult your local hardware or home improvement store for recommendation of an appropriate product.

All outdoor wooden products require routine inspection and regular maintenance. After installation, a follow-up inspection should take place after one week and twice a month thereafter for the remaining life of your play products.

Maintenance should be performed at any time it is deemed necessary. As a general rule, major maintenance (wood refinishing) should be performed at six month intervals from the date of installation. Inspect and performance based on the following checklist.

Major wooden parts: Inspect for splintering and structure defects at regular intervals. For very minor splinters or chipping, lightly sanding and refinish with an exterior water repellent stain can assist. If timber has cracked or split significantly, replacement parts may be required, please contact national customer service center for any replacement requirements.

IMPORTANT: If living in an area prone to termites, please ensure any timber is treated with termite protection. Please keep receipts as proof of purchase of the termite protection product used on this set.