



# Electric Area Heater

Powder Coated Finish

- Quartz Heating Element
- 3 Heat Settings
- Tip Over Safety Switch
- Wall Bracket Supplied
- Pull Cord Operation
- Suitable for Outdoor Entertaining Areas



Electric Elements



Max Output



Heating Element



Mounting Options



Important: Retain these instructions for future use.

# Installation, Operation & Maintenance

## Safety

Before attempting to operate this floor/wall heater, the following basic safety precautions should be taken to reduce the risk of fire, electric shock and personal injury. It is important to read the instruction manual and to understand its' applications, limitations and potential hazards associated with this floor/wall heater. This floor/wall heater is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. This floor/wall heater is not designed for use within 1m or above a water source. It is important that you read, understand and follow these instructions very carefully. They are designed for the safety of yourself and others ensuring a long and trouble free service life from your floor/wall heater. This electric floor/wall heater complies with Australian and International standards and safety requirements. Repairs should only be carried out by qualified persons using original spare parts. Failure to do so may result in considerable danger to the operator.

## Safe Operation Beware of Children and Pets

Children should not be allowed to touch or operate floor/wall heaters or touch extension cords, if used. All floor/wall heaters should be kept out of reach of children, preferably stored or locked in a secure cabinet or room when not in use.

## Do Not Abuse the Power Cord

Never yank or pull on the power cord to disconnect it from the mains supply socket. Never carry your floor/wall heater by its' power cord. Keep the power cord away from heat, oil, solvents and sharp edges. Check the power cord regularly for any damage and if the power cord becomes damaged have it replaced by an authorised service facility.

## Extension Cords and Reels

This floor/wall heater is NOT designed to run off an extension cord. If you require an additional power point please have one installed by a qualified electrician.

The use of extension cords may cause power voltage loss which will result in damage to the motor this will NOT be covered under warranty.

## Installation

Always ensure you select the correct fixing accessories which suit the particular floor/wall material you are attaching to, if in doubt please discuss with your local retailer or local hardware store. This floor/wall heater is not designed for use within 1m or above a water source. All installations must meet the requirements of Australia Standard AS/NZS 3000:2007.

Ensure that the floor/wall heater is not positioned directly above or below a power point or switch.

This floor/wall heater is not designed to be used with 3rd party timer or programmable system.

**WARNING:** Fire risk exists if this heater is covered by or positioned close to curtains or other combustible materials.

**NOTE:** If using this floor/wall heater outside ensure that it is connected directly to an outdoor power point.

The electrical system of this floor/wall heater must be connected with an automatic 30mA circuit breaker and/or residual current device (RCD). If uncertain have a qualified electrician check your electrical system before installation and/or use.

All electrical connections are made in a dry area.

Outdoor power points must be weatherproof and installed by a qualified electrician.

Sitro Group Australia Pty Ltd is not responsible for incorrectly chosen fixing accessories or any damage which may be caused by an incorrectly fitted floor/wall heater.

The logo for Jumbuck, featuring the brand name in a bold, white, lowercase sans-serif font with a registered trademark symbol, set against a black rounded rectangular background. This background is centered within a larger, light gray semi-circular shape that forms the bottom of the page.

**jumbuck®**

## Specific Safety Instructions

### WARNING

Do not use the floor/wall heater in areas where there is a risk of explosion or fire from flammable gases. Ensure that the heating area is kept clear of combustible materials. Do not use the floor/wall heater in damp areas, without suitable ventilation. This floor/wall heater is not designed for use within 1m or above a water source. Do not place within one metre (1m) of any water source. Do not place directly below or above any power points or switches.

WARNING: Fire risk exists if this heater is covered by or positioned close to curtains or other combustible materials.

- This floor/wall heater is intended for domestic/ household use only.
- Always ensure that this floor/wall heater is installed as per the requirements noted in Australian Standard AS/NZS 3000:2007.
- Always keep floor/wall heater at least one metre (1m) from combustible materials.
- DO NOT locate this floor/wall heater directly below or above the power supply socket or switch.
- DO NOT use this floor/wall heater in either a bathroom or ensuite.
- DO NOT use a 3rd party timer, or programmable system with this floor/wall heater.
- DO NOT clean the floor/wall heater while the floor/wall heater is on or plugged into the mains power supply.
- DO NOT touch any part of the floor/wall heater while on, hot surfaces may burn.
- DO NOT use the floor/wall heater as a dryer.
- DO NOT attempt to modify the floor/wall heater, power cord, power plug or the supplied accessories in any way.
- DO NOT expose the floor/wall heater to rain, water, or use in damp wet conditions.
- NEVER cover this floor/wall heater.
- NEVER carry the floor/wall heater by its power supply cord.
- NEVER use with the power cord coiled, bundled up or tied up. Always extend fully before use.
- NEVER use the floor/wall heater if any part of it is damaged.
- Ensure that the floor/wall heater is disconnected from the mains supply when installing, cleaning or moving.

- Ensure this floor/wall heater is not left on when unattended.
- Ensure the floor/wall heater is not used in areas where flammable gases are present, e.g. paint, petrol etc.
- Always turn the floor/wall heater OFF at the unit switch and the power point switch when not in use for extended periods of time.
- Always allow the floor/wall heater to cool, about one (1) hour after the floor/wall heater has been turned off, before cleaning the floor/wall heater.
- Always ensure that the power cord is fully extended and NOT in contact with any part of the heater.
- Always ensure that the floor/wall heater is kept clean and free from dust.
- Only use this floor/wall heater when securely attached to the floor/wall.

### ELECTRICAL DATA

#### IMPORTANT

This product is fitted with a sealed electrical connection plug that is compatible with the floor/wall heater, the mains supply for Australia and meets the requirements of international standards. This floor/wall heater must be connected to a supply voltage that is equal to that stated on the rating label. If the mains connection plug or power cord becomes damaged it must be replaced with a complete assembly that is identical to the original, and this must be replaced by an authorised service centre. Always follow the Australian requirements for connection to the mains supply. If in doubt always consult a qualified electrician.

NOTE: If using this floor/wall heater outside ensure that it is connected directly to an outdoor power point.

The electrical system of this floor/wall heater must be connected with an automatic 30mA circuit breaker and/or residual current device (RCD). If uncertain have a qualified electrician check your electrical system before installation and/or use.

All electrical connections are made in a dry area.

Outdoor power points must be weatherproof and installed by a qualified electrician.

#### Technical Specification

Floor/Wall Heater	JEH322
Voltage	220-240V AC 50Hz
Input Wattage	650-2000W
Unit Weight	10Kg (inc. base)
IP Rating	IP24

Heater specifications can be found on the data label.

**jumbuck®**

## Stand Assembly

### NOTE: Remove any transit protection material

 
 
1. Place metal cover 'A' over weighted base 'C'.
2. Push bottom pole 'D' through completed base 'A+C' and secure using screw 'B'. Screw 'B' goes through completed base 'A+C' and into the bottom of pole 'D', tighten fully.
3. Loosen and remove 2 screws 'L' on pole 'D' and slide pole 'E' onto pole 'D'. Re-fit and tighten fully the 2 screws 'L'.
4. Loosen and remove collar 'G' from pole 'F'.
5. Push small pole 'H' up through the centre of pole 'F', ensure pole 'H' is fully through the other end of pole 'F'.
6. Re-fit and tighten collar 'G' onto pole 'F'.
7. Repeat step 3 for pole 'E' and pole 'F'.
8. Place heater head onto pole 'H' and tighten screw 'I'.
9. Clip power cord into all cord clips 'K'.

Heater is now complete and ready for use.

### TO TILT HEAD

**Note: Always ensure that the heater is switched off, disconnected from the mains power supply and is cold to touch. If heater has been recently used, please leave the heater one (1) hour to cool before tilting head.**

1. Loosen the head tilt screw, do not remove.
2. Head can be tilted through 25°.
3. Tighten the head tilt screw when the desired angle is achieved.

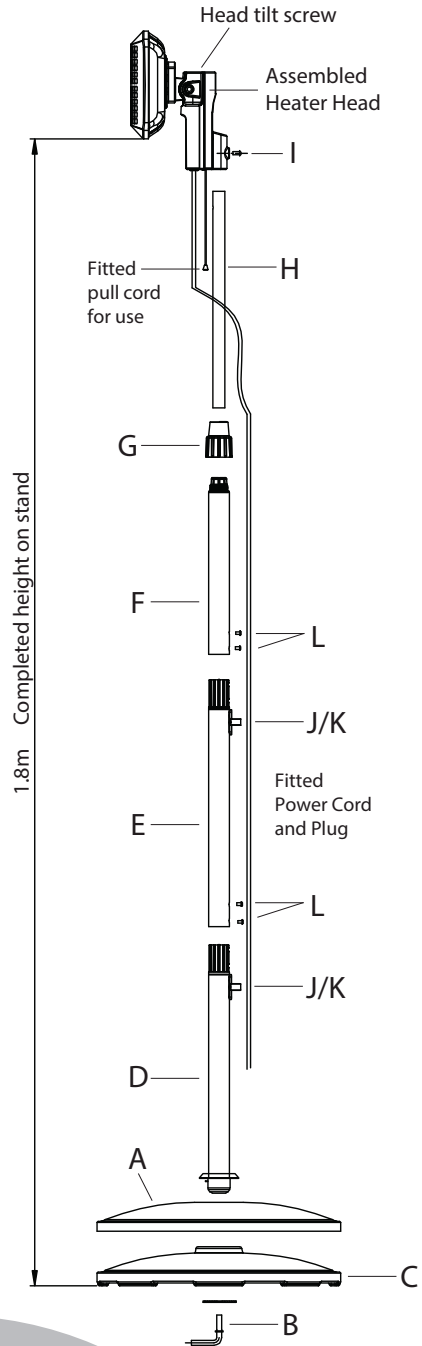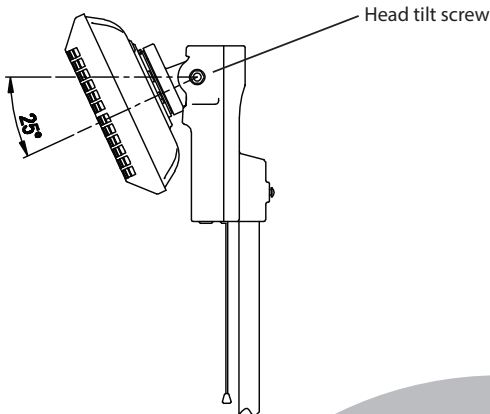

**jumbuck®**

## Wall Bracket Assembly

1. The bottom of the heater should be 1.8m above the floor.
2. Do not position the wall heater directly above or below a power point or switch.
3. Mark and drill all mounting holes for wall bracket 'O'.

 
4. Using suitable screws (not supplied) attach the wall bracket to the wall.

NOTE: If unsure what screws to use please discuss with your local hardware store.

5. Clip the heater head into the wall bracket at the top and locate screw 'I' into the bottom of the wall bracket 'O'.

NOTE: Ensure heater assembly is fully located before removing your hands.

6. Heater is now mounted and ready for use.

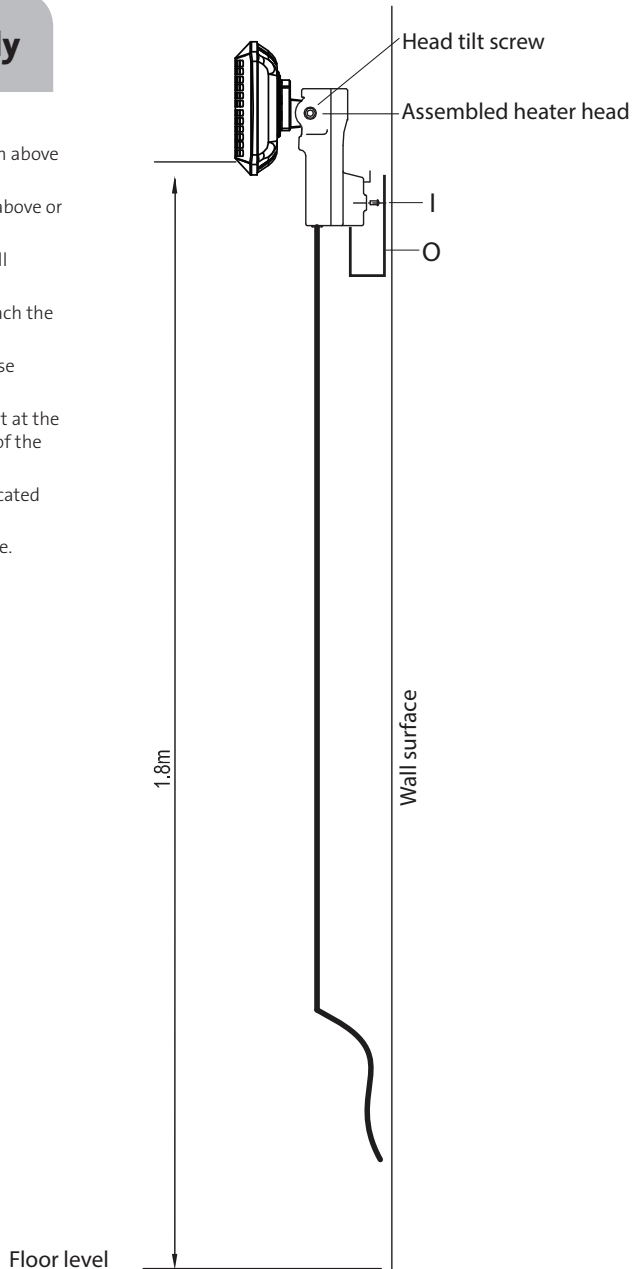

**jumbuck®**

## Operation & Cleaning

### To Operate

1. Plug into 240V AC wall socket and turn on.
2. Pull the cord to turn heater to low.
3. To use all 3 heat settings and to turn off, please follow:  
1st Pull on cord - Low - Display shows L  
2nd Pull on cord - Medium - Display shows M  
3rd Pull on cord - High - Display shows H  
4th Pull on cord - Off - Display shows O
4. Turn off at wall socket and unplug.

 
### Cleaning

Always ensure that the heater has been left for one (1) hour to cool before cleaning.

1. Turn off and disconnect from mains power, allow to cool.
2. Wipe unit over with a damp clean soft lint free cloth.
3. For stubborn marks you can use a mild dish washing solution on a damp clean soft lint free cloth.

NEVER allow water or a mild dish washing solution to enter or drip onto the heater.

NEVER use solvents, e.g. Petrol, Toluene, Methylated Spirits etc to clean the heater, as these will damage the surface finish and may cause a fire when unit is next used.

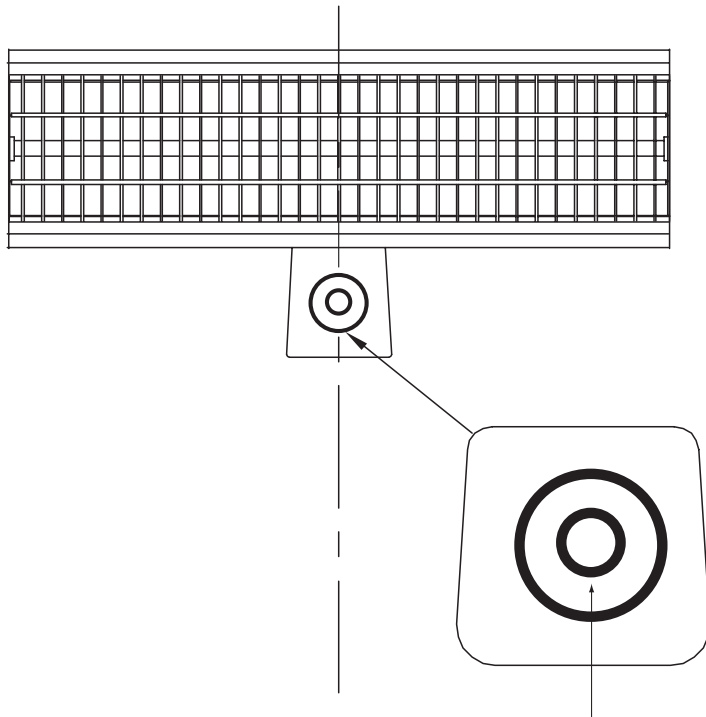

DISPLAY, THIS SHOWS:

OFF	-	O
LOW	-	L
MEDIUM	-	M
HIGH	-	H
OFF	-	O

**jumbuck®**



## PRODUCT WARRANTY

**Thank you for purchasing one of our quality Jumbuck products. Your Jumbuck product is covered against defects for a period of 12 months for parts and labour, repair or replacement. This warranty excludes surface rust and damage caused by abuse or neglect.**

This warranty in Australia is given by Sitro Group Australia Pty Ltd, Tel: 1300 174 876 Fax: 03 9543 9839. Email: sales@sitro.com.au

The warranty in New Zealand is given by Bunnings NZ Ltd, PO Box 14436, Panmure, Auckland, 1741. Tel: 09 -9780000 Fax: 09-9782222. Email marketing@bunnings.co.nz

Any claim under this warranty must be made within 12 months of the date of purchase of the product. Proof of purchase must be presented.

Goods presented for repair may be replaced by refurbished goods of the same type rather than being repaired. Refurbished parts may be used to repair the goods.

### **For Australian Customers**

To make a claim under the warranty please contact the store where the product was purchased or contact Sitro Group directly

### **CONDITIONS OF WARRANTY**

The warranty covers domestic use only and does not apply to commercial applications. You may submit details and proof to our store for consideration. The warranty covers manufacturer defects in materials, workmanship and finish under normal use. This warranty is provided in addition to other rights and remedies you may have under law: our goods come with guarantees which cannot be excluded under the Australian Consumer Law. You are entitled to replacement or refund for a major failure

and to compensation for other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

### **For New Zealand customers**

To make a claim under the warranty please contact the store where the product was purchased.

This warranty is provided in addition to other rights and remedies of the Consumer Guarantees act 1993.

Goods presented for repair may be replaced by refurbished goods of the same type rather than being repaired. Refurbished parts may be used to repair the goods.

### **Please thoroughly read conditions of warranty**

- The appliance must be operated and maintained in accordance with the instructions supplied in the operating manual
- Any repair does not extend the warranty period.
- Any parts other than original Jumbuck parts will void this warranty.

### **INSTALLATION CONDITIONS**

- All installations must conform to the applicable Electrical and Building standards as laid down by the local codes for state or region.

## **WHAT IS NOT COVERED IN THE WARRANTY**

- Removal or re-installation costs. This warranty does not cover costs for transit, nor in home service.
- Lack of maintenance, abuse, neglect, misuse, accidental or improper installation of this appliance.
- Scratches, dents, corrosion or discoloration caused by heat, abrasive chemical cleaners or chipping.
- Corrosion or damage caused by exposure to the elements such as insects, weather or hail.
- Cleaning and wear and tear; service calls of this nature are chargeable.
- Commercial use of the product.
- Unauthorised repairs or modifications during the warranty period.
- Consumable items, example – heating elements.

## **RECORD THE FOLLOWING INFORMATION**

Attach a copy of the purchase receipt here:

Date of Purchase \_\_\_\_\_

Purchased from \_\_\_\_\_

Location \_\_\_\_\_

Model Name and Number \_\_\_\_\_

Serial number \_\_\_\_\_

Receipt number \_\_\_\_\_

Note: The serial number is located on the outside of the appliance.

## **FOR TECHNICAL ASSISTANCE**

### **For Australian customers**

If you experience any technical issues with your Jumbuck product, in the first instance review the instruction manual or call the warranty service agent below.

### **For New Zealand customers**

If you experience any technical issues with your Jumbuck product, in the first instance review the instruction manual or call your local Bunnings warehouse.

## **WARRANTY CLAIMS**

### **For Australian customers**

Please contact Sitro Group Australia Pty Ltd,

Tel: 1300 174 876

Fax: 03 9543 9839

Email: sales@sitro.com.au

### **For New Zealand customers**

Please contact the store where the product was purchased.