

Acol Roof Window and AcolPlus Roof Window - Fixed and Opening

INSTALLATION INSTRUCTIONS - TILE ROOF

1. Inspect roof cavity for obstructions. Locating over hanging beams and under-purlins will require major structural alterations and is best avoided where possible.
2. From out on the roof, strip tiles away from intended location
3. Cut tile battens (and rafter if required) and nog out as required.
4. Fold down the soft flash that is tucked up at the bottom of the flashing tray and locate the window making sure you have a full overflash on the bottom row of tiles.
5. The tray can be fixed in place by tech-screwing through tray into battens (be sure to seal the screw with silicon).
6. Using angle grinder trim tiles to within 40mm of the awning. Ensure there is no fouling when the window is opened.
7. Before installing trimmed tiles, knock of the lugs off the underside so the tile sits flat over the flashing tray.
9. Finished window will have tiles over the top and side flashings with the bottom flashing and soft flash over the next row of tiles down.
10. There are four locating straps under the window these can be used to secure your window firmly to the underlying frame
11. Internal frame out should be to the outside dimension of the window frame. When gyprock or lining boards are installed this will result in a 10-15mm quirk.

