



Parts	List
-------	------


AD05524	Spool Assembly	

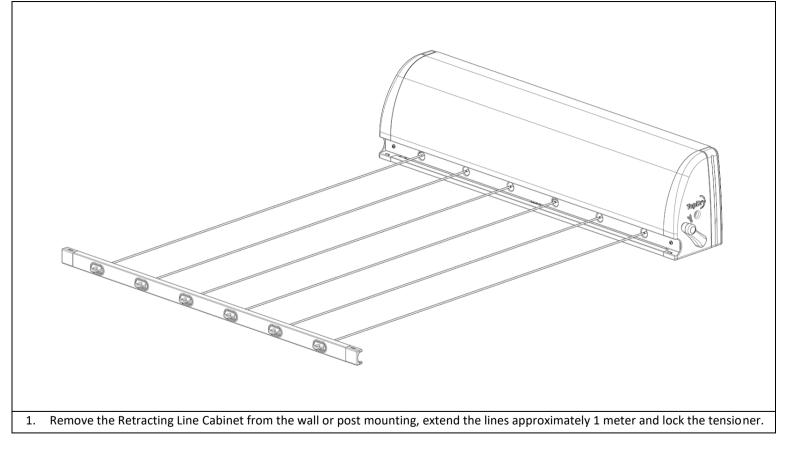


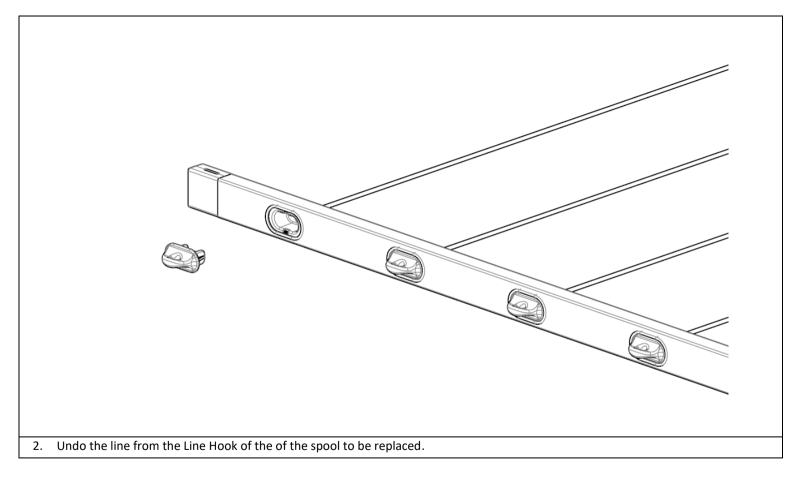


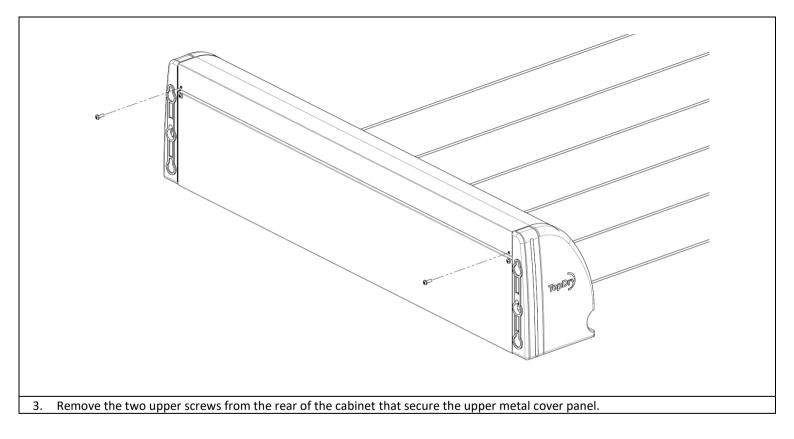

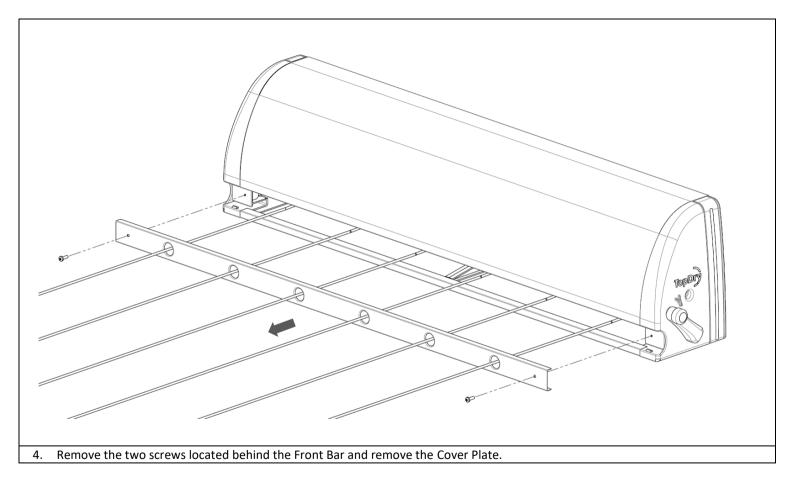


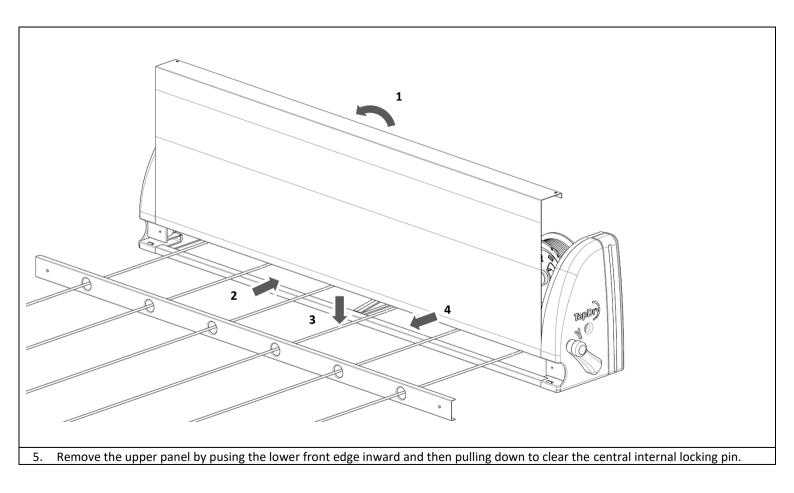

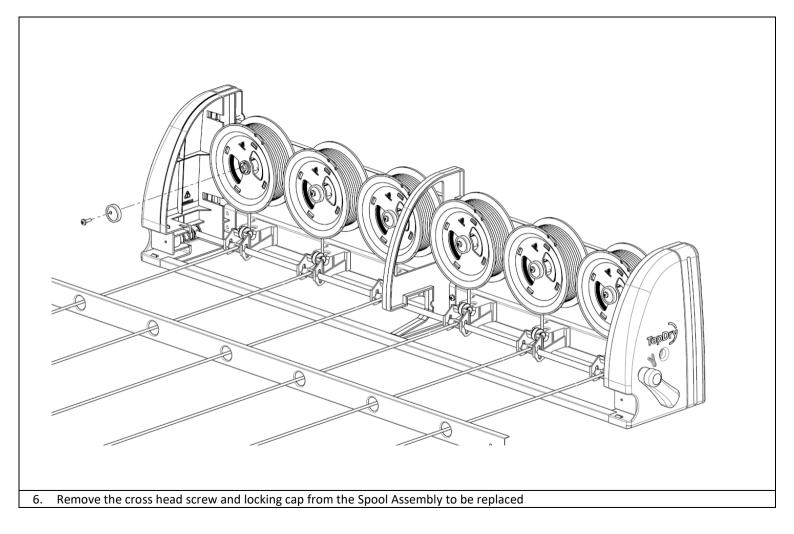

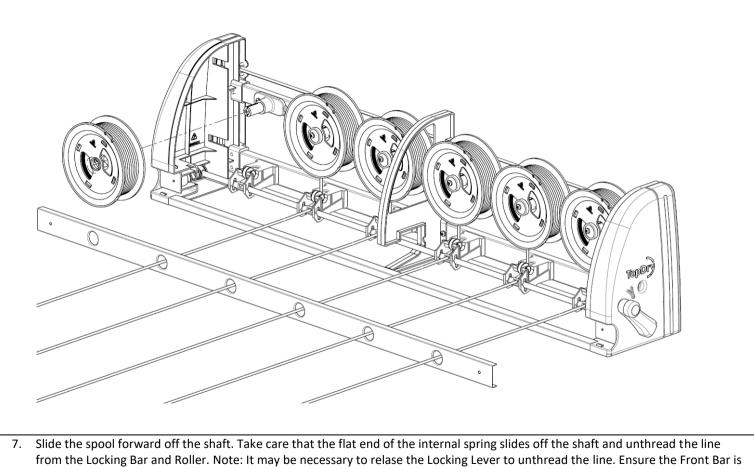



held securly while the lock is released to prevent it retracting back into the Cabinet.

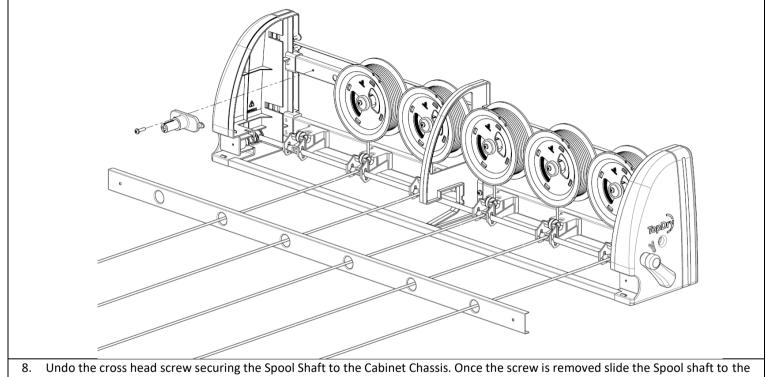


left to disengage the locking tab.

Install the new Spool Assembly

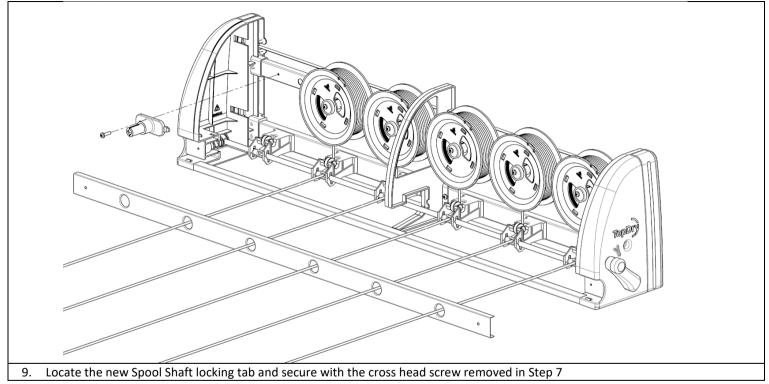

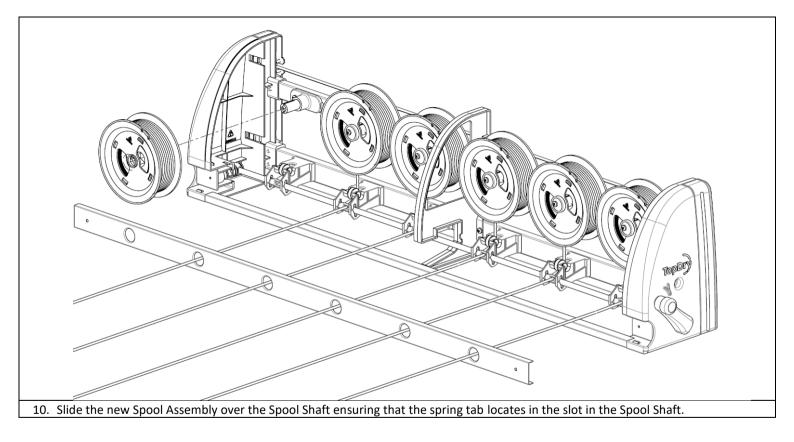


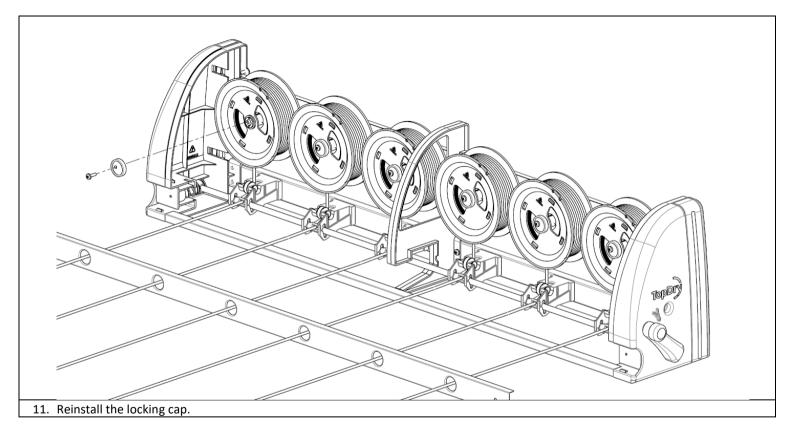



12. Unwind line from the new Spool Assembly and thread it around the Roller and through the locking Bar. Use the other spools as a reference.


Note: It may be necessary to relase the Locking Lever to unthread the line. Ensure the Front Bar is held securly while the lock is released to prevent it retracting back into the Cabinet

13. Ensuring the line length matches the other lines thread the line thought the Front Bar and secure to the tensioner.

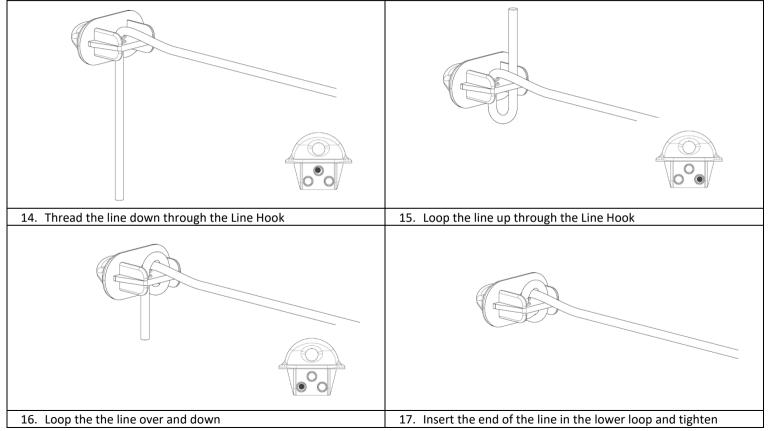

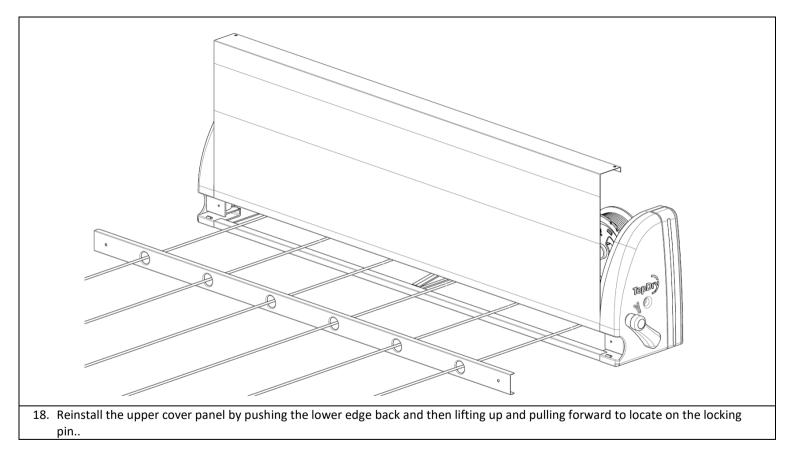

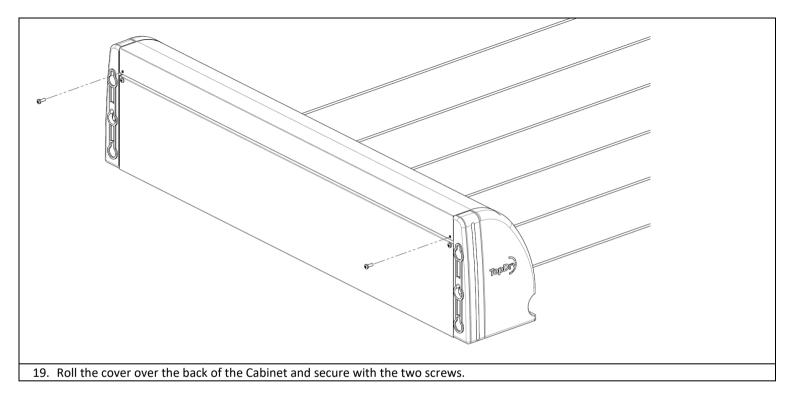

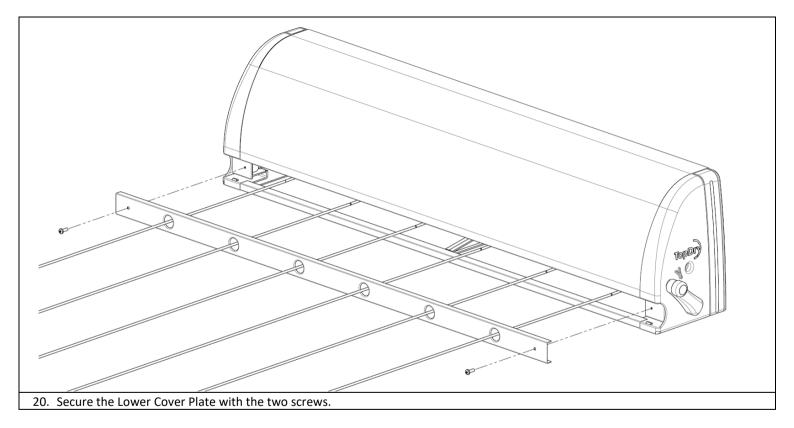

21. Release the Tension Lock and gently guide the Front Bar back to the cabinet. Remount the Cabinet to the original post or wall.

Sales Force National Pty Ltd (t/a Zenexus), ABN: 60 110 379 587. Phone: 1300 734 714 (AU), 0800 800 040 (NZ). E-mail: customerservice@zenexus.com.au(AU), customerservice@zene