Parts List		
AD05528	Winding Mechanism	
		E Contraction of the second se

Remove the Winding Mechanism



3. Unscrew the two screws using a cross head screwdriver	4. Remove the Handle Assembly















