

EUROMATIC



45cm Metal Pedestal Fan

INSTRUCTION MANUAL

Model Number PF45-JE

AFTER SALES SUPPORT

(AU) 1300 886 649 (NZ) 0800 836 761



E209

Contents

Important Safety Instructions	3
Product Overview	5
Getting Started	6
Instructions	8
Other Useful Information	9

Important Safety Instructions

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

Read this manual thoroughly before first use, even if you are familiar with this type of product. The safety precautions enclosed herein reduce the risk of fire, electric shock and injury when correctly adhered to. Make sure you understand all instructions and warnings. Keep the manual in a safe place for future reference, along with the completed warranty card, purchase receipt and carton. If you sell or transfer ownership of this product, pass on these instructions to the new owner. **Always follow basic safety precautions and accident prevention measures when using an electrical appliance, including the following:**

Electrical safety and cord handling

- **Voltage:** Make sure your outlet voltage and circuit frequency correspond to the voltage stated on the rating label. If this is not the case, do not use the fan.
- **Water:** To protect against fire and electric shock, do not immerse the cord, plug or fan in water or other liquid, or expose the electrical connections to water. Ensure your hands are dry before handling the plug or switching on the fan. Do not use the fan outdoors or on wet surfaces. Protect it from liquid spills.
- **Damage:** Check the power cord regularly for visible damage. If the cord is damaged, it must be replaced by the manufacturer, its authorised service centres or appropriately qualified personnel in order to avoid any hazards.
WARNING! Do not pick up or operate the appliance if the power supply cord, plug or housing is damaged, or after it malfunctions or has been dropped or damaged in any manner. In case of damage, contact our after sales support line for advice.
- **Protect the power cord:**
 - Do not operate the fan with the cord coiled up; always fully unwind.
 - Do not twist or kink the cord or let it touch heated surfaces.
 - Do not put any stress on the cord where it connects to the product.
 - Never carry the fan by the cord.
 - Arrange the cord away from any traffic area so no one will trip over it.
 - Do not run the cord under carpeting or cover it with rugs or runners.
- **WARNING! No extension cord, no timer:** Do not use this fan with an extension cord, plug adaptor, external timer or separate speed control device.
- **Connection:** To insert the plug, grasp it firmly and guide it into outlet.
- **Disconnection:** Unplug the appliance from the power outlet when it is not in use and before cleaning, servicing, moving or storing the appliance, and before removing a guard (grille). Grasp the plug and remove it from the outlet, do not pull the cord when disconnecting.
- **WARNING! Do not leave unattended during use!** Always switch it off and unplug when not in use, if left unattended, and before cleaning and storing.

Important Safety Instructions (Cont.)

- **RCD:** Unless your home is already fitted with a residual current device (safety switch), we recommend installing an RCD with a rated residual operating current not exceeding 30mA to provide additional safety protection when using electrical appliances. See your electrician for professional advice.


Usage conditions and restrictions

- **Domestic use only:** This fan is intended for indoor household use only. It is not suitable for commercial, industrial or outdoor use. Do not use it for anything other than its intended purpose (for example, do not use it as a dryer), and only use it as described in this manual. Any other use may cause fire, electric shock or injury. Do not use it for clothes drying.
- **Attachments:** The use of accessory attachments not recommended in this manual may cause injury or hazards.
- **Usage restriction:** This fan is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- **Children:** This fan is not a toy. Supervise children to ensure they do not play with it. Close supervision is necessary when any appliance is used by or near children.
- **Location:** Place the fan on a dry, flat, stable surface to avoid overturning.
- **Keep the top clear:** Do not place anything on top of fan.
- **Proper assembly:** Do not operate the fan until fully assembled with all parts. Do not use the appliance without the protective grilles (rear and front guards). Do not attempt to force the grille in order to stop or start the fan.
- **WARNING! DO NOT use the fan in the following areas:**
 - Near an open flame, a hot burner, oven or other source of high heat.
 - On a soft surface (such as carpet) or where it may tip over during use.
 - Outdoors or in areas of high humidity without suitable ventilation (such as in a bathroom, laundry area, near a sink, washer, pool or any source of water.
 - Near curtains or in tight corners, to enjoy maximum airflow.
 - In areas where paint, petrol, etc. is stored and there is a risk of explosion or fire from flammable gases, or in areas where substances are being sprayed.
- **CAUTION! Personal safety:** Avoid contact with moving parts. Never insert fingers, pencils or any other objects through the grilles when the fan is running. Keep hair and loose clothing well away from the fan when it is in use.
- **Free airflow:** Ensure nothing is blocking the airflow outlet and air intake grilles. Do not insert foreign objects into any opening as this may cause electric shock and/or a fire hazard.
- **Liability:** We assume no liability for any damages or personal injury caused by misuse of the product and/or failure to follow these instructions.

Product Overview

Parts list

- 1 Safety grilles (front and rear)
- 2 Fan blade
- 3 Motor housing with speed control and oscillation knob (at the back, not visible here)
- 4 Extension pole
- 5 Height-adjustment collar
- 6 Lower column
- 7 Base cover
- 8 Base

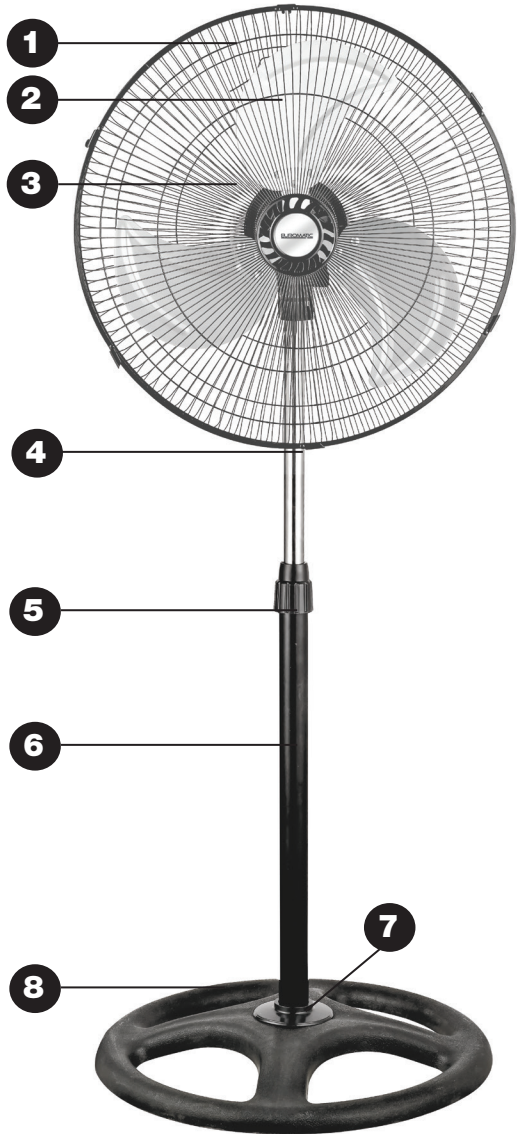

NOTE:

Due to continued product improvement, images and illustrations in this manual may vary slightly from the product purchased. All images in this manual are for reference purposes only. Parts are not necessarily pictured to scale.

Getting Started

Before first use

- **Unpacking:** This product has been packaged to protect it against transportation damage. Unpack the appliance and keep the original packaging carton and materials in a safe place. It will help prevent any damage if the product needs to be transported in the future, and you can use it to store the appliance when it is not in use. In the event it is to be disposed of, please recycle all packaging materials where possible.
- **Safe packaging disposal:** Plastic wrapping can be a suffocation hazard for babies and young children, so ensure all packaging materials are out of their reach and disposed of safely.
- **Inspection:** Unwind the cord to its full length and inspect it for damage. Do not use the appliance if the appliance or its cord have been damaged or are not working properly. In case of damage, contact our after sales support line for advice on examination, repair or return of the damaged product.
- **Documentation:** Make sure you have read and understood all instructions and warnings in this manual. Refer to the Product Overview, page 5, and assembly diagram, page 7, to familiarise yourself with the product and identify all parts. Pay particular attention to the safety instructions on the previous pages.
- **Assembly:** Your new fan has been shipped unassembled to reduce wastage of packaging material, paper cartons and weight. The illustration opposite shows how all the parts fit together.

WARNING: Electric shock hazard!

Do not plug the power supply cord into an electrical outlet until the fan is fully assembled.

Getting Started (Cont.)

Assembly


- Set the fan base on the floor and remove the screws and nuts.
- Place the lower column into its space on the base, aligning the four holes on the flange of the stand with the four holes on the base. Secure the column with the screws and nuts you removed earlier. Tilt up the base so you can tighten them.

- Unscrew the height adjustment ring, take it off the pole and slide the base cover down onto the round base. Pull the extension pole out as desired, then reattach the height adjustment ring and tighten to secure.

- Remove the large grille mounting nut from the motor housing. Mount the grille to the housing, making sure the handle is on top and two of the holes fit over the small pins on the motor housing. Secure the grille with the mounting nut.

- Mount the fan blade on the motor shaft and secure it with the screw, tightening it on the flat part of the shaft.

- To mount the front grille to the rear grille, unscrew the small screw and nut from the rim of the grille. Align the screw holes of both grilles,

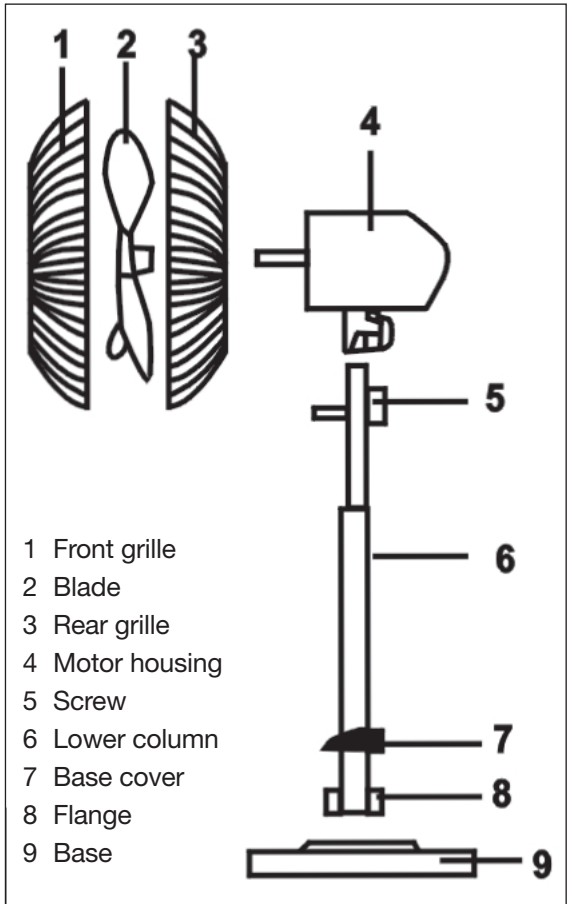

making sure the front grille sits under the tab at the opposite side. Tighten the screw and nut, then close the grille clips.

- Loosen the screw at the neck of the motor housing and place the motor housing with the assembled fan head on the extension pole. Then tighten the screw that holds the motor part securely in place on the pole.

Instructions

This pedestal fan is equipped with 3 speeds and an oscillation option. To use the fan, follow the simple instructions below.

- Place the fan on a dry, level surface where it will not overturn during use.
- Make sure the speed knob at the back of the motor housing is in the OFF position, then insert the power plug into an appropriate electrical outlet.

Speed selection

- Select the fan speed. Simply move the ON/Speed knob from the OFF [0] position to the desired setting.
 - 0 OFF
 - 1 SLOW
 - 2 MODERATE
 - 3 FAST

Oscillation

- To set the fan into oscillation, press down the oscillation knob on top of the motor housing. The fan head will pivot from one side to the other.
- For stationary operation, pull up the oscillation knob when the fan head is in the desired position.

Height adjustment

To adjust the height of the pedestal fan, loosen the height adjustment ring, adjust the extension pole to the desired height, then retighten the ring.

WARNING: Electric shock hazard!

Before assembly, cleaning or storage, ensure the fan is switched off and disconnected from the power outlet to prevent possible injury.

Other Useful Information

WARNING!

- Before cleaning, maintenance or moving the fan, switch off the fan and unplug it from the wall outlet.
- Do not immerse the fan in water or other liquids. Do not spray it with liquids. Do not allow water to drip on or into the fan motor housing.
- Never use petrol, solvents, harsh detergents, or abrasive or alkaline cleaners on the fan.

Cleaning and maintenance

- **Dusting:** Clean your fan periodically by lightly running a vacuum cleaner nozzle (soft brush) over the front and rear grilles to remove any dust or dirt that may have accumulated inside or on the unit. Alternatively, use a soft, dry cloth for dusting.
- **Stubborn stains:** Use a slightly damp, soapy cloth for stubborn stains but be sure the cloth is not too wet. Use caution around the motor housing area. Do not allow the motor or other electrical components to be exposed to water or other liquids.
- **End of season cleaning:** When you have finished using the fan at the end of the season, clean it thoroughly, as described above, to maintain it in good working order for the next season. Do not remove the guard (grille) for cleaning.
- **Storage:** When storing your fan in the off season, make sure to disassemble and clean it before storing. It is important to keep it in a safe, dry location, protected from dust. We recommend using the original carton for storage. Alternatively, if you have the space to store the appliance fully assembled, place a large plastic bag or piece of material over the top of the cleaned appliance for dust protection.
- **Service/repair:** The appliance requires no maintenance and contains no user-serviceable parts. Do not attempt to take it apart, repair or modify it. Do not operate the fan if its power cord or plug is damaged, or when it is working abnormally. In case of damage or malfunction, or if the cord is damaged, have the unit repaired by appropriately qualified personnel only, or contact our after sales support centre for advice on repair or replacement.

Other Useful Information (Cont.)

Technical specifications

Power	90W, 220-240v~, 50Hz
Fan speeds	3 (Slow - Moderate - Fast)
Dimensions (mm)	approx. 500 x 500 x 1250
Weight	approx. 5.58kg



CLASS II - DOUBLE INSULATED APPLIANCE

This symbol indicates that the appliance has been designed in such a way that it does not require a safety connection to electrical earth (ground).



The RCM Mark (Regulatory Compliance Mark) indicates that the product complies with the relevant guidelines of the ACMA as well as corresponding government requirements for the safety of electrical devices.

Compliance

This appliance has been fully tested and meets all requirements as set out by standards AS/NZS 60335.1 and AS/NZS 60335.2.80.

Responsible disposal

- At the end of its working life, make the appliance unserviceable by unplugging it from the power outlet and cutting the power cord.
- Do not throw this appliance out with your household rubbish. Electrical and electronic products contain substances which can have a detrimental effect on the environment and human health if disposed of inappropriately. Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling. Contact your local authorities for advice on recycling facilities in your area.

Warranty returns

Should you for any reason need to return this product for a warranty claim, make sure to include all accessories with the product.

Product does not work?

If you encounter problems with this product, or if it fails to perform to your expectations, make sure to contact our After Sales Support Centre on (AU) 1300 886 649 or (NZ) 0800 836 761 for advice.

Distributed by Tempo (Aust) Pty Ltd ABN 70 106 100 252

PO BOX 6056 Frenchs Forest, Australia NSW 2086

Customer Helpline:

(AU) 1300 886 649 (NZ) 0800 836 761

Email: info@tempo.org

For an electronic copy of this manual, please contact our after sales support centre.