

PART NO. 211223

#### В

# **MINI Soldering Torch Kit**

### TO IGNITE / EXTINGUISH

- 1. Slide the Lock Switch downward into the unlock position.
- 2. Press the Trigger slowly and hold it to activate the torch.
- 3. Releasing the Trigger will extinguish the flame and reset Lock Switch.

### **ACTIVATING A CONTINUOUS FLAME :**

- 1. Slide the Continuous Flame Switch to hold the flame after ignition and before releasing the Trigger.
- 2. To disengage the Continuous Flame Switch, press the Trigger again.

## THIS PRODUCT IS SUPPLIED WITHOUT GAS. IT REQUIRES FILLING BEFORE USE.

### FILLING/REFILLING GAS:

- 1. Ensure Continuous Flame Switch is in OFF position and soldering torch has cooled down.
- 2. Hold soldering torch in an upside down position.
- 3. Insert the butane canister refill nozzle into the Refilling Valve and push down.
- 4. Stop refilling when gas starts to overflow.

### For use with TradeFlame Butane Gas Refill 60 g - Part No. 2312 or 200g - Part No. 2323

### WARNING

To avoid injury or damage only ignite the torch when clear of face, hand, clothing or combustible materials. The burner/tip becomes extremely hot during and after operation, care must be taken to avoid accidental burns. Ensure flame is completely out after use.

Do not expose to temperature above 50°C / 120F.

Contains flammable gas under pressure, do not disassemble, puncture, drop or incinerate after use. Keep out of reach of children

