


Installation Instructions

CAUTION: ALWAYS HAVE BLIND ROLLED UP DURING HIGH WINDS.

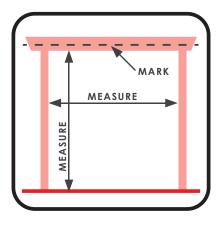

DRILL

Step One

Using a metal tape measure, measure the area where blind is to be fitted.


Align blind on structure & mark installation points ensuring blind is centred and 100% level/flat.

Step Two

Pre-Drill structure at points marked to ensure no splitting of timber.

Lift into place and secure using installation fittings included in pack.

Roll blind down entirely.

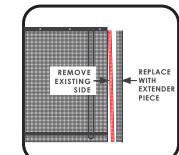

Available in: •5cm •10cm •15cm

Width Extenders*

*Sold Separately


Width Extenders are

available to increase the width of your blind by 5cm, 10cm or 15cm.

Simply un-zip existing blind side & replace Extender to cover larger openings.

Extenders can be used on either one side or both sides of the blind.

Wall Anchors*

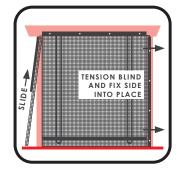

*Sold Separately

Wall Anchors are used to eliminate gaps for greater product coverage.

Simply slide blind sides through Wall Anchor, gently add tension to flatted out blind & fix Side Seals onto the structure.


Cord Operation

Twin Dual Pulleys allow for either right of left hand side operation. Blinds come **pre-set with right side operation**, to switch to left side, simply remove Tassels from cord ends, unclip cords from blind and re-feed cords through pulleys as per diagram below.

RIGHT SIDE OPERATION

CORD 1



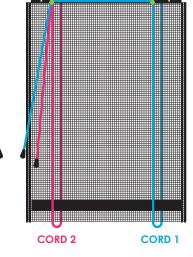

CAUTION: ALWAYS HAVE BLIND ROLLED UP DURING HIGH WINDS.

CORD 2

SECURE INTO


MARKED POSITION

To avoid creating a possible strangulation hazard for children, the corded internal window covering must be installed in such a way that a loose cord cannot form a loop 220mm or longer at a height of less than 1600mm above floor level.

A cord guide may be installed lower than 1600mm above floor level if the cord is sufficiently secured or tensioned to prevent a loop 220mm or longer from being formed.

If a cord guide is installed lower than 1600mm above floor level it must be designed to prevent a child from being able to remove the cord. If a cleat is used to secure the cord it must be at least 1600mm above floor level because a child is capable of unwinding a cord from a cleat.

Zip Joiner

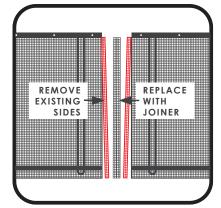

A **bonus Zip Joiner** has been included in this pack to join blinds together if required.

Simply un-zip existing blind side & replace with Joiner to create doorways or cover extra large openings.