

148mm

SETTING UP YOUR MOWER

A CUT ABOVE™ **RYOBI**

STEP 1: TOOLS INCLUDED

Identify and locate the 2 bolts, 2 washers and 1 installation T40 wrench.



STEP 2: ASSEMBLY



Align the handles with the brackets on the Mower by securing the quick-release fasteners in position. This ensures that the handles can stay still whilst installation takes place.



Push the bolts through the holes located on the lower half of the handles, ensuring that a washer is in between the handle and the bracket on the Mower. Insert the bolt through the hole and into the bracket on the mower on both sides prior to tightening.



Then, carefully fully tighten the bolts onto the bracket by using the installation T40 wrench. Try to keep the bolt in the handles directly in line with the holes in the bracket as much as possible when tightening.



Finally, simply adjust the quick release fasteners, flip the handles up to an operating position and fully extend the telescoping handles to confirm that the bolts have been installed.

*Product may differ from one shown above

STEP 3:

Remember to register your new mower at:
<https://www.ryobi.com.au/register>



BRUSHLESS

MORE RUNTIME / INCREASED PERFORMANCE

*Standard 4 year warranty, with an additional 2 year warranty available subject to online registration within 30 days of purchase. Batteries and chargers have a 3 year warranty only. Register via: ryobi.com.au or ryobi.co.nz.



961091090-02

EDITION : A		Mover Setup Instruction				SCALE : 100%	
	P/N	961091090-02	MODEL NO	090818033D09/090818033D09_RLM36X46S2 (Type II)_ANZ	COLOR	Black+Pantone 388C+485C Total: 6C	
	Item ID		VENDOR		MATERIAL	80G art paper	ADHESIVE:
	Rev.	01	ECN #		FINISHING		
	SIZE	148*210mm +/-0.2mm	DATE	2020.05.28			
Graphic Designer Approved By: suga.zhong	Electrical Engineer Approved By:	Quality Assurance Approved By:	Eng. Manager Approved By:	Legal Dept Approved By:	For Rating LABEL	PRINTER:	
						RIBBON:	
						MAX RUBBING TIMES:	

Die Cut Displayed in Blue Color

210mm