



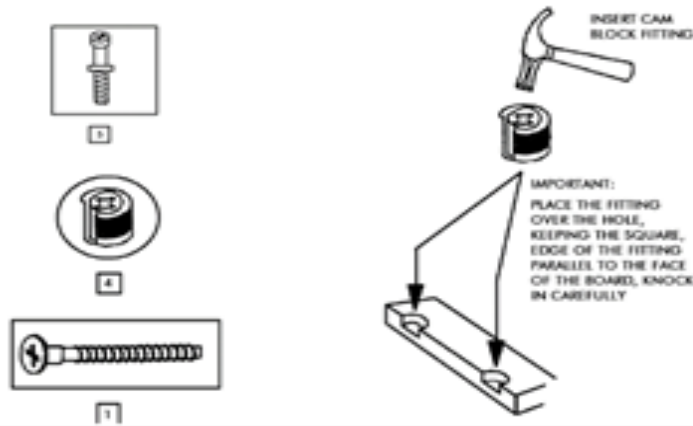

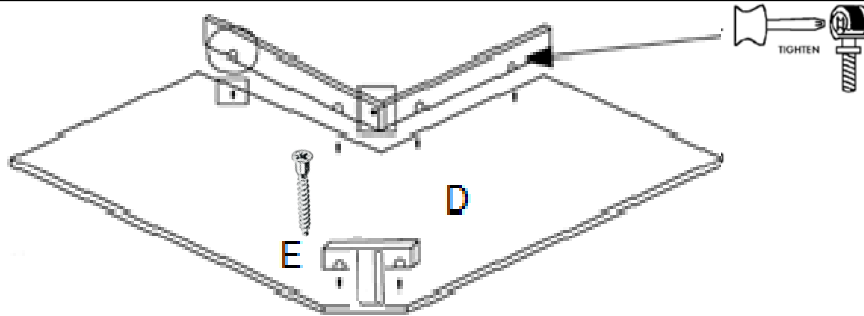








ASSEMBLY INSTRUCTION FOR EXC-CNR-H




HARDWARE LIST

NO	MODEL	DESCRIPTION	QTY	NO	MODEL	DESCRIPTION	QTY
1		CONFIRMAT SCREWS 50mm x 5mm	27	6		WHITE CAMS	6
2		CAPS	20	7		CAM PINS	6
3		DOWELS	5	8		16mm PAN HEAD SCREWS	2
4		END FLANGES	4	9		25mm PAN HEAD SCREWS	2
5		16mm FLANGE SCREW	8	10		"L" SAFETY BRACKET	2
				11		HANGING RAIL	2

WARNING: Serious injury or death can be caused by toppling furniture


Help prevent tip-over:

- Anchor this product to a wall or other suitable surface
- Check anchors regularly
- Avoid placing TVs on top unless the TV is also anchored
- Use drawer locks to prevent children climbing

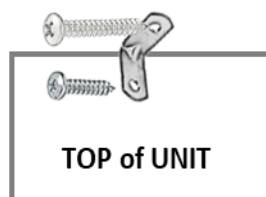

When attaching unit to wall put safety bracket in middle of unit with 16mm pan head screw then 25mm pan head screw into wall. For plasterboard without a stud it is recommended to use a plug with screw (not provided).

ASSEMBLY INSTRUCTION FOR EXC-CNR-H

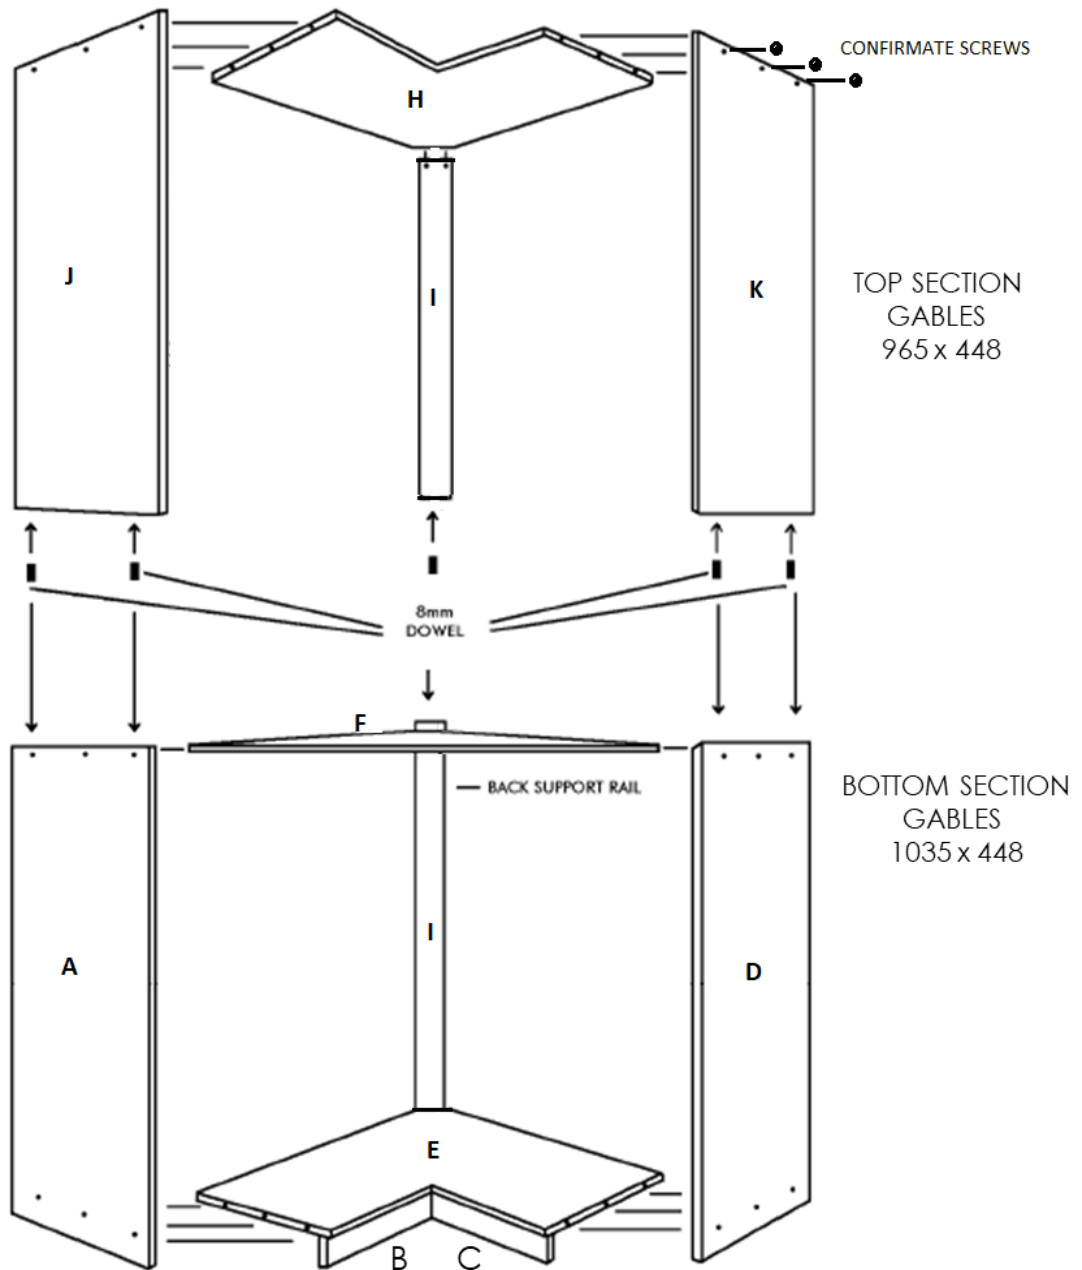

1. ASSEMBLE TOP AND BOTTOM SECTION SEPARATELY.
2. THE FIXED SHELVES ARE MARKED E.F & H.
3. WHEN BOTH SECTIONS ARE ASSEMBLED, INSERT 8MM DOWELS INTO THE GABLES ON THE BOTTOM SECTION THEN CAREFULLY PLACE THE TOP SECTION ONTO THE DOWELS.
4. SCREW IN ONE END OF THE FLANGE, THEN INSERT THE RAIL ADD THE OTHER FLANGE ONTO THE RAIL AND SCREW INTO POSITION. DO THIS IN THE TOP AND



BOTTOM HALF.