 



 
ASSEMBLY INSTRUCTION FOR EXC-CNR




3



 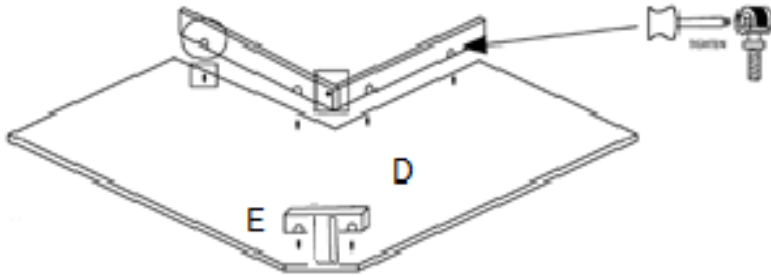



4

 


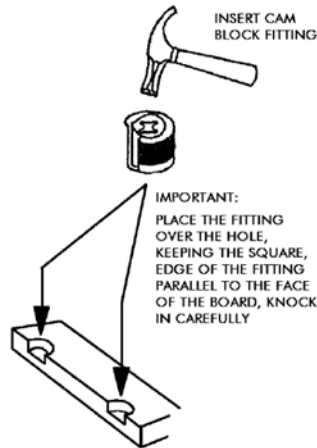



1



HARDWARE LIST

NO	MODEL	DESCRIPTIONS	QTY
1		CONFIRMATE SCREW	44
2		CAPS	42
3		SHELF SUPPORT PINS	10
4		WHITE CAM BLOCKS	6

NO	MODEL	DESCRIPTIONS	QTY
5		CAM BLOCK PIN	6
6		WOODEN DOWEL	5
7		WALL BRACKET	2
8		UNIT SCREW	2
9		WALL SCREW	2



 
WARNING:

Serious injury or death can be caused by toppling furniture

Help prevent tip-over:

- Anchor this product to a wall or other suitable surface
- Check anchors regularly


- Avoid placing TVs on top unless the TV is also anchored
- Use drawer locks to prevent children climbing



TOP of UNIT

When attaching unit to wall put safety bracket in middle of unit with 16mm pan head screw then 25mm pan head screw into wall. For plasterboard without a stud it is recommended to use a plug with screw (not provided).

ASSEMBLY INSTRUCTION FOR EXC-CNR

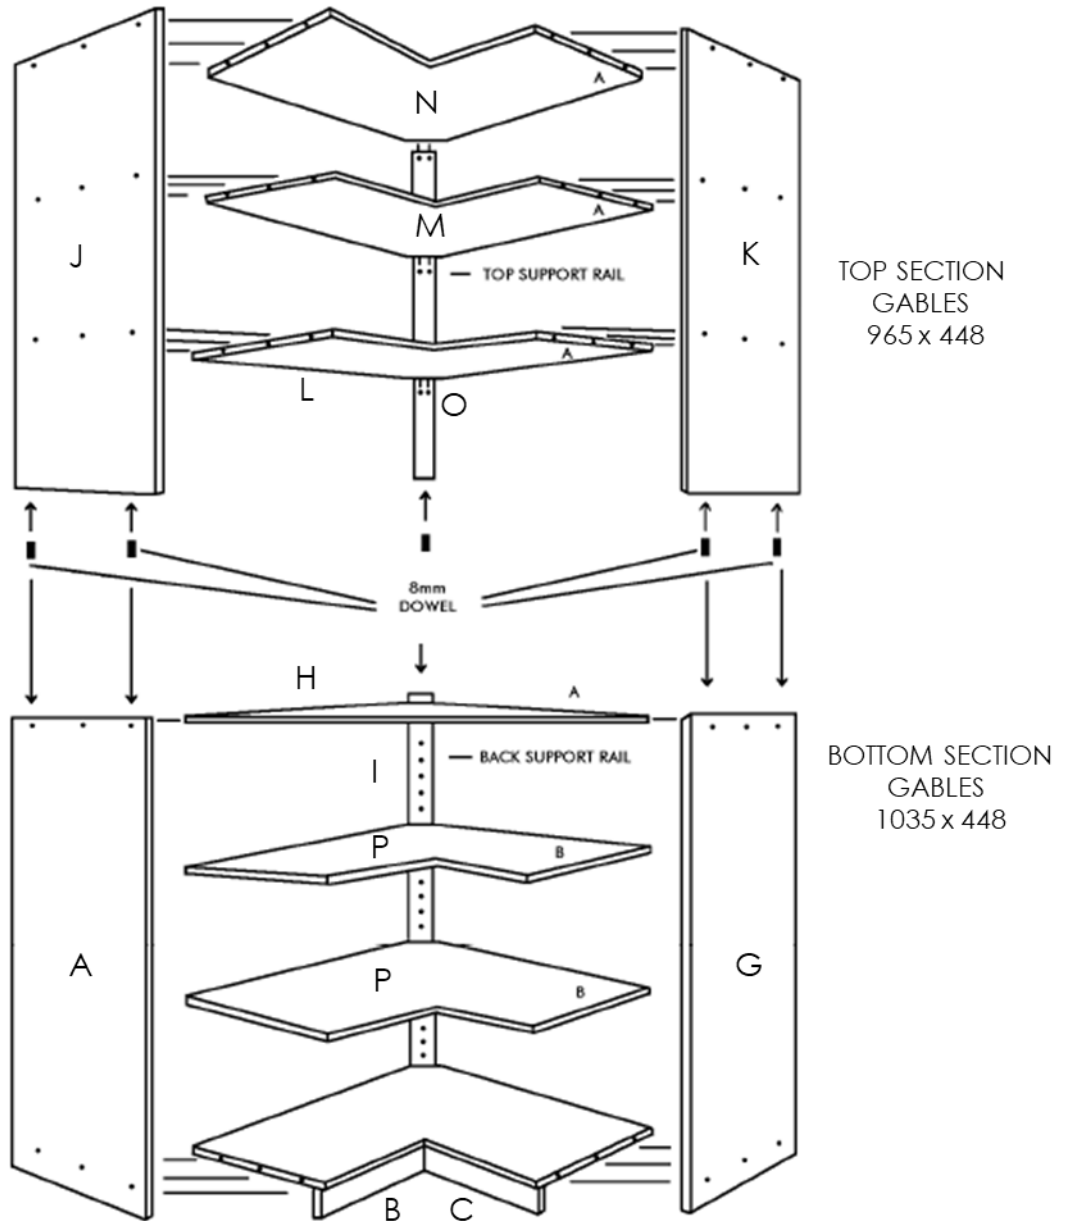

1. ASSEMBLE TOP AND BOTTOM SECTION SEPARATELY.
2. THE FIXED SHELVES ARE MARKED H,L,M & N, THE ADJUSTABLE SHELVES ARE MARKED P.
3. WHEN BOTH SECTIONS ARE ASSEMBLED, INSERT 8MM DOWELS INTO THE GABLES ON THE BOTTOM SECTION THEN CAREFULLY PLACE THE TOP SECTION ONTO THE DOWELS.
4. THE UNIT IS NOW COMPLETED TO MOVE INTO POSITION.