

Product Safety Assessment Sheet

PLANT INFORMATION

PSA Ref #: 00073 Model No: CC60R Plant Name: CROMMELINS PLATE COMPACTOR CC60R Manufacturer: Crommelins Machinery WA Manufacturer's Website: www.crommelins.com.au Web Link for Plant: www.crommelins.com.au Potential noise level in dB: 85 to less than 90 **Required hearing protection class: 1 Mandatory Personal Protective Equipment:**







Dust Mask Foot



Protective Clothing

RISK ASSESSMENT INFORMATION

Operator Competency: Plant Licence Not Required

Potential Hazard(s)	Risk Level	Co
Explosion or fire from fuel vapours.	Medium	• rr s ii c e s r
Exposure to ultraviolet radiation if working outdoors.	Medium	• \ t
Hearing damage from excessive noise.	Medium/Low	•
Manual handling hazard.	Medium/Low	• H r p r li
Coming into contact with hot parts of the engine.	Medium/Low	• T ti n c
	Explosion or fire from fuel vapours. Exposure to ultraviolet radiation if working outdoors. Hearing damage from excessive noise. Manual handling hazard. Coming into contact with hot	Explosion or fire from fuel vapours.MediumExplosion or fire from fuel vapours.MediumExposure to ultraviolet radiation if working outdoors.MediumHearing damage from excessive noise.Medium/LowManual handling hazard.Medium/LowComing into contact with hotMedium/Low

ontrol Measure(s)

- Stop the engine before refuelling. Do not refuel while hot. Avoid spillage of fuel when refuelling. Ensure the fuel cap is properly secured after refuelling. Carry out visual inspection for fuel leaks and repair before operation. Keep flammables away from the engine. Warning label on engine. Do not smoke while operating, servicing, or refuelling this machine.
- Wear sunscreen, hat, long sleeves and long trousers.
- Hearing protection with a rating of 20db must be worn. Warning label on plant.
- Handles are provided on the plant for the required multiple lift. A lifting frame is provided on the plant for a mechanical lift. Do not attempt a single person lift. Use correct lifting techniques. Weight 58 kgs.
- The muffler is fitted with a heat shield. Let the engine cool down before attempting any maintenance.. Avoid contact with hot components. Warning label on engine.

Inhaling exhaust or fuel fumes.	Medium/Low	 Only operate in a well ventilated area. Do not operate in a confined space. Avoid breathing petrol fumes. Avoid skin contact with petrol. Warning label on engine.
Injury or ill health due to exposure to excessive vibration.	Low	 The operator needs to take regular breaks to provide postural relief for safe work practises.
Injury or ill health due to exposure to dust.	Low	 An approved dust mask must be worn.
Coming into contact with moving parts.	Low	 Belt guard fitted to plant. Do not remove guards or covers.
Customer Identified Hazard(s)		
Key Operating Instructions Please refer to the User Guide ar Use unleaded fuel only.	nd Operator's Man	nual for Operating Instructions
TO START turn on the fuel tap by Ensure the stop switch is in the C For cold starting close the choke Start the engine by pulling the red (This will prevent the clutch engage As the engine warms up return the	N position. lever. coil rope with the t ging until operatio	hrottle in low speed position. n is ready to commence)
To commence operation open the Maintain control of the machine w	e throttle to full spe	eed.

TO STOP the machine return the throttle to the low speed position, turn the stop switch to OFF and turn off the fuel tap.

The Safety Information on this assessment has been developed for the Hire and Rental Industry to assist in the safe operation of this equipment.

This information contains general information only and should not be relied upon as a substitute for professional advice, which the user should seek before operating.

Once printed this is an uncontrolled copy.