

# cooking collection

---

Instructions for use and warranty details

Ceramic Cooktop  
Model No.: CCT6010  
CCT8010

 **kLEENmaid**

Dear Customer,

Thank you and congratulations for choosing Kleenmaid.

Your new appliance has been designed and meticulously tested to ensure that it meets all your culinary requirements, and has been carefully manufactured using top quality materials to give you years of reliable performance.

For best results, carefully read the instructions on how your new appliance is to be installed. Correct installation will avoid delays and unnecessary service call costs.

Once installation is complete, please read this instruction manual carefully and get to know the controls and the features of your new Kleenmaid appliance. These simple instructions will enable you to achieve excellent results from the very first time you use it.

Again, congratulations and thank you for choosing The Best You Can Own.

KLEENMAID

# SUMMARY

---

SAFETY .....	4
<b>PRECAUTIONS BEFORE USING</b> .....	4
<b>USING THE APPLIANCE</b> .....	4
<b>PRECAUTIONS NOT TO DAMAGE THE APPLIANCE</b> .....	5
<b>PRECAUTIONS IN CASE OF APPLIANCE FAILURE</b> .....	6
<b>OTHER PRECAUTIONS</b> .....	6
DESCRIPTION OF THE APPLIANCE.....	6
<b>TECHNICAL CHARACTERISTIC</b> .....	6
USE OF THE APPLIANCE .....	7
<b>SENSITIVE TOUCH</b> .....	7
<b>DISPLAY</b> .....	7
STARTING-UP AND APPLIANCE MANAGEMENT.....	8
<b>BEFORE THE FIRST USE</b> .....	8
<b>“SLIDER” ZONE AND TIMER SETTING ZONE</b> .....	8
<b>STARTING-UP</b> .....	8
<b>RESIDUAL HEAT INDICATION</b> .....	8
<b>EXTENSION ZONE</b> .....	8
<b>TIMER</b> .....	9
<b>AUTOMATIC COOKING</b> .....	10
<b>PAUSE FUNCTION</b> .....	10
<b>RECALL FUNCTION</b> .....	10
<b>« KEEP WARM » FUNCTION</b> .....	10
<b>CONTROL PANEL LOCKING</b> .....	11
COOKING ADVICE .....	12
<b>EXAMPLES OF COOKING POWER SETTING</b> .....	12
MAINTENANCE AND CLEANING.....	12
WHAT TO DO IN CASE OF A PROBLEM .....	13
ENVIRONMENT PRESERVATION .....	13
INSTALLATION INSTRUCTIONS .....	14
ELECTRICAL CONNECTION .....	15

# SAFETY

---

## Precautions before using

- Unpack all the materials.
- The installation and connection of the appliance must be done by a qualified electrician. The manufacturer can not be responsible for damage caused by building-in or connection errors.
- The appliance must be installed in proper worktop.
- This domestic appliance is exclusively for the cooking of food, to the exclusion of any other domestic, commercial or industrial use.
- Remove all labels and self-adhesives from the ceramic glass.
- Do not change or alter the appliance.
- The cooking plate can not be used as a working surface.
- The appliance must be grounded and connected conforming to local standards.
- Do not use an extension cable to connect it.
- The appliance can not be used above a dishwasher or a tumble-dryer: steam may damage the electronic components.
- The appliance is not intended to be operated by means of external timer or separate remote control system.

## Using the appliance

- Switch the heating zones off after using.
- Keep an eye on cooking using grease or oils: they may quickly ignite.
- Be careful not to burn yourself while or after using the appliance.
- Make sure no cable of any fixed or moving appliance contacts with the glass or the hot saucepan.
- Never cover the appliance with a cloth or a protection sheet. This may become very hot and catch fire.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance is not intended to be operated by means of an external timer or separate remote-control system.

### Precautions not to damage the appliance

- Unfinished pan bottoms or damaged saucepans (non enamelled cast iron pots,) may damage the ceramic glass.
- Sand or other abrasive materials may damage ceramic glass.
- Avoid dropping objects, even small ones, on the vitroceramic glass.
- Do not hit the edges of the glass with saucepans.
- Make sure that the ventilation of the appliance works according to the manufacturer's instructions.
- Do not put or leave empty saucepans on the vitroceramic hobs.
- Sugar, synthetic materials or aluminium foil must not contact the heating zones. These may cause breaks or other alterations of the vitroceramic glass by cooling: switch off the appliance and take them immediately off the hot heating zone (be careful: do not burn yourself).
- **WARNING:** Danger of fire: do not store items on the cooking surface.
- Never place any hot saucepan over the control panel.
- If a drawer is situated under the installed appliance, make sure the space between the content of the drawer and the underside of the appliance is at least 2 cm. This is essential to ensure correct ventilation.
- Never put any inflammable object (eg. sprays) into the drawer situated under the vitroceramic hob. Cutlery drawers must be resistant to heat.

## Precautions in case of appliance failure

- If a defect is noticed, switch off the appliance and turn off the electrical supply.
- If the ceramic glass is cracked or fissured, you must disconnect the appliance (at the switchboard) and contact the after sales service.
- Repairing has to be done by specialists. Do not open the appliance by yourself.
- **WARNING:** If the surface is cracked, switch off the appliance to avoid the possibility of electric shock.

## Other precautions

- Make sure that the cooking pan is always centred on the cooking zone. The bottom of the pan should cover as much as possible the cooking zone.
- Do not place aluminium or synthetic material containers on the hob: they could melt on residual hot cooking zones.
- **NEVER** try to extinguish a fire with water, but switch off the appliance and then cover flame e.g. with a lid or a fire blanket.


## DESCRIPTION OF THE APPLIANCE

---

Technical characteristic

Type	Total Power	Position of the heating zone	Nominal Power	Diameter
CCT6010	7000 W	Front left Rear left Rear right Front right	1000 / 2200 W 1200 W 1500 / 2400 W 1200 W	135 / 210 mm 145 mm 170 x 265 mm 145 mm
CCT8010	7600 W	Front left Rear left Rear right Front right	1000 / 2200 W 1200 W 1500 / 2400 W 1800 W	135 / 210 mm 145 mm 170 x 265 mm 180 mm

Control panel

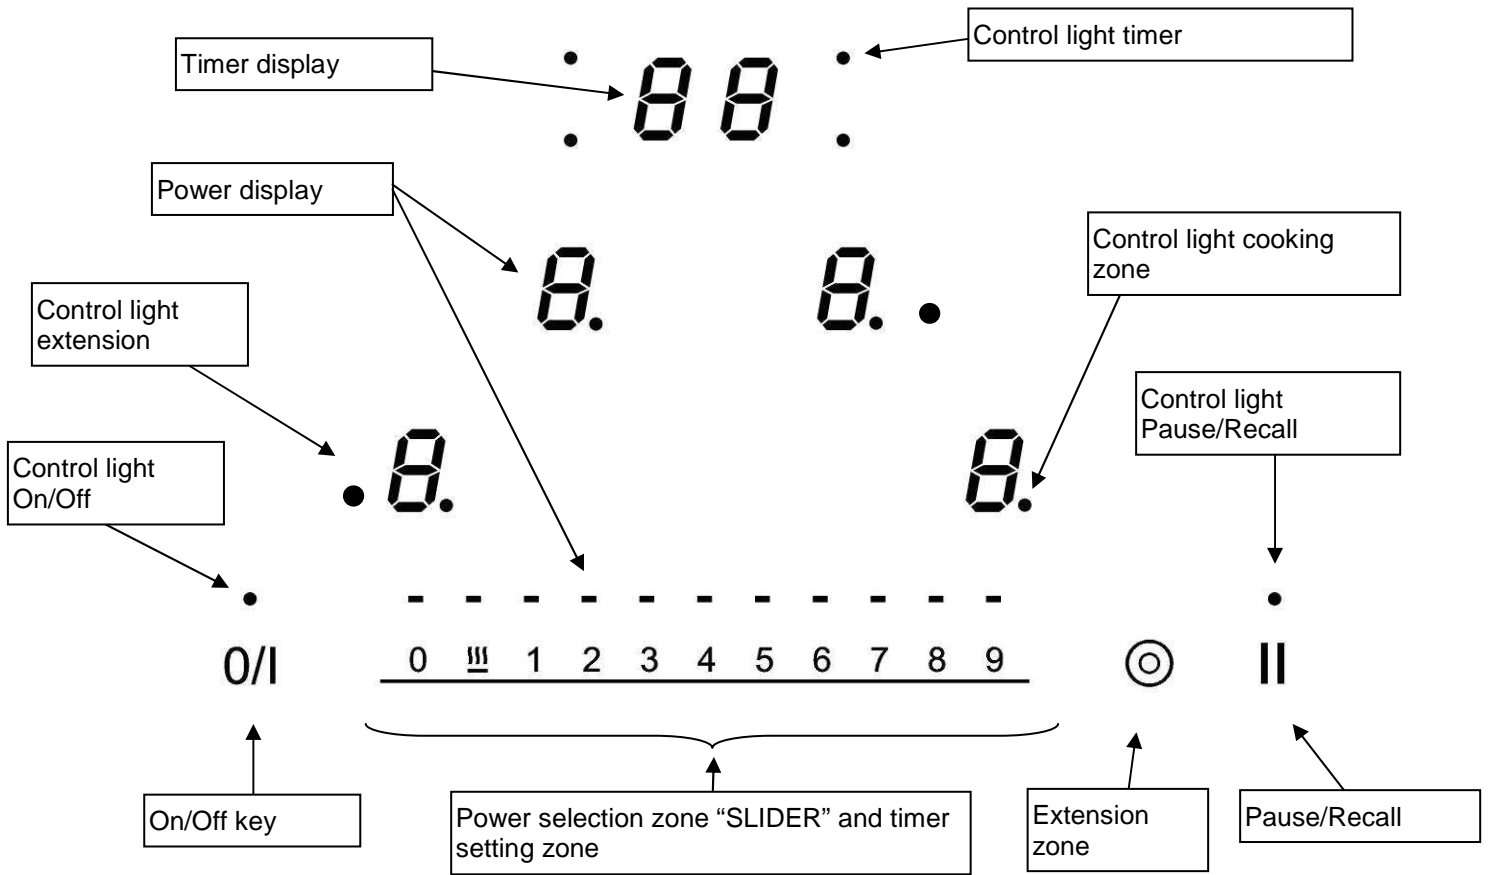

## USE OF THE APPLIANCE

### Sensitive touch

Your ceramic hob is equipped with electronic controls with sensitive touch keys. When your finger presses the key, the corresponding command is activated. This activation is validated by a control light, a letter or a number in the display and/or a “beep” sound.

**For normal use press only one key at any time.**

### Display

<u>Display</u>	<u>Designation</u>	<u>Function</u>
0	Zero	The heating zone is activated.
1...9	Power level	Selection of the cooking level.
A	Heat accelerator	Automatic cooking.
E	Error message	Electronic failure.
H	Residual heat	The heating zone is hot.
L	Locking	Control panel locked
U	Keep warm	Maintain automatically at 70°C.
	Pause	The hob is in pause.


# STARTING-UP AND APPLIANCE MANAGEMENT

Before the first use

Clean your hob with a damp cloth, and then dry the surface thoroughly. Do not use detergent. This may cause blue-tinted colour on the glass surface.

“SLIDER” zone and timer setting zone

To select the power with the slider, slide your finger on the “SLIDER” zone. You can also directly access a particular level if you put your finger directly on the chosen level.

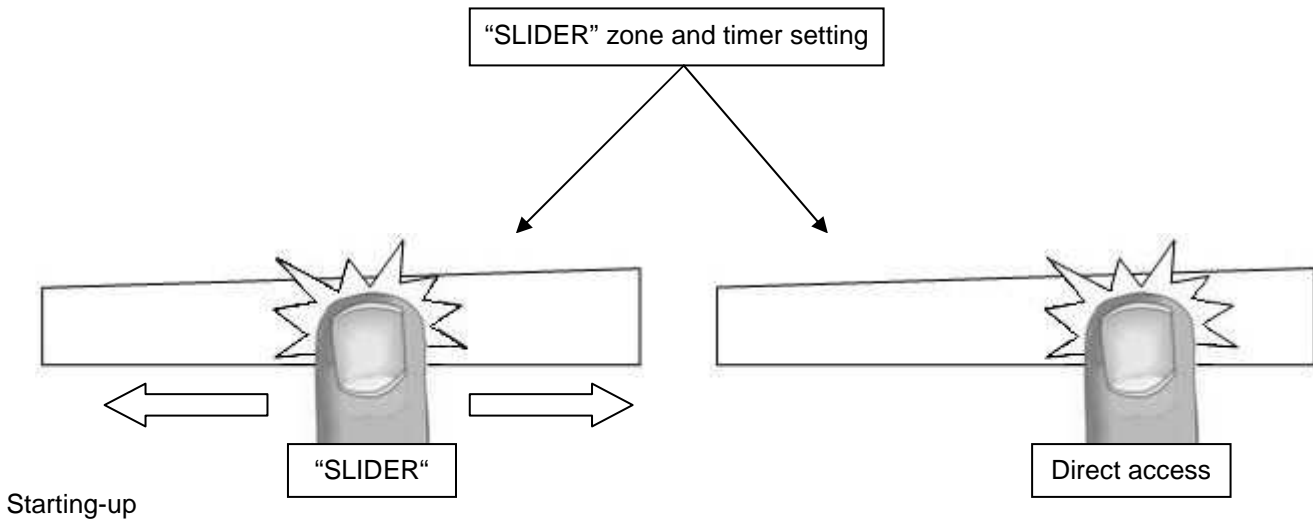

Starting-up

- Start up / switch off the hob:

<u>Action</u>	<u>Control panel</u>	<u>Display</u>
To start	Press key [ 0/I ]	4 x [ 0 ] are blinking
To stop	Press key [ 0/I ]	Nothing or [ H ]

- Start up / switch off a heating zone:

<u>Action</u>	<u>Control panel</u>	<u>Display</u>
Zone selection	Press display [ 0 ] selected	[ 0 ] and control light on
To set (adjust the power)	Slide on the “SLIDER” to the right or to the left	[ 0 ] to [ 9 ] or [ U ]
To stop	Slide to [ 0 ] on “SLIDER” or press on [ 0 ]	[ 0 ] or [ H ] [ 0 ] or [ H ]

If no action is made within 20 seconds the electronics returns to waiting position.

Residual heat indication

After switching off of a heating zone or the complete stop of the hob, the heating zones are still hot and indicate [ H ] on the display.

The symbol [ H ] disappears when the heating zones may be touched safely.

As long as the residual heat indicators are on, don't touch the heating zones and don't put any heat sensitive object on them. **There are risks of burn and fire.**

Extension zone

<u>Action</u>	<u>Control panel</u>	<u>Display</u>
select zone	Press display [ 0 ]	Control light is blinking
Select the power level	Slide on the “SLIDER”	[ 0 ] to [ 9 ]
Switch off	Touch key [⊙]	Extension zone light is off
Switch on	Touch key [⊙]	Extension zone light is on



## Timer

The timer can be used simultaneous with all 4 heating zones and with different time settings (from 0 to 99 minutes) for each heating zone.

- Setting and modification of the cooking time :

### Example for 16 minutes at power 7:

<u>Action</u>	<u>Control panel</u>	<u>Display</u>
Zone selection	Press display [ 0 ]	[ 0 ] and control light on
Select the power level	Slide on the "SLIDER" to [ 7 ]	[ 7 ]
Select « Timer »	Press display [ CL ]	[ 00 ]
Set the units	Slide on the "SLIDER" to [ 6 ]	[ 0 fixed ] [ 6 blinking ]
Validate the units	Press display [ 06 ]	[ 0 blinking ] [ 6 fixed ]
Set the tens	Slide on the "SLIDER" to [ 1 ]	[ 1 blinking ] [ 6 fixed ]
Validate the tens	Press display [ 16 ]	[ 16 ]

The time is confirmed and the cooking starts.

- To stop the cooking time:

### Example for 13 minutes at power 7:

<u>Action</u>	<u>Control panel</u>	<u>Display</u>
Zone selection	Press display [ 0 ] selected	[ 0 ] and control light on
Select « Timer »	Press key [ 13 ]	[ 13 ]
Deactivate the units	Slide on the "SLIDER" to [ 0 ]	[ 1 fixed ] [ 0 blinking ]
Validate the units	Press display [ 10 ]	[ 1 blinking ] [ 0 fixed ]
Deactivate the tens	Slide on the "SLIDER" to [ 0 ]	[ 0 blinking ] [ 0 fixed ]
Validate the tens	Press display [ 00 ]	[ 00 ]

Automatic stop at the end of the cooking time:

As soon as the selected cooking time is finished the timer display will blink [ 00 ] and a sound rings.

To stop the sound and the blinking, press the key [ 00 ].

- Egg timer function :

### Example for 29 minutes :

<u>Action</u>	<u>Control panel</u>	<u>Display</u>
Activate the hob	Press display [ 0/1 ]	Zone control lights are on
Select« Timer »	Press display [ CL ]	[ 00 ]
Set the units	Slide on the "SLIDER" to [ 9 ]	[ 0 fixed ] [ 9 blinking ]
Validate the units	Press display [ 09 ]	[ 0 blinking ] [ 9 fixed ]
Set the tens	Slide on the "SLIDER" to [ 2 ]	[ 2 blinking ] [ 9 fixed ]
Validate the tens	Press display [ 29 ]	[ 29 ]

After a few seconds the control light stops blinking.

As soon as the selected cooking time is finished the timer display will blink [ 00 ] and a sound will be heard.

To stop the sound and the blinking, press the display [ 00 ]. The hob switches off.

## Automatic cooking

All the cooking zones are equipped with an automatic “go and stop” cooking function. The cooking zone starts at full power for a certain time, then reduces automatically its power to the pre-selected level.

- Start-up :

<u>Action</u>	<u>Control panel</u>	<u>Display</u>
Zone selection	Press display [ 0 ] selected	[ 0 ] and control light on
Full power setting	Slide on the “SLIDER” to [ 9 ]	Pass from [ 0 ] to [ 9 ]
Automatic cooking	Re-press on display “SLIDER” [ 9 ]	[ 9 ] is blinking with [ A ]
Select Power level (for example « 7 »)	Slide on the “SLIDER” to [ 7 ]	[ 9 ] pass to [ 8 ] [ 7 ] [ 7 ] is blinking with [ A ]

- Switching off the automatic cooking :

<u>Action</u>	<u>Control panel</u>	<u>Display</u>
Zone selection	Press [ 7 ] from the zone	[ 7 ] blinking with [ A ]
Power level selection	Slide on the “SLIDER”	[ 1 ] to [ 9 ]

## Pause function

**This function stops the entire hob’s cooking activity and allows restarting with the same settings.**

- Startup/stop the pause function :

<u>Action</u>	<u>Control panel</u>	<u>Display</u>
Engage pause	Press [ II ] key for 2 seconds	Displays [ II ] in the Heating zone displays
Stop the pause	Press [ II ] key for 2 seconds Press or Slide on the “SLIDER”	Pause control light is blinking Pause control light is off

## Recall Function

After switching off the hob (0/I), it is possible to recall the last settings.

- cooking stages of all cooking zones (power)
- minutes and seconds of programmed cooking zone-related timers
- switching condition of the concentric zone (small or big diameter)
- Heat up function
- Keep warm function

The recall procedure is following:

- Press the key [0/I]
- Then press the key [ II ] within 6 seconds

The previous settings are activated.

## « Keep warm » Function

This function allows the cooktop to reach and maintain automatically a temperature of approximately 70°C.

This will avoid liquids overflowing and burning on the bottom of the pan.

The key is located **between [ 0 ] and [ 1 ]**.

- To engage, to start the function « Keep warm » :

<u>Action</u>	<u>Control panel</u>	<u>Display</u>
Zone selection	Press display [ 0 ] selected	[ 0 ] to [ 9 ] or [ H ]
To engage	Press between [ 0 ] and [ 1 ]	[ U ]
To stop	Press on display [ U ] selected	[ U ]
Slide on the “SLIDER”	[ 0 ] to [ 9 ] or [ H ]	

This function can be started independently on all the heating zones.


When the pan is removed from the cooking zone, the "Keep warm" function remains active for approximately 10 minutes.

The maximum duration of “keeping warm” is 2 hours.



## Control panel locking

To avoid accidentally activating or interfering with a setting of cooking zones, in particular during cleaning, the control panel can be locked (with exception of the On/Off key [ 0/I ]).

- Locking :

<u>Action</u>	<u>Control panel</u>	<u>Display</u>
Start	press on key [ 0/I ]	[ 0 ] or [ H ] on 4 displays
Hob locking	press simultaneously  and [ 0 ] from the front right zone display re-press on display [ 0 ] from the front right zone	No modification  [ L ] on 4 displays

- Unlocking :

<u>Action</u>	<u>Control panel</u>	<u>Display</u>
Start	press on key [ 0/I ]	[ L ] on 4 displays
<b>Within 5 seconds after start :</b> Unlocking the hob	press simultaneously  and [ L ] from the front right zone display press on key 	[ 0 ] or [ H ] on 4 displays No light on the displays

## COOKING ADVICE

---

Examples of cooking power setting

(The values below are indicative)

1 to 2	Melting Reheating	Sauces, butter, chocolate, gelatine Dishes prepared beforehand
2 to 3	Simmering Defrosting	Rice, pudding, sugar syrup Dried vegetables, fish, frozen products
3 to 4	Steam	Vegetables, fish, meat
4 to 5	Water	Steamed potatoes, soups, pasta, fresh vegetables
6 to 7	Medium cooking Simmering	Meat, eggs, sausages Goulash, roulade, tripe
7 to 8	Cooking	Potatoes, chips, waffles
9	Frying, roasting Boiling water	Steaks, omelettes, fried dishes Water

## MAINTENANCE AND CLEANING

---

**Switch-off the appliance before cleaning.**

Do not clean the hob if the glass is too hot because there is a risk of burning.

- Remove light marks with a damp cloth with washing up liquid diluted in a little water. Then rinse with cold water and dry the surface thoroughly.
- Highly corrosive or abrasive detergents and cleaning equipment are likely to cause scratches and must be absolutely avoided.
- Do not ever use any steam-driven or pressure based appliance.
- Do not use any object that may scratch the ceramic glass.
- Ensure that the pan is dry and clean. Ensure that there are no grains of dust on your ceramic hob or on the pan. Sliding rough saucepans will scratch the surface.
- Spillages of sugar, jam, jelly, etc. must be removed immediately. You will thus prevent the surface being damaged.

# WHAT TO DO IN CASE OF A PROBLEM

---

## **The hob or the cooking zone doesn't start-up :**

- The connection to the network is wrong.
- The protection fuse has disconnected.
- The locking function is activated.
- The sensitive keys are covered with grease or water.
- An object is put on a key.

## **The control panel displays [ E ] :**

- The electronic system is defective.
- Disconnect and reconnect the hob at the circuit breaker.

## **The control panel displays 4 x [ L ] :**

- Refer to the chapter control panel locking page.

## **One or all cooking zone cut-off :**

- The safety system is activated
- You forgot to turn-off the cooking zone for a long time.
- One or more sensitive keys are covered.
- The pan is empty and its bottom overheated.
- The hob also has an automatic reduction of power level to prevent overheating

## **The automatic cooking system doesn't start-up :**

- The cooking zone is still hot [ H ].
- The highest power level is set [ 9 ].

## **The control panel displays [ U ] :**

- Refer to the chapter "Keep warm".


## **The control panel displays [ II ] :**

- Refer to the chapter "Pause".

# ENVIRONMENT PRESERVATION

---

- The materials of packing are ecological and recyclable.
- The electronic appliances are composed of recyclable, and sometimes harmful materials for the environment, but necessary to the proper operation and the safety of the appliance.

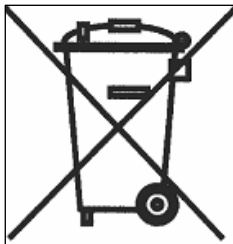


- Don't throw your appliance into the household rubbish.
- Get in touch with the waste collection centre of your council that is familiar with the recycling of household appliances.

# INSTALLATION INSTRUCTIONS

The installation must be performed by a qualified electrical contractor.

## How to stick the gasket:

The gasket supplied with the hob prevents the intrusion of liquids into the cabinet below. Its installation has to be done carefully, in conformity with the following drawing.

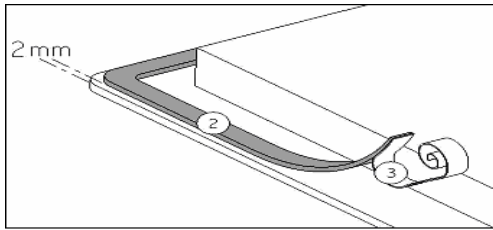


Stick the gasket (2) two millimeters from the external edge of the glass, after removing the protection tape (3).

## Fitting - installing:

The cut out sizes are:

Ref.	Cut size (mm)		Glass size (mm)		
	Width w	Depth d	Width W	Depth D	Thickness
CCT6010	560	490	590	520	4
CCT8010	750	490	780	520	4

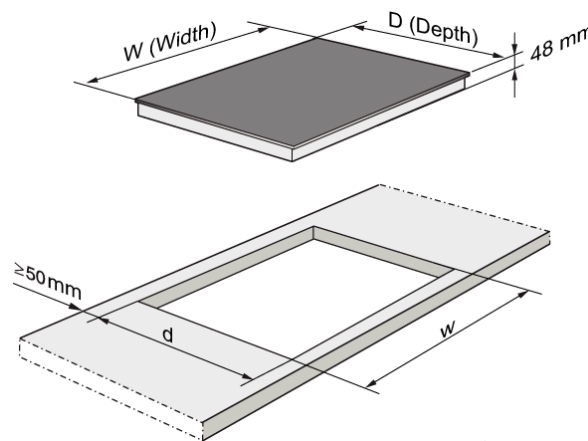

- **Ensure that there is a distance of 50 mm between the hob and the wall or sides.**
- The hobs are classified as “Y” class for heat protection. Ideally the hob should be installed with plenty of space on either side. There may be a wall at the rear and tall units or a wall at one side. **On the other side, however, no unit or divider must stand higher than the hob.**
- The piece of furniture or the support in which the hob is to be fitted, as well as the edges of furniture, the laminate coatings and the glue used to fix them, must be able to resist temperatures of up to 100 °C.
- Do not install the hob at the top of a non ventilated oven or a dishwasher.
- Ensure under the bottom of the hob casing a space of 20 mm, to ensure a good air circulation of the electronic device.
- If a drawer is placed under the hob, avoid putting into this drawer flammable objects (for example: sprays) or non heat-resistant objects.
- Materials which are often used to make worktops expand on contact with water. To protect the cut out edge, apply a coat of varnish or special sealant. Particular care must be taken when applying the adhesive joint supplied with the hob to prevent any leakage into the supporting furniture. This gasket ensures a good seal when used in conjunction with smooth work top surfaces.
- The safety gap between the hob and the rangehood placed above must comply with the recommendations of the rangehood manufacturer. In case of no instructions, a minimum distance of 650mm (or other minimum distance as may be specified by AS/NZS 5601 and interpreted by a certified installer) should apply.
- The connection cord should not be subjected, to any mechanical constraint.
- The cooktop underside temperature exceeds 95C, an underbench board is required to be installed to prevent the underbench access.
- **WARNING:** Use only hob guards designed by the manufacturer of the cooking appliance or indicated by the manufacturer of the appliance in the instructions for use as suitable or hob guards incorporated in the appliance. The use of inappropriate guards can cause accidents.

# ELECTRICAL CONNECTION

- The installation of this appliance and the connection to the electrical network should be entrusted only to an electrician perfectly to the fact of the normative regulations and which respects them scrupulously.
- Protection against the parts under tension must be ensured after the building-in.
- The data of connection necessary are on the stickers place on the hob casing near the connection box.
- The connection to the main must be made using an earthed plug or via an omnipolar circuit breaking device with a contact opening of at least 3 mm.
- The electrical circuit must be separated from the network by adapted devices, for example: circuit breakers, fuses or contactors.
- If the appliance is not fitted with an accessible plug, disconnecting means must be incorporated in the fixed installation, in accordance with the installation regulations.
- The inlet hose must be positioned so that it does not touch any of the hot parts of the hob or oven.

## Caution!

This appliance must only be connected to a network 230 V~ 50 Hz.

Always connect the earth wire.

Respect the connection diagram.

The connection box is located underneath at the back of the hob casing. To open the cover, use a medium screwdriver. Place it in the slits and open the cover.

Mains	Connection	Cable diameter	Cable	Protection calibre
230V~1P+N 50Hz	1 Phase + N	3 x 2.5 mm <sup>2</sup>	H 05 VV - F H 05 RR - F	25 A *
400V~2P+N 50Hz	2 Phases + N	4 x 1.5 mm <sup>2</sup>	H 05 VV - F H 05 RR - F	16 A *

\* calculated with the simultaneous factor following the standard EN 60 335-2-6

## Connection of the hob

The ceramic hob can be connected in different ways:

Monophase 230V~1P+N

Biphase 400V~2P+N

### Setting up the configurations:

For the various kinds of connection, use the brass bridges which are in the box next the terminal

#### Monophase 230V~1P+N

Put the bridge between terminal 1 and 2.

Attach the earth to the terminal "earth", the neutral N to terminal 4, the Phase L to one of the terminals 1 or 2.

#### Biphase 400V~2P+N

Attach the earth to the terminal "earth", the neutral N to terminal 4, the Phase L1 to the terminals 1 and the Phase L2 to the terminal 2.

### Caution! Ensure that you:

- Correctly attach the wires and the bridges.
- Tighten the screws properly.

**Frequent loosening and screwing of the screws on the connection box risks damaging the efficiency of the tightness once screwed. It is therefore advisable to keep screwing and unscrewing to a minimum.**

**Ensure that the cables are correctly inserted and tightly screwed down.**

**We cannot be held responsible for any incident resulting from incorrect connection or which could arise from the use of an appliance which has not been earthed or has been equipped with a faulty earth connection**



WARNING: IT MUST BE ENSURED THAT THIS APPLIANCE IS CONNECTED ONLY TO A 230VAC +10%/-6% 50Hz MAINS POWER SUPPLY WHICH CONTINUOUSLY COMPLIES WITH THE RELEVANT AUSTRALIAN STANDARD. FAILURE TO DO SO MAY SERIOUSLY DAMAGE THE APPLIANCE AND ANY SUCH DAMAGE IS NOT COVERED BY THE MANUFACTURER'S WARRANTY.







# KLEENMAID WARRANTY

## TERMS AND CONDITIONS

1. Compass Capital Services Pty Ltd ABN 96 138 214 525 trading as Kleenmaid will provide parts and labour to you the customer as set out herein.
2. Kleenmaid's Products come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
3. The benefits given to you under this Kleenmaid Warranty are in addition to other rights and remedies to which you may be entitled under the Australian Consumer Law in relation to the Product to which this Kleenmaid Warranty relates. Subject to the conditions below, the Product is warranted by Kleenmaid and/or its agents to be free from defects in materials and workmanship for the Warranty Period for normal Domestic Use.
4. Product Identification: -
  - a. Kleenmaid reserves the right to reject claims for any services or work where you cannot produce for verification the serial number and a proof of purchase for the Product (including but not limited to the original invoice).
  - b. this Kleenmaid Warranty will be voided if the serial number for the Product cannot be verified. This is not intended to exclude, restrict or modify any right or remedy to which you may otherwise be entitled under the consumer guarantee provisions of the Australian Consumer Law.
  - c. in the event that a request for repair is made against this Kleenmaid Warranty where the serial number for the Product cannot be verified or you cannot produce for verification a proof of purchase for the Product (including but not limited to the original invoice), the repairer will not carry out any repairs on the Product and you will be charged a service call-out fee.
5. What is covered by this Kleenmaid Warranty: -
  - a. the Product is covered for faulty workmanship or parts that have failed under normal Domestic Use.
  - b. Kleenmaid and/or its agents will determine by objective testing if there are any defects in the Product and/or faulty workmanship.
  - c. this Kleenmaid Warranty is only applicable if repairs on Products are carried out within Mainland Australia.
  - d. this Kleenmaid Warranty: -
    - i. covers a Product purchased as new, manufactured for use in Mainland Australia;
    - ii. commences from the date of delivery of the Product;
    - iii. provides for the labour and replacement parts necessary to maintain the Product in good operating condition as specified in this Kleenmaid Warranty, however, if repair is needed because of Product failure during normal Domestic Use, Kleenmaid has the option to repair or replace the defective Product or part of the Product with a product or part of like kind and quality. A replacement part may be new or reconditioned of like kind and quality and may cost less than the original Product purchased and no charges or refunds will be made based on the replacement product or part cost difference; and
    - iv. is only applicable when the Product is used and operated in accordance with the Manufacturer's instructions.
6. What is not Covered by this Kleenmaid Warranty (excluded):-
  - a. any damage or failure to or of the Product or part of the Product:
    - i. due to the Product being inadequately serviced to manufacturer's recommendations;
    - ii. resulting from environmental conditions including and not limited to dirt, dust, rodents, insects, rust, corrosion, salt built-up, of or in any part of the Product;
    - iii. resulting from excessive use but fair wear and tear is excepted;
    - iv. resulting from poor installation including and not limited to positioning and externally fitted equipment such as plumbing and drainage, cabling, antennae or due to incompatibility of connected equipment;
    - v. caused by overheating as a result of sitting or positioning of the Product, where there is no provision for adequate ventilation or adequate protection from excessive dust;
    - vi. if the Product has been dismantled, repaired or serviced by any person other than someone authorised by Kleenmaid or its agents or representatives;
    - vii. caused by power surges or spikes, including and not limited to, mains power and telecommunications connections, or to other unspecified sources, incorrect power current, voltage fluctuation, amperage fluctuation, rust or corrosion;
    - viii. if the Product is dropped, collision of the Product with another object, use for which the Product is not designed, damage to the Product caused by your own negligence, accidental or deliberate misuse of the Product by you, theft, abuse, vandalism, flood, fire, earthquake, electrical storms or any other act of God or any war related events; or
    - ix. due to the introduction of abnormal heat loads to the Product;
  - b. costs of attendance and testing where no fault or defect covered by the terms of this Kleenmaid Warranty is identified in the Product;
  - c. initial setup and installation of the Product;
  - d. normal maintenance costs and costs incurred through the installation of items listed as requiring periodic replacement;
  - e. Products with removed or altered serial numbers;
  - f. broken or cracked glass other than transport damage to the initial point of delivery;
  - g. consumables such as but not limited to bulbs/globes, seals, filters, batteries and remote controls;
  - h. removal and reinstallation of an internal component not performed by an authorised Kleenmaid agent or representative or authorised service centre;
  - i. cosmetic or structural items; or
  - j. any failures due to interference from or with other products and/or sources.
7. This Kleenmaid Warranty ceases if: -
  - a. the Product ceases to carry the original manufacturer's serial number or is sold at an auction;
  - b. the Product is rented; or
  - c. there is failure to pay monies owing on invoices as a result of non-warranty work being carried out at the request of the end user as per point 16 below.
8. Neither Kleenmaid nor its representatives provide loan equipment under the terms of this Kleenmaid Warranty.
9. Any unauthorised access to the internal hardware of the Product will void this Kleenmaid Warranty.

10. Repair Notice: Products presented for repair may be replaced by refurbished Products of the same type rather than being repaired. Refurbished parts may be used to repair the Products.
11. Replacement items are "like for like" and is not "new for old" and does not indicate in any way that a faulty Product will be replaced with a new part or unit. "Like for like" may either be a quality checked, refurbished or reconditioned unit of the same or later batch of model/size/specifications
12. The cost of making a claim under this Kleenmaid Warranty is not covered by Kleenmaid, including any costs of transportation or travel expenses between your home and your nearest authorised service agent.
13. Kleenmaid accepts no liability for items that are lost, damaged, or stolen as a result of freight, transport or storage. If you are required to transport the Product to an authorised service centre, you must ensure that it is securely packed and insured.
14. On Public Holidays or other periods when regular business and wholesale operations are temporarily ceased, repairer availability and warranty response times may extend beyond the standard response times due to the unavailability of repairers and parts.
15. For any repair performed on a Product under this Kleenmaid Warranty where no fault can be found, or the item is deemed by Kleenmaid or an authorised agent, to be not faulty under this Kleenmaid Warranty, or the repair or fault is not covered under this Kleenmaid Warranty, a 'No Fault Found' fee is payable by you. Kleenmaid will advise you of this cost and seek your agreement to pay such costs before commencing such repairs.
16. Any repairs or services required that are outside the terms and conditions of this Kleenmaid Warranty can be carried out at your request at your cost (including where the Product has not been installed or set up correctly). Kleenmaid will always advise you of this cost and seek your agreement to pay such costs before commencing such repairs. A credit card may be required prior to the commencement of such services.
17. Extra charges will be payable by the customer should the Product not be readily accessible without special equipment, such as but not limited to cranes and lifts or should the Product be installed in a position that service access is blocked and/or repair work is not possible without uninstalling the Product to gain access.
18. You, the customer, may be entitled to purchase an extended warranty in respect of the Product. Any extended warranty will not be issued by Kleenmaid but by a third party. Any extended warranty services will be provided directly by the third party as principal and not as agent for Kleenmaid, under their extended warranty terms and conditions and not under this Kleenmaid Warranty.
19. To make a claim under this Kleenmaid Warranty, please have your proof of purchase and the serial number of the Product ready and call (02) 9310 1207 during business hours.
20. This Kleenmaid Warranty is given by:
  - Name: Compass Capital Services Pty Ltd ABN 96 138 214 525 trading as Kleenmaid
  - Business address: Level 2, Suite 3, 204 Botany Rd, Alexandria NSW Australia 2015
  - Telephone: (02) 9310 1207
21. Definitions:
  - a. **Australian Consumer Law** means the *Competition and Consumer Act 2010* (Cth).
  - b. **Domestic Use** means use of the Product for personal, domestic or household purposes.
  - c. **Kleenmaid** means Compass Capital Services Pty Ltd ABN 96 138 214 525 trading as Kleenmaid.
  - d. **Mainland Australia** means the following States and Territories of Australia: New South Wales, Victoria, South Australia, Western Australia, Queensland, Tasmania, Northern Territory, Australian Capital Territory.
  - e. **Product** means the appliance sold by Kleenmaid to you as evidenced by the original purchase invoice.
  - f. **Warranty Period** means for domestic use and for Products purchased on or after 1 January 2019 the period of 60 months, otherwise 36 months. For non-domestic use 12 months or such alternative period as may be specified.

**UPDATE NOTICE:** This Kleenmaid Warranty is current as at 1 January 2019 but is subject to variation from time to time. For the latest version of the Kleenmaid Warranty, please see our website <http://www.kleenmaid-appliances.com.au/support/your-kleenmaid-warranty> or phone us on (02) 9310 1207.

## Other products available in the Kleenmaid range of appliances

---


- | Washing machines
- | Clothes dryers
- | Dishwashers
- | Ovens
- | Cooktops
- | Steam ovens
- | Microwave ovens
- | Built in espresso coffee machines
- | Rangehoods
- | Freestanding ovens
- | Refrigerators & Freezers
- | Beverage Serving Cabinets
- | Water Dispensers
- | Vacuum Cleaners

Compass Capital Services Pty Limited  
trading as Kleenmaid  
ABN 96138214525

Level 2, 204 Botany Road Alexandria  
NSW 2015



Register your Kleenmaid  
Appliances Warranty  
[www.kleenmaidwarranty.com.au](http://www.kleenmaidwarranty.com.au)



Request a Warranty Service  
[www.kleenmaidwarranty.com.au](http://www.kleenmaidwarranty.com.au)

E: [support@kleenmaid.com.au](mailto:support@kleenmaid.com.au)  
[www.kleenmaid.com.au](http://www.kleenmaid.com.au)

 **kleenmaid**