

AlfrescoPlus™

SINGLE / DOUBLE FRIDGE MODULE

ASSEMBLY INSTRUCTIONS



For further instruction, please visit:
www.alfrescoplus.com.au

WARNING! – THIS IS A PERMANENT CONNECTION SYSTEM!

WHAT'S NEEDED?

Tools Required:

- Soft Sided Hammer (Not Included)
- Philips head screwdriver (Not Included)
- Allen Keys x 2 (Included)

WHAT'S IN THE BOX?

Box 1 of 2 = Bench-top

Box 2 of 2 = Panels

PARTS INCLUDED:

WHITE PANELS with Frames	x 4
• Cabinet Frames (Various Profiles)	x 11

HARDWARE

• Joining Bolts (Male/Female)	x 4
• Allen keys	x 2

Essential TIP: Ensure you have a stable flat surface or workbench to work from. The most ideal height to assemble the module is waist height. The workbench should be at least 1.8m (W) x 1m(H) x 0.7m(D) in size.

WHAT TO DO NEXT?

Remove all parts from the cartons. DO NOT unwrap the frames at this stage.

Preparing the panels:

- Remove all the white panels from the carton and place in an easily accessible location (All red arrow labels to face upwards).
- Remove at least 10cm of plastic film alongside the edge of the panels, as per image.

Essential TIP: DO NOT remove all the plastic film from the panels, since the 4 way red arrows are an integral part of the assembly process.

The red arrow stickers are placed on top of the plastic on most panels and therefore the plastic should not completely be removed at this stage.



FRIDGE CABINET LAYOUT DIAGRAM

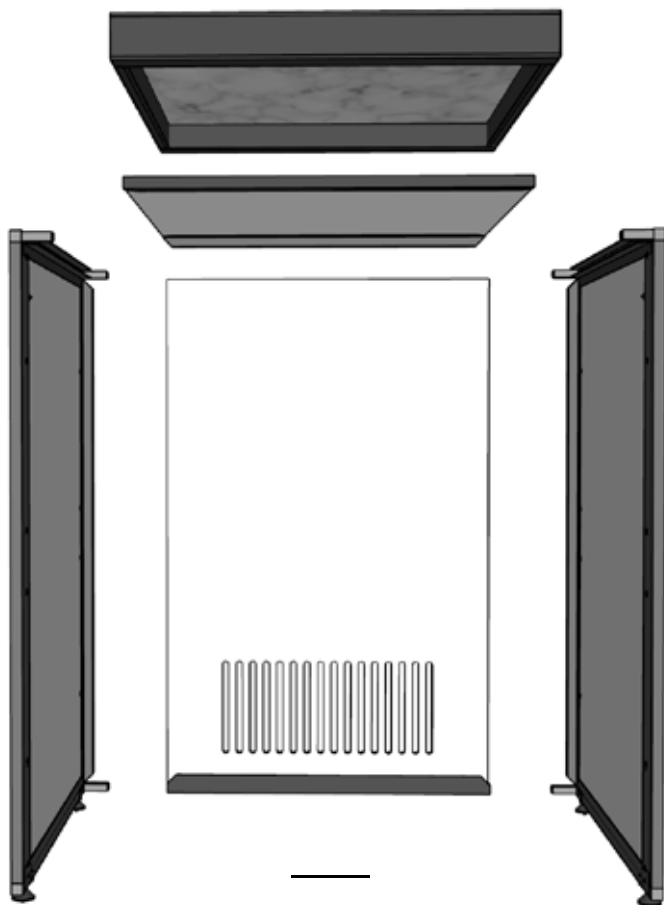


FIG. 1

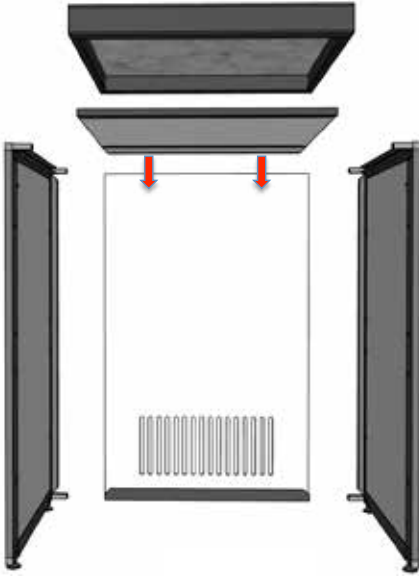


FIG. 2

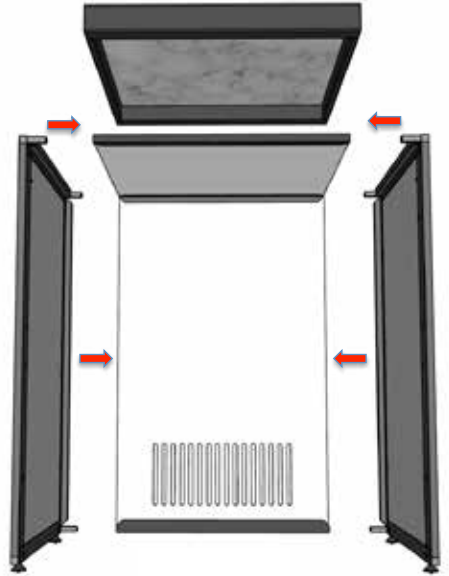


FIG. 3

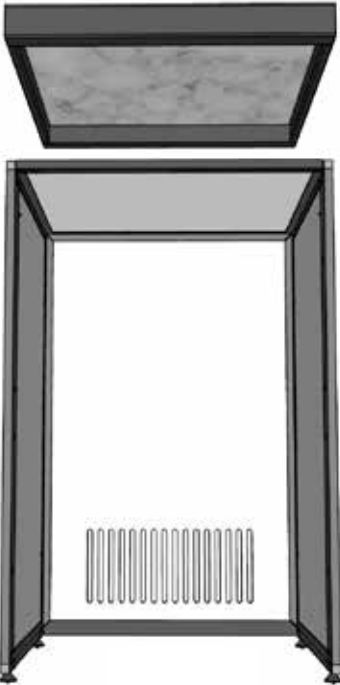


FIG. 4



FIG. 5

STONE TOP PLACEMENT (G)

The frame and stone top is pre-assembled for your ease of assembly.

Essential TIP: Ensure the frames and stone table are positioned on a stable flat surface to ensure alignment. Caution: The stone table is very heavy, and a 2-person lift is required.


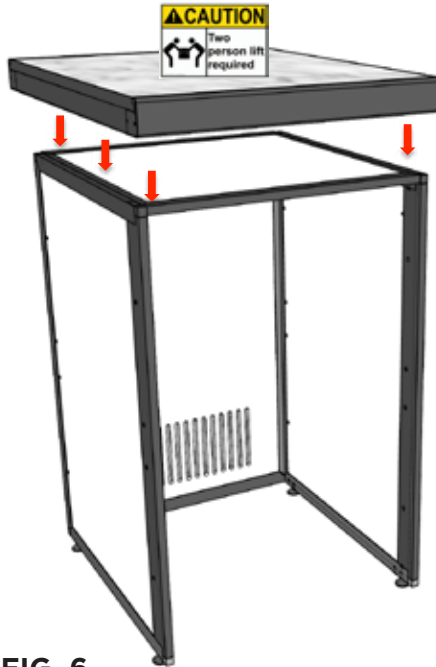


FIG. 6

WARNING! - The stone-top positioning and alignment is the last step of assembling your module and BBQ kitchen setup. The double side VHB tape creates a very strong permanent bond and cannot be moved once contact has been made.

The stone top should be placed at least with a 20mm overhang.

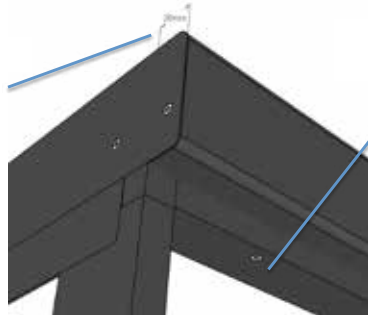

Additional screws may be added to secure stone top. No screws or drill holes are provided.

FIG. 7

Take note that the 3M VHB tape is a permanent Very High Strength adhesion. Align the front of the frame with the BBQ front then lower onto the cabinet for a permanent bond.



After the stone has been securely placed, the thumb screw feet can be height adjusted to make sure the cabinet aligns horizontally with the other cabinets.

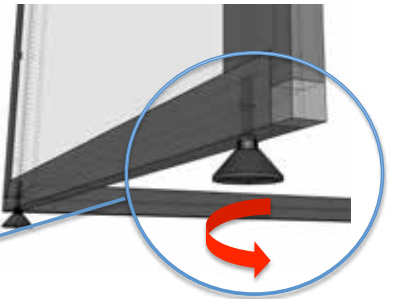


FIG. 8

Gently lower the stone top and frame onto the module cabinet. Ensure that both ends of the frame and stone are lowered in a horizontal position thereby being flush with the Cabinet top frame. Instead of using the 3M VHB tape you have the option to drill holes from the inside of the cabinet and make use of screws (Not Provided) to attach the stone top.

For any queries or assistance call:

Customer Service

Australia Only

1300 174 876

Hours of operation:

Monday to Friday 8am - 5pm

Do not return to place of purchase

Keep your purchase receipt, this will be required to
make any claims under the 12 month warranty

AlfrescoPlus™