

# ekodeck+

by  EKOLOGIX

AVAILABLE IN 4 GREAT COLOURS

DARK BROWN | HIGHLAND OAK | RED ROCK | GREYSTONE

INSTALL WITH

**QUICKFIX**<sup>TM</sup>  
HIDDEN FASTENING SYSTEM FOR DECKING

EKODECK+ boards are made for installation with the Quickfix Hidden Fastening System for Decking; providing you with a surface free of fasteners and a faster, easier installation. This new profile is also 30% faster to install, it's as simple as inserting the clips into the board and fixing into the joist - no pre-drilling needed.



- + Hidden fasteners, clean finish
- + Fast installation
- + No oiling & painting
- + Long, clean 5.4m boards
- + Resistant to rot & decay
- + Termite resistant
- + Anti-slip rating (R11)
- + 10 year warranty\*

For warranty terms visit [www.ekologix.com.au](http://www.ekologix.com.au)

Available at  
**BUNNINGS**  
warehouse







# A hidden fastening profile for a fast installation & clean finish

## Ekodeck+ Specifications

	Specification (mm)
Centre-to-centre joist spacing (max)	450
Minimum ground clearance	300
Minimum side-to-side gap	Auto spaced by clip (6mm)
Minimum gap from end edge to breaker board	2-3*
Minimum end-to-end gap (butt-join)	4**
Minimum gap for side edge to solid structures	Auto spaced by clip (6mm)
Minimum gap for end edge to solid structures	6


\* Breaker boards are an alternative to butt joins and must be used when the deck is longer than 5.4m. \*\* Applies to decks less than 5.4m in length.

## Ekodeck+ Range

Profile (mm)	Colour		Item No.
88x23x5400	Dark Brown		0121081
88x23x5400	Highland Oak		0121083
88x23x5400	Red Rock		0121084
88x23x5400	Greystone		0121082
137x23x5400	Dark Brown		0121078
137x23x5400	Highland Oak		0121080
137x23x5400	Red Rock		0121077
137x23x5400	Greystone		0121079


### Starter Clip

Position the starter clips against the wall and screw them into the side of the joists. Gently push the first decking board into the starter clips

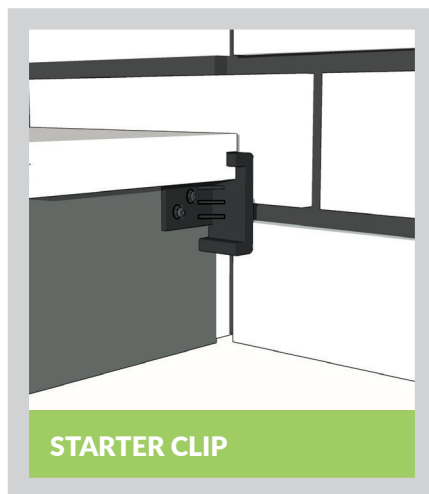

### Locking Clip (1 per board)

Insert a locking clip into the groove of the board as shown. Only use 1 locking clip per board, which would usually go in the centre joist. Screw down slightly to hold the clips in place

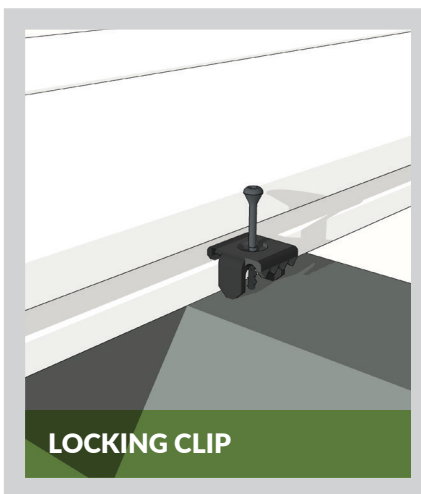

### Standard Clip

Insert a standard clip into the groove of the board at each remaining joist. Screw down slightly to hold the board in place (use low torque). Work 6 boards at a time. Check square then screw down the section. Repeat until finished



Refer to the Quickfix Installation Guidelines for more information. The use of breaker boards is a great alternative to butt joins, and is the recommended installation method for Ekodeck+. For ideas and deck inspiration visit or website at [www.ekologix.com.au](http://www.ekologix.com.au)

**QUICKFIX**™  
HIDDEN FASTENING SYSTEM FOR DECKING



Quickfix Hidden Fasteners are available in 5 Board & 20 Board boxes

**EKOLOGIX**®

[www.ekologix.com.au](http://www.ekologix.com.au)

All information contained in this document was correct and current at the time of publishing and is subject to change without notice. EKOPLUS1.0

Ekologix Australia Pty Ltd. Unit 1, 20-26 Sabre Drive Port Melbourne VIC 3207 Phone: +61 3 9639 7774 Email: [info@ekologix.com.au](mailto:info@ekologix.com.au)

