


ASSEMBLY INSTRUCTIONS FOR SHOE CADDY

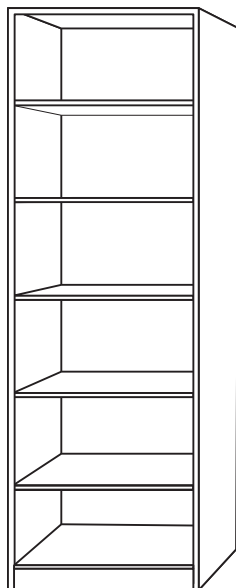

1495mm H x 450mm W x 430mm D


PARTS IDENTIFICATION LIST

2 x SIDE GABLES - 1 x LEFT HAND, 1 x RIGHT HAND (MARKED A and F)



1495mm H x 426mm W x 16mm D

TOP AND BOTTOM FIXED SHELF 1 x TOP (E) 1 x BOTTOM (C)




557mm H x 424mm W

1 x KICK (B) 416mm x 61mm



5 x Cam Fix Shelves (G)







1 x BACK PANEL 1435mm x 445mm


F



HARDWARE LIST


NO	MODEL	DESCRIPTIONS	QTY
1		M50 x 5mm CONFIRMAT SCREWS	12
2		WHITE CAPS	12
3		CAMS & PINS	20
4		NAILS FIXING OF BACK	50

STEP 1

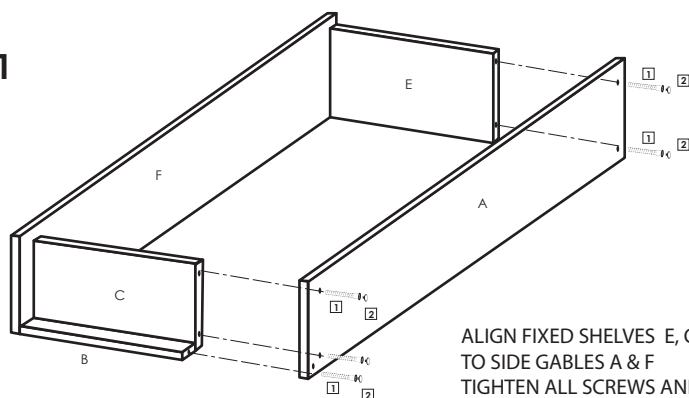


ALIGN FIXED SHELVES E, C & KICK BOARD
TO SIDE GABLES A & F
TIGHTEN ALL SCREWS AND CAP

STEP 2

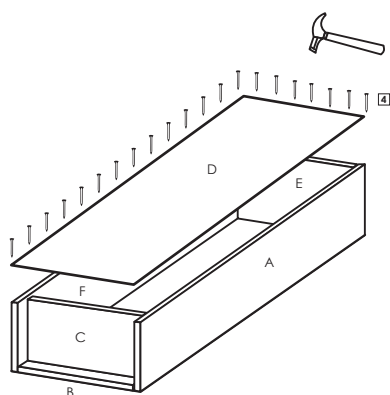


NOTE FOLD OPEN BACK AND PLACE
ONTO UNIT MAKING SURE TO KEEP IT
PARALLEL TO THE TOP AND SIDES OF THE
UNIT. ATTACH USING THE NAILS

STEP 3

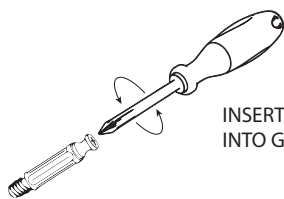


INSERT PINS
INTO GABLES A & F

PLACE CAM SHELVES
ON PINS AND TIGHTEN

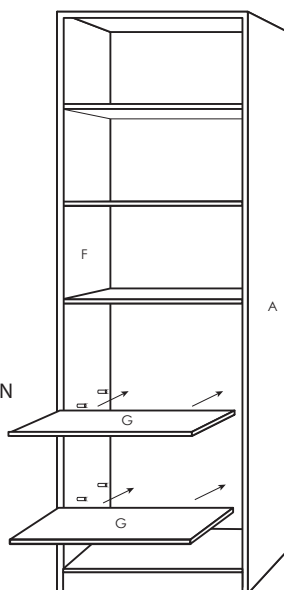

INSERT CAM B
LOCK FITTINGS TO
CAM SHELVES

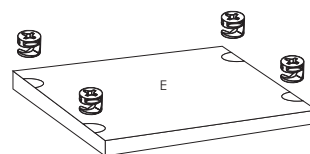

IMPORTANT
PLACE THE FITTING
OVER THE HOLE, KEEPING
THE SQUARE EDGE OF THE
FITTING PARALLEL TO THE
FACE OF THE BOARD.
KNOCK IN CAREFULLY