


2 PCS

BALL CATCH

Brass Plated

HÄFELE

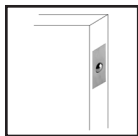




HÄFELE

Mounting Instructions:

1. Position ball catch in the top or side of the door and align strike in door jamb to confirm function.
2. Drill a 19mm Ø x 20mm deep hole for the ball catch into the door edge.
3. Position sprung loaded ball in hole and mark around surface plate with a pencil. Chisel a rebate 2mm deep. Pre-drill for screws and fix catch into rebate.
4. Position the strike plate and with a pencil mark around the plate and also the inside hole.
5. Chisel a rebate 1mm deep and 6mm deep where the ball will sit in the strike.
6. Pre-drill screw holes and screw the strike plate into position.

MADE IN CHINA



Tools Required:

- > 16mm Ø Drill Bit
- > Hammer
- > Chisel
- > Power Drill
- > 2mm Ø Drill Bit
- > No 2 Pozidrive Screw Bit

HÄFELE AUSTRALIA PTY. LTD 8 MONTEREY RD DANDENONG VIC 3175
ARTICLE # 482.02.272 730.83.606

