



ASSEMBLY INSTRUCTION FOR LSD 550



LSD 550

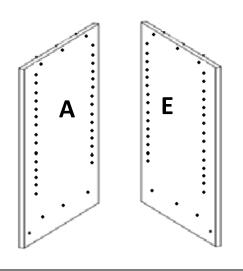


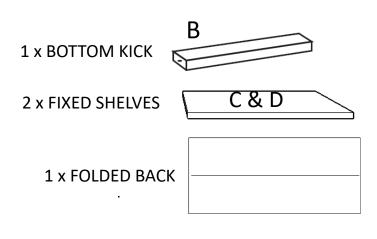

NO	MODEL	DESCRIPTION	QTY
1	*************************************	CONFIRMAT SCREWS 50mm x 5mm	10
2		CAPS	10
3	·	BACKING NAILS	45
4	Diviniii:	16mm PAN HEAD UNIT WOOD SCREWS	1
5		25mm PAN HEAD WALL WOOD SCREWS	1
6	000	"L" SAFETY BRACKET	1



ASSEMBLY INSTRUCTION FOR LSD 550

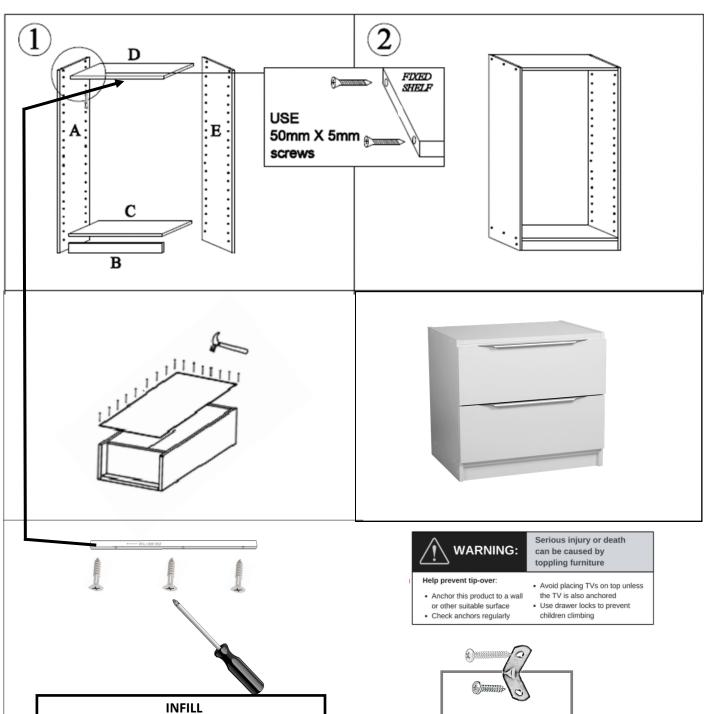

YOU WILL NEED TO RETRIEVE THE INFILL, USING 3 X 30mm SCREWS PROVIDED, ATTACH THE INFILL TO THE UNDER-SIDE OF THE CAM SHELF BEFORE PUTTING YOUR SHELF INTO PLACE.



When attaching unit to wall put safety bracket in middle of unit with 16mm pan head screw then 25mm pan head screw into wall. For plasterboard without a stud it is recommended to use a plug with screw (not provided).



DRAWER ASSEMBLY 2 DRAWER INSTRUCTION


NO	MODEL	DESCRIPTION	QTY
1	& Sail Committee	CONFIRMAT SCREWS	8
2		DOWELS	8
3	0	BACKING NAILS	40
4	4	5/8 X 6 WOOD SCREWS	12
5	→ IFILURE SEE	INFILL	1


NO	MODEL	DESCRIPTION	QTY
6	The state of the s	CAMS	4
7		CAM PINS	4
8	& Section 1994	30mm 8 GAUGE SCREW	3
9	The state of the s	EURO SCREWS	8
10		HANDLE	2
11	ė-	RUNNERS PER SET	2

STEP 1.

LAYOUT YOUR DRAWER PIECES FLAT AS PER DESIGN WITH PRE-DRILLED HOLES FACING UP.

START WITH THE BACK OF THE FRONT DRAWER AND PLACE YOUR DOWELS & CAM PIN IN THE PRE-DRILLED HOLES ON EITHER SIDE AS INSTRUCTED BELOW.

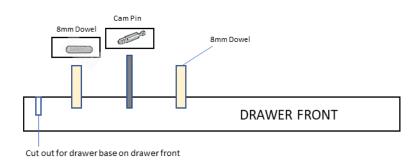

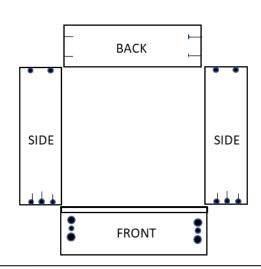


STEP 2.

GRAB YOUR FIRST SIDE AND INSERT YOUR CAMS INTO THE HOLE PROVIDED ON THE OUTSIDE OF THE DRAWER SIDE GENTLY AS PER INSTRUCTIONS BELOW.


IMPORTANT NOTICE:

PLACE THE FITTING OVER THE HOLE KEEPING THE SQUARE EDGE OF THE FITTING PARALLEL TO THE FACE OF THE BOARD, KNOCK IN **CAREFULLY**.





NOW PLACE YOUR LAST PIECE BETWEEN THE TWO SIDES USING THE SCREWS SUPPLIED SCREW INTO THE SIDES OF THE BACK DRAWER PIECE.






DRAWER ASSEMBLY


STEP 3.

YOUR DRAWER SHOULD BE FACING DOWN WITH THE FRONT DRAWER EXSPOSING THE CUTOUT FOR THE BASE TO BE PUSHED INTO FACE DOWN WITH THE BROWN SIDE SHOWING. MAKING SURE YOU HAVE THE DRAWER SQUARE, PROCEED TO NAIL DOWN THE BASE SPACING THEM OUT AROUND THE EDGE OF THE THREE SIDES.

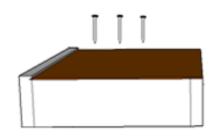

STEP 4.

RUNNER PLACEMENT

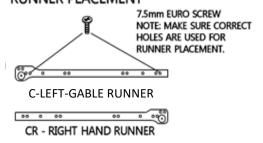


PLACE YOUR RUNNERS INTO THE DESIGNATED HOLES MAKING SURE THE WHEEL IS FACING TO THE FRONT OF THE GABLE. HOLE POSITION NO 1 & 8, .

YOUR DRAWER RUNNER WILL HAVE THE WHEEL TO THE BACK OF THE DRAWER.

STEP 5.


USING THE HANDLE SCREW (NO:5) ATTACH THE HANDLE TO THE BACK OF THE DRAWER FRONT INTO THE PREDRILLED HOLES ALREADY PROVIDED.





STEP 6.

PLACE YOUR DRAWER RUNNER ON THE BOTTOM OF THE DRAWER USING THE WOOD SCREWS PROVIDED (No:4) SCREW TWO INTO EACH RUNNER. REPEAT FOR THE OTHER SIDE.

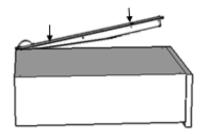

PICTURE OF YOUR FINISHED DRAWER



Multistore Industries (Aust) Pty Ltd

9 Nevilles Street, Underwood, QLD 4119

Tel-(07) 3208 6799

Fax- (07) 3209 6332

www.multistore.com.au

sales@multistore.com.au



WARRANTY

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement of refund for major failure.

10 Year Warranty

- If the purchaser has a fault or defect with this product, the purchaser needs to contact Multistore Industries (Aust) directly on (07) 3208 6799 and state date of purchase, place of purchase and proof of purchase.
- Multistore Industries (Aust) will replace any faulty or defect parts at no cost to the customer. A replacement will be sent to you as soon as possible, or product can be exchanged at the store of purchase.
- This warranty is in addition to other rights and remedies of the customer under law.

Sincerely,

Multistore Industries (Aust) Management