



## ASSEMBLY INSTRUCTIONS FOR MODEL LSD 550

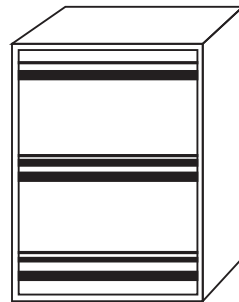

LSD 550mm H x 608mm W x 430mm D


### PARTS IDENTIFICATION LIST

2 x PANELS - 1 x LEFT HAND, 1 x RIGHT HAND

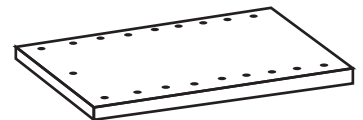

550mm H x 426mm W x 16mm D

TOP AND BOTTOM FIXED SHELF 1 x TOP 1 x BOTTOM




557mm H x 424mm W

1 x KICK 575mm x 61mm





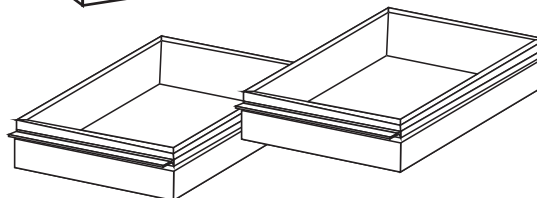




2 x Drawers



1 x BACK PANEL 485mm x 604mm




### HARDWARE LIST

NO	MODEL	DESCRIPTIONS	QTY
1		M50 x 5mm CONFIRMAT SCREWS	10
2		WHITE CAPS	10
3		NAILS FIXING OF BACK	25
4		5/8 x 6 WOOD SCREWS FIXING SHELF RUNNER	8
5		EURO SCREW ATTACHMENT OF RUNNERS	8
6		HANDLE SCREWS	4
7		DRAWER RUNNERS	2

---

# ASSEMBLY INSTRUCTIONS FOR MODEL LSD 550

---

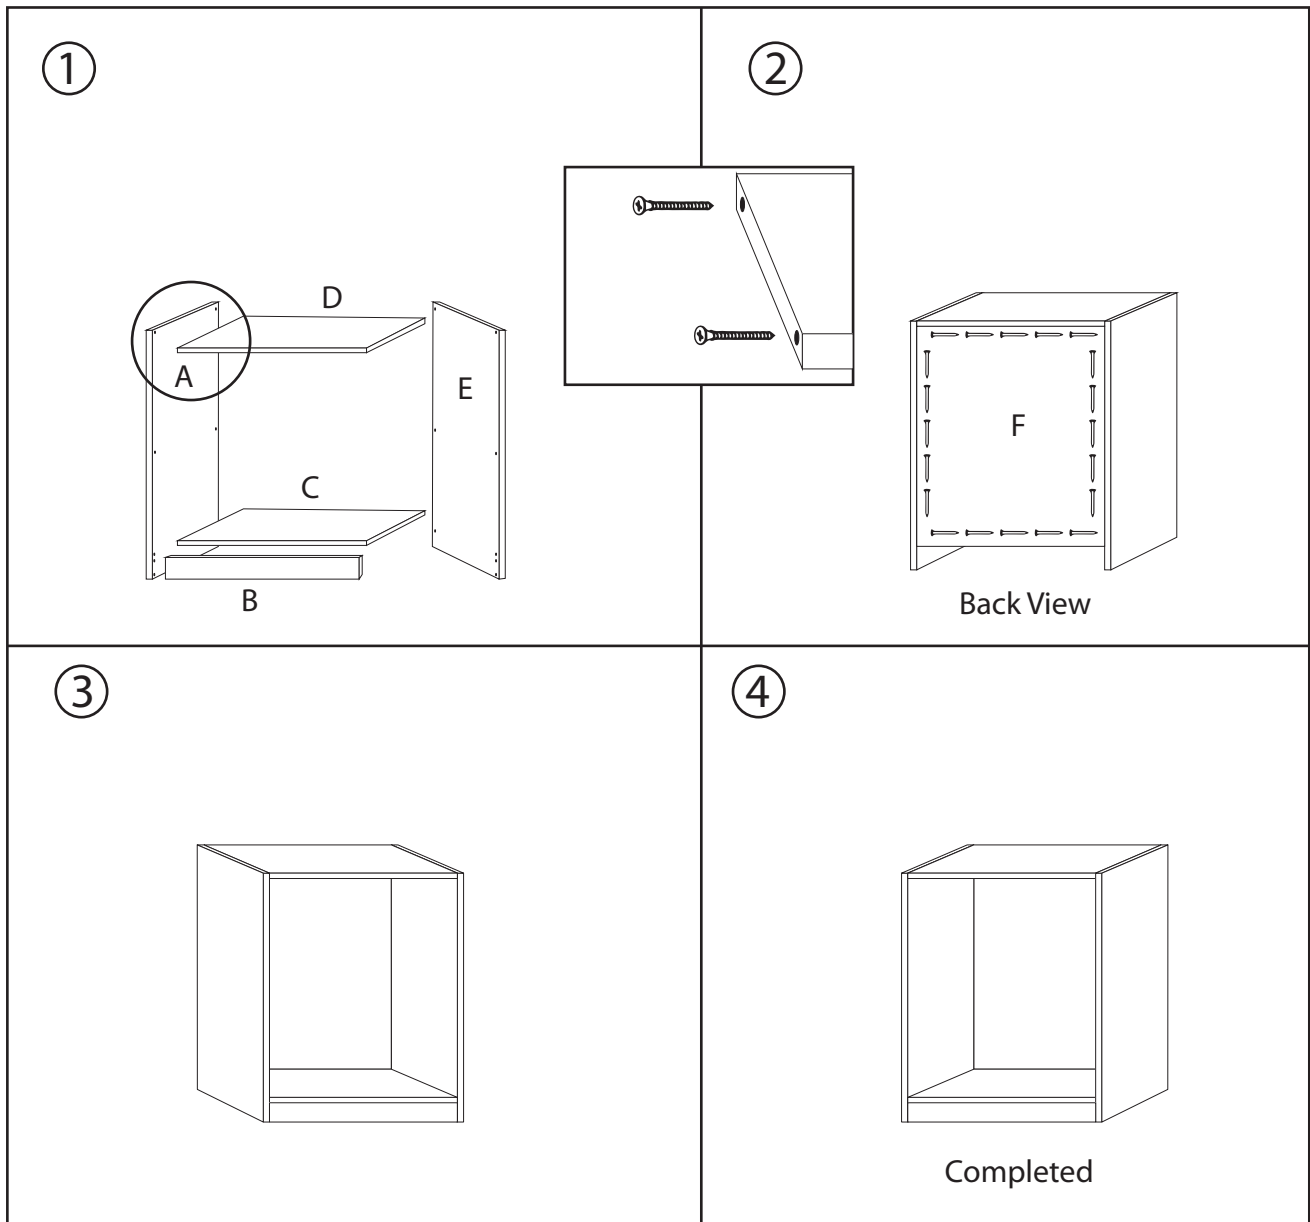

STEP 1: ALIGN FIXED SHELVES (D & C) AND KICK BOARD (B) TO LEFT PANEL (A) AND RIGHT PANEL (E). TIGHTEN USING M50 x 5MM CONFIRMAT SCREWS. COVER SCREWS WITH WHITE CAPS

STEP 2: WITH THE UNIT LYING ON ITS FACE, ATTACH THE BACK PANEL (F) MAKING SURE TO KEEP IT PARALLEL TO THE TOP AND SIDES OF THE UNIT. ATTACH USING THE NAILS.

STEPS 3 & 4: COMPLETED UNIT PRIOR TO INSTALLING DRAWERS.

PLEASE FOLLOW ASSEMBLY INSTRUCTION FOR DRAWER BOX AND METAL RUNNERS