
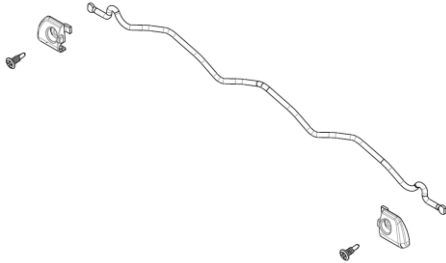
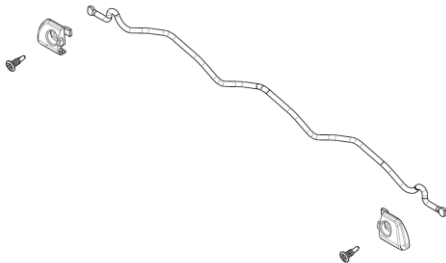


TOPDRY Folding Frame – Coathanger Replacement Installation Instructions

Parts List

AD05522	Coathanger Wire- Smoke	 A technical line drawing of a coathanger wire assembly. It features a long, zig-zag wire with a hook at the top left and a curved end at the bottom right. Two circular mounting brackets are shown, one at the top left and one at the bottom right, each with a small screw next to it, indicating their placement on the wire.
AD05523	Coathanger Wire - Slate	 A technical line drawing of a coathanger wire assembly, identical in design to the one above. It features a long, zig-zag wire with a hook at the top left and a curved end at the bottom right. Two circular mounting brackets are shown, one at the top left and one at the bottom right, each with a small screw next to it, indicating their placement on the wire.

Replace the Coathanger wire

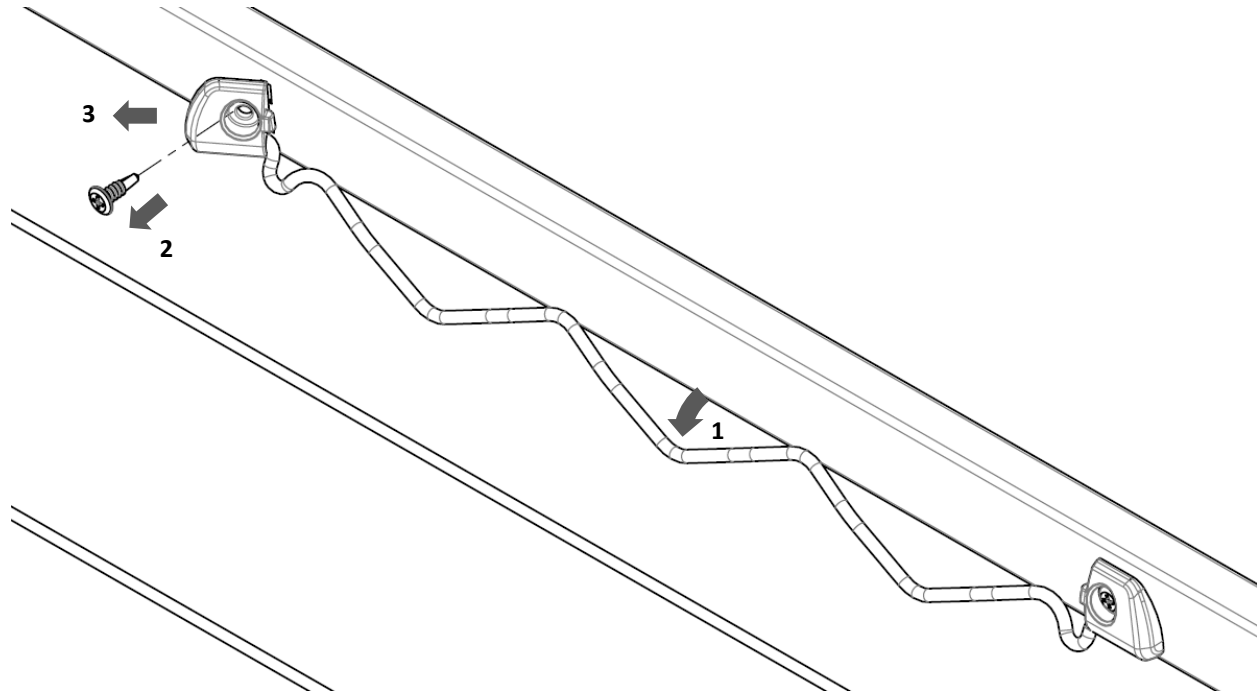

1. Fold the Coathanger wire to the down position.
2. Remove the screws from both sides using a cross head screw driver
3. Tilt the wire holder and move outwards to remove – repeat for both sides
4. Repeat process in reverse to fit the new parts.