


9 Nevilles St, Underwood, Brisbane, QLD 4119 Ph: 07 3208 6799 Fax: 07 3290 6332 Int Ph: +61 7 3208 6799 Int Fax: +61 7 3290 6332

Email: sales@multi-store.com.au www.multistore.com.au

ASSEMBLY INSTRUCTIONS FOR EXECUTIVE SERIES

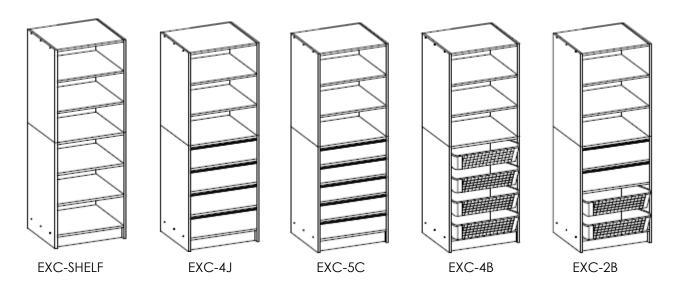

Side Gables " BOTTOM SECTION " \triangle & \triangle = 1035 X 445 X 16 Side Gables " TOP SECTION " \triangle & \bigcirc = 965 X 445 X 16

TOP, BOTTOM & MIDDLE FIXED SHELVES.

1 X TOP H = 575 X 443 X 16

1 X MIDDLE D = 575 X 443 X 16

1 X BOTTOM C = 575 X 443 X 16

ADJUSTABLE SHELVES K - 2 X 575 X 443 X 16

KICK BOARD B - 1 X 575 X 61 X 16








HARDWARE LIST

| NO. | MODEL | DESCRIPTION | QTY |
|-----|-----------|----------------------------|-----|
| 1. | T | M50 X 5mm CONFIRMAT SCREWS | 20 |
| 2. | ~ | WHITE COVER CAPS | 20 |
| 3. | • | BACKING NAILS | 75 |
| 4. | | SHELF SUPPORT PINS | 16 |
| 5. | == | DOWELS | 4 |

ASSEMBLY INSTRUCTIONS FOR EXECUTIVE SERIES (BOTTOM SECTION)

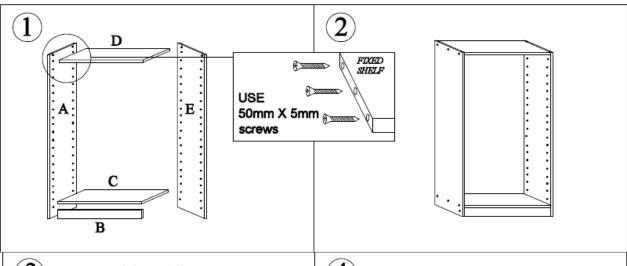



- Fixing of the Backing Panel F 963 x 605
- 1. Place unit face down on the floor.

IMPORTANT


To ensure that the side gables A & E remain straight, start by placing the back panel F flush with the bottom of fixed shelf C keeping in the centre of side gables A & E nail (tack) at each side.
 Then keeping the back PARALLEL to the side gables poil (tack) the middle of each

side gables nail (tack) the middle of each side, then the top, check measure the top middle and bottom are the same measurement, adjust if necessary! If ok, continue by placing nails appox 100mm apart.

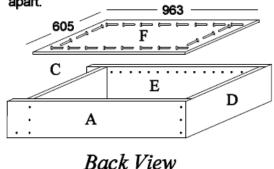

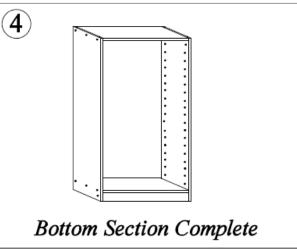

ASSEMBLY INSTRUCTIONS FOR EXECUTIVE SERIES (TOP SECTION)

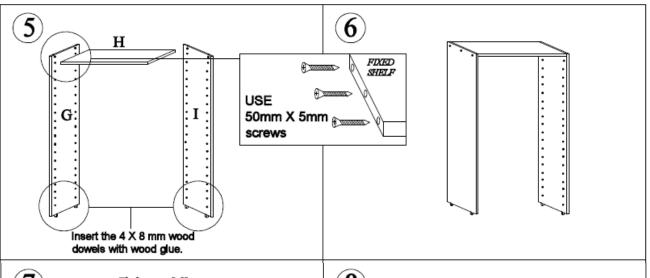


7 Fixing of the Backing Panel J 973 x 605


1. Place unit face down on the floor.

IMPORTANT

2. To ensure that the side gables G & I remain straight, start by placing the back panel J flush with the top of fixed shelf H keeping in the centre of side gables G & I nail (tack) at each side.

Then keeping the back PARALLEL to the side gables nail (tack) the middle of each side, then the top, check measure the top middle and bottom are the same measurement, adjust if necessary! If ok, continue by placing nails appox 100mm

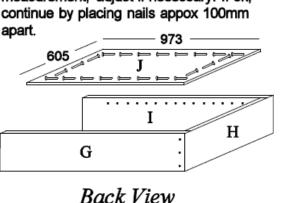

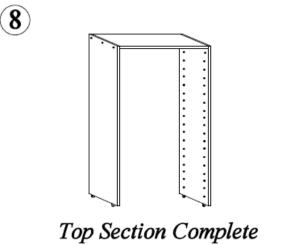

ASSEMBLY INSTRUCTIONS FOR EXECUTIVE SERIES (JOINING TOP & BOTTOM SECTIONS TOGETHER)

