



**FLEXI CLIPS INSTALLATION INSTRUCTIONS**

- 1.** Loosen the adjustment screw at the bottom of the Style Clips to expose the mounting holes. **(Pic 1)**  
 (Note: it is not necessary to separate completely)

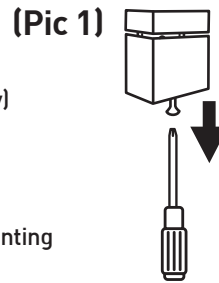

- 2.** Using a pencil, mark the position of one of the Style Clip's mounting hole onto the wall.  
 Mark the position of the second Style Clip's mounting hole, using a spirit level to ensure the shelf will be level. **(Pic 2)**

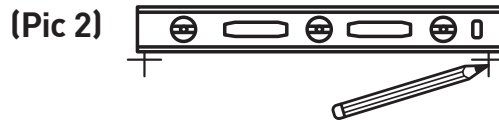


**3.**

**OR**


**FOR PLASTERBOARD WALL**

See your local hardware stockist for recommended wall plugs suitable for plasterboard wall (not provided) and fasten Style Clips to wall as per the hardware recommendations.

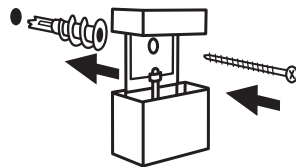


**FOR MASONRY WALL**

Using an 8mm drill bit, drill a 38mm deep hole for each Style Clip. Insert wall plugs provided and fasten to wall with screws provided.

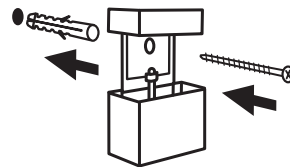

- 4.** Ensure the black plastic protector is seated correctly on the top of the base section of each Style Clip.

- 5.** Position shelf and tighten adjustment screw in each Style Clip. **(Pic 5)**

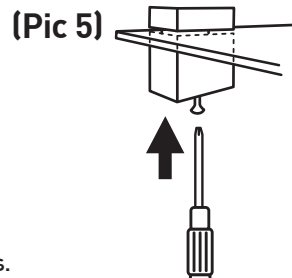

**WARNING  
 CHOKING HAZARD**  
 This product contains small parts.