PLEASE NOTE









Before assembly and whilst unpacking, please be aware that there are sharp corners and edges that could cause injury and it is advisable to wear protective gloves when handling these items, sensible shoes are also recommended. Until such time as the SAFETY EDGE is fitted all necessary precautions need to be undertaken to avoid injury.

LAYOUT IDEAS

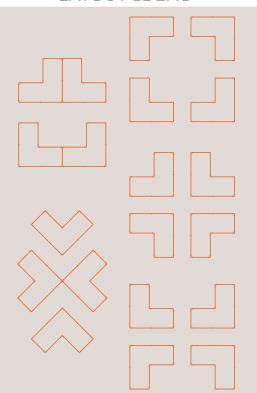

SHAPES R A N G E RAISED GARDEN BED

61N1

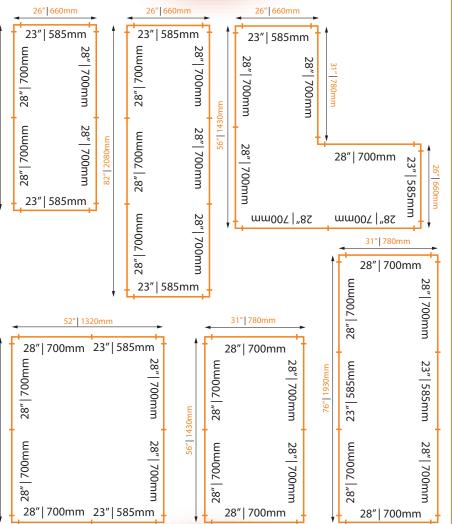

ASSEMBLY







..... IMPORTANT!! |------


We recommend placing the bottom edge of the bed on a 1-2" layer of 1/2-1" gravel, this allows excellent drainage and protects the bottom edge of the bed. Also placing the bed on level ground is advised.

······ STEP 1 | ······

Remove protective plastic covering (on all coloured beds).

STEP 2

Please follow assembly diagram placing all wing nuts in loosely initially and then tighten. A wing nut tool is supplied. Failure to tighten each wing nut and bolt to its maximum may cause failure. A screwdriver or cordless drill may assist with this process.

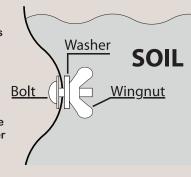

ENSURE THAT YOU ATTACH THE CORNERS ON THE OUTSIDE OF THE STRAIGHT SHEETS

STEP 3

When filling the L shape bed ensure that the bed remains square (26"/660mm). This is achieved using a tape measure



..... STEP 4 |.....

Simply push the edging onto the rolled steel edge and trim excess. The safety edging is designed to lock onto the rolled steel edge making it more permanent.

····· IMPORTANT!! I·····

If filling the bed with a bobcat or backhoe fill the initial 1/3 of bed slowly. Also when filling your veggie bed do not climb in as this puts unnecessary pressure onto the bed.

[W] www.birdiesgardenproducts.com.au |T| 1300 424 734