

# BARRIER DOORS DO-IT-YOURSELF

---

## INSTALLATION INSTRUCTIONS

Before starting, please ensure you have the handles and lock included in the package with your Cowdroy Barrier Door

## MATERIALS & EQUIPMENT YOU WILL NEED

- Drills and bits
- Hammer
- Chisel
- Screwdriver
- Measuring Tape
- Pencil
- Builders Square or Spirit Level

## SAFETY

Always keep tools and materials away from children. Please read through all the instructions before beginning your project.

## PLEASE NOTE

The installation instructions are Cowdroy's opinion and we do not warrant the accuracy or completeness of that information. Cowdroy excludes all liability in relation to the statements in this brochure.


## PRE-ASSEMBLY MAKES THE JOB EASY

As each door has been made to measure using the measurements the customer provided on the order form, for the customers convenience, the hinges and lock body have been pre-assembled and installed to aid in the installation process.

---

## INSTALLING YOUR DOOR


In your assembly pack you will see three wedges. Close the hinges and stand the door in place with two wedges supporting the bottom (one on each side) and one supporting the top in the middle.

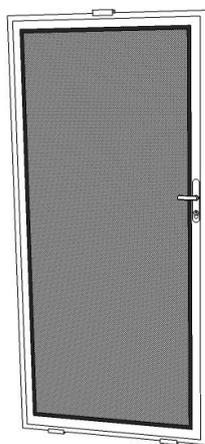

- Mark out the position for the top and bottom hinge with a pencil on the doorway from the outside.
- Remove the door and continue the marked lines inside the doorway with a builders square or spirit level.
- Open the door and prop it up so that the hinges are aligned with the marks on the doorway.
- Ensure the door sits square – you may need a friend to help with this.
- With the pencil mark the centre hole on the top and bottom hinges.
- Pre-drill the holes you have marked in the centre of the elongation with a 3mm diameter drill.
- Hold the door in position and screw in the fixing screws into the pre-drilled holes.
- Check that door swings correctly and there is equal clearance at the top and bottom of the door.
- You can adjust the door vertically using the elongations on the hinges.
- Once you have the door in the correct position, pre-drill then install the remaining screws.
- Each hinge should have three screws.

## FITTING THE STRIKE PLATE

- With the door unlocked, use a pencil to mark the door jamb at the same heights as the top and bottom of the main bolt of the lock.
- To position, centre the strike plate's rectangular central cut-out over the pencil marks on the door jamb.
- With a pencil, mark the door jamb through the screw holes and the rectangular cut-out.
- If necessary, pilot drill the screw holes before fitting.
- With a chisel, remove the timber inside the marked rectangle on the door jamb to a depth of 16mm to ensure there is adequate clearance around all sides of the main bolt.
- Secure the strike plate to the door jamb with two #8 x 25mm screws.
- Test the operation of the lock. If the lock will not operate, carefully remove more timber.
- Occasional light lubrication of the main bolt is recommended.

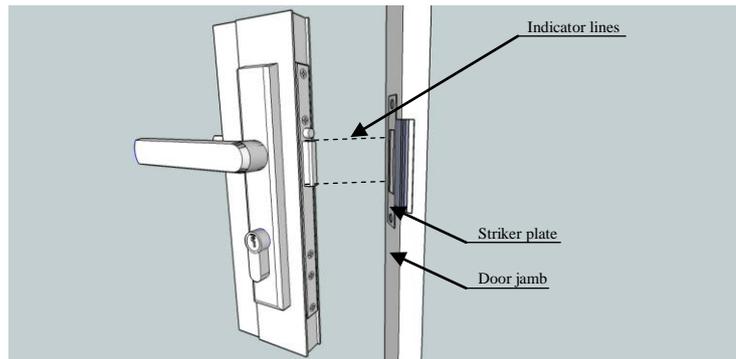

## FITTING OPTIONAL EXTRAS

### BUG SEAL

The bug seal for your door will have been supplied with your door as a loose fitting. Fit the bug seal after the door has been hung.

The bug seal is to be fitted to the outside bottom frame of the door.

To fit, peel the cover strip off the double sided tape and position the bug seal so that the brush strip is in contact with the floor, but still allows easy movement of the door.

### TRIPLE LOCK

If your door has been supplied with a triple lock, repeat the instructions for fitting the striker plate for a single lock to include the top and bottom bolts.

### PET DOOR

Per doors will come pre-fitted to your door and will only require periodic cleaning and lubrication.