



IMPORTANT NOTES

- Before assembly and whilst unpacking, please be aware that there are sharp corners and edges that could cause injury and it is advisable to wear protective gloves when handling these items, sensible shoes are also recommended. Until such time as the SAFETY EDGE is fitted all necessary precautions need to be undertaken to avoid injury.
- We recommend placing the bottom edge of the bed on a 1-2 inches of ½ - 1 inch stone, this allows excellent drainage and protects the bottom edge of the bed.
- **IMPORTANT!!**
If filling with a bobcat or backhoe fill initial 1/3 of bed slowly.
- **IMPORTANT!!**
When filling your veggie bed do not climb in as this puts unnecessary pressure onto the bed.
- **IMPORTANT!!**
Placing the bed on level ground is advised.
- **IMPORTANT!!**
Initially place all wing nuts in loosely & then tighten (using the wingnut tension tool as shown below), failure to tighten each nut and bolt to its maximum may cause failure. A screwdriver or cordless drill may also assist with this process.

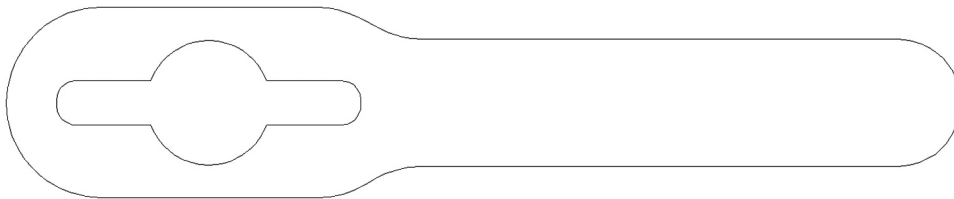


(WINGNUT TENSION TOOL)

CONFIGURATIONS

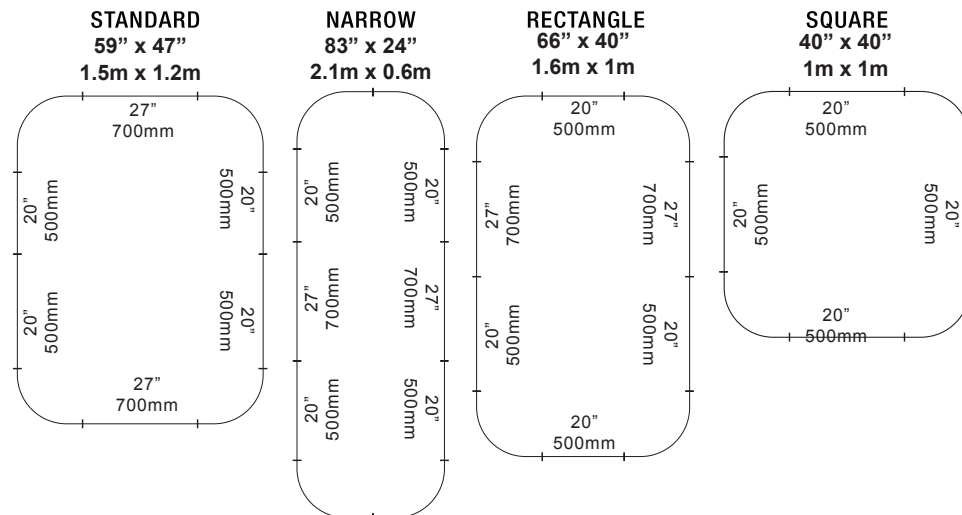

ASSEMBLY

- > **STEP 1**
Remove protective plastic covering (on all coloured beds).
- > **STEP 2**
Please follow below assembly diagram.

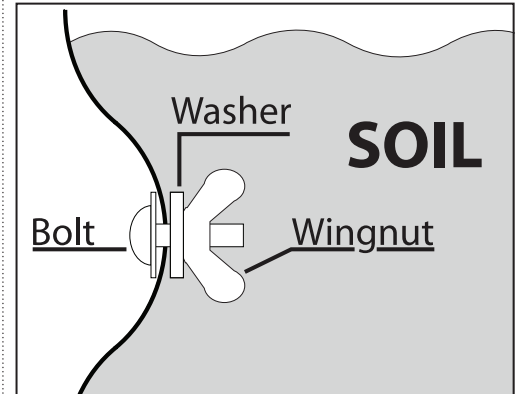

- > **STEP 3**
IMPORTANT!! Simply push the rubber edging onto the rolled steel edge and trim excess. The safety edging is designed to lock onto the rolled steel edge making it more permanent.

