


MULTISTORE

ASSEMBLY INSTRUCTION FOR MAXI AND MSM 716

When attaching unit to wall put safety bracket in middle of unit with 16mm pan head screw then 25mm pan head screw into wall. For plasterboard without a stud it is recommended to use a plug with screw (not provided).

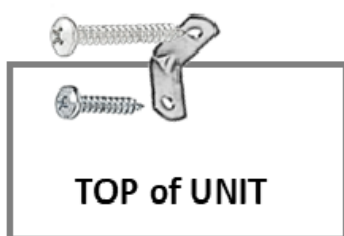

	WARNING:	Serious injury or death can be caused by toppling furniture
Help prevent tip-over: <ul style="list-style-type: none"> Anchor this product to a wall or other suitable surface Check anchors regularly 		<ul style="list-style-type: none"> Avoid placing TVs on top unless the TV is also anchored Use drawer locks to prevent children climbing



PARTS IDENTIFICATION LIST

2 x GABLES		3 x ADJUSTABLE SHELF	
1 x BACKING BOARD		1 x BOTTOM KICK	
		3 x FIXED SHELF	

NO	MODEL	DESCRIPTION	QTY	NO	MODEL	DESCRIPTION	QTY
1		CONFIRMAT SCREWS	18	5		SHELF PINS	12
2		CAPS	18	6		BRACKETS	1
3		BACKING NAILS	75	7		BRACKET UNIT SCREW	1
				8		BRACKET WALL SCREW	1

FIRST STEP:- UNPACKED YOUR CARTON PART 1 OF 2, LAY A,B,C,E ,F ON FLOOR RETRIEVE THE LEFT-HAND GABLE (A) FACING DOWN ON THE EDGED FRONT.

USING THE 30mm 8 GAUGE CONFIRMAT SCREWS PROVIDED YOU CAN NOW SCREW YOUR KICK FIRST, BOTTOM SHELF NEXT AND THEN TOP SHELF ATTACHED ONTO THE LEFT-HAND GABLE. WHEN FINISHED DO THE SAME TO THE RIGHT-HAND GABLE. LEAVE YOUR CARCASS FACING DOWN AND GO TO STEP 2.

STEP 2:- FOLD OUT YOUR BACK AND PROCEED TO NAIL (3) ON MAKING SURE YOU ARE LEVEL AT ALL TIMES, THE BACKING IS SLIGHTLY SMALLER THAN THE UNIT SO MAKE SURE YOU START 1mm IN FROM THE EDGE, YOUR NAILS GENERALLY SIT 100mm APART, STAND YOUR UNIT UP NOW YOU CAN PROCEED TO PUT YOUR ADJUSTABLE SHELVES IN.

