


# plantAscreen™

vertical garden

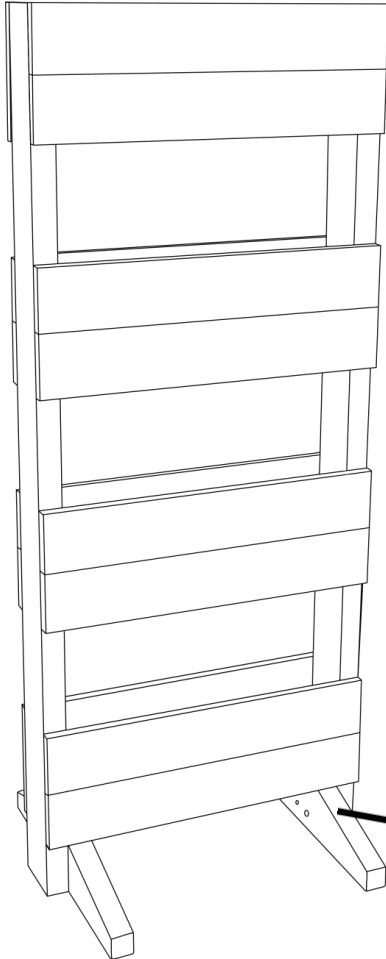

H: 1500mm W: 570mm  
D: 150mm



## Installation

1. Make sure to place the drainage pot with the 13mm grommet at the lowest level
2. Place each free draining pot above the drainage pot thereafter
3. When joining multiple units ensure to connect the base units using 13mm Irrigation pipe, elbows and t-piece joiners
4. Place the reservoir grid into the base of the drainage pot
5. Fix the feet of the unit using the screws provided (See image below)

