


Scandia Warmbrite 200i and 300i Zero Clearance Box including 3.6 metre flue kit **Assembly Instructions**

Step 1: Lay down bottom panel folded edges facing upwards and non folded edge to the front.




Step 2: Screw inner left, inner right and inner back panels together, returns facing outwards.

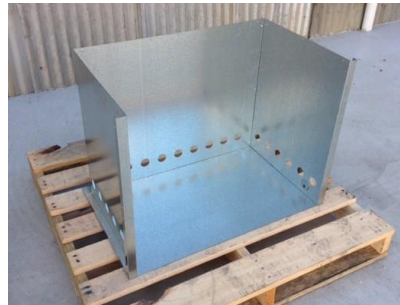

Step 3: Screw inner top panel in place.



Step 4: Screw 8" collar in place.
30mm edge to front for 200i.
83mm edge to front for 300i.

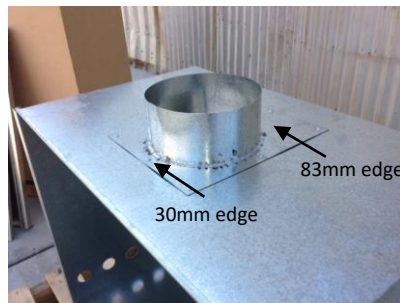


Step 5: Screw outer left, outer right and outer Rear panels in place with vent holes to the bottom, returns facing outwards.



Step 6: Screw outer top panel into place.
1 x large return facing upwards at the front,
3 x small returns facing downwards.




Step 7: Screw 10" collar in place
25mm edge to front for 200i
75mm edge to front for 300i

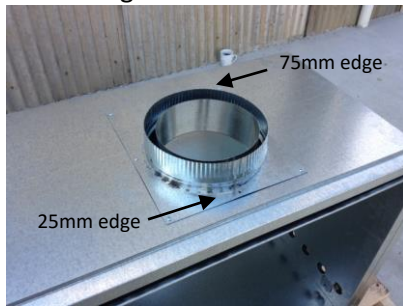

Note: Short 6" s/s length supplied to match height of triple skins.



Note 2: Use plastic insulating covers where fan cord passes through inner and outer panels.

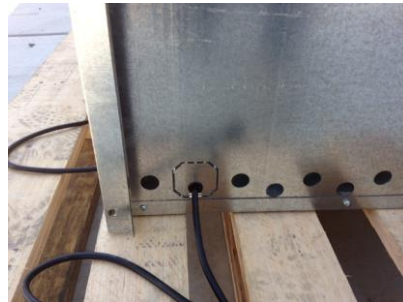

Triple skin flue must be installed from zero clearance box as per Australian Standards. A 25mm clearance from the outer 10" casing to any combustible material must be maintained.

Please see heater owners manual for other clearances and more information.