


## ASSEMBLY INSTRUCTION FOR—C06....PRT 1 & 2




When attaching unit to wall put safety bracket in middle of unit with 16mm pan head screw then 25mm pan head screw into wall.  
For plasterboard without a stud it is recommended to use a plug with screw (not provided).




	<b>WARNING:</b>	Serious injury or death can be caused by toppling furniture
<b>Help prevent tip-over:</b>		
<ul style="list-style-type: none"> <li>Anchor this product to a wall or other suitable surface</li> <li>Check anchors regularly</li> </ul>	<ul style="list-style-type: none"> <li>Avoid placing TVs on top unless the TV is also anchored</li> <li>Use drawer locks to prevent children climbing</li> </ul>	

## PARTS IDENTIFICATION LIST

2 x GABLES

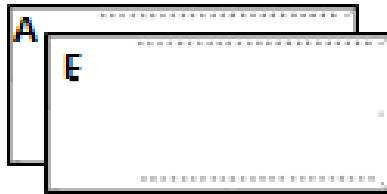

1 x BACKING BOARD

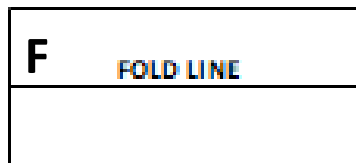







2 x FIXED SHELF



1 x BOTTOM KICK






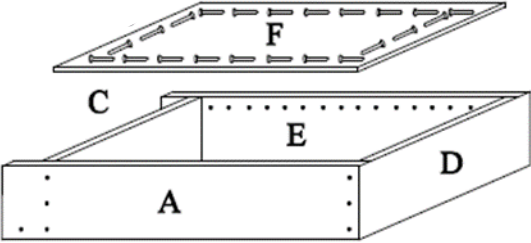

NO	MODEL	DESCRIPTION	QTY	NO	MODEL	DESCRIPTION	QTY
1		CONFIRMAT SCREWS 50mm x 5mm	14	5		16mm PAN HEAD SCREWS	1
2		CAPS	14	6		25mm PAN HEAD SCREWS	1
3		BACKING NAILS	50	7		"L" SAFETY BRACKET	1

**FIRST STEP:- UNPACKED YOUR CARTON PART 1 OF 2, LAY A,B,C,D,E ON FLOOR & RETRIEVE THE INFILL & SCREWS FROM PART 2. ATTACH THE INFILL TO THE UNDERNEATH OF THE FRONT EDGED TOP FIXED SHELF AS DEMONSTRATED DOWN BELOW IN INFILL STEP.**







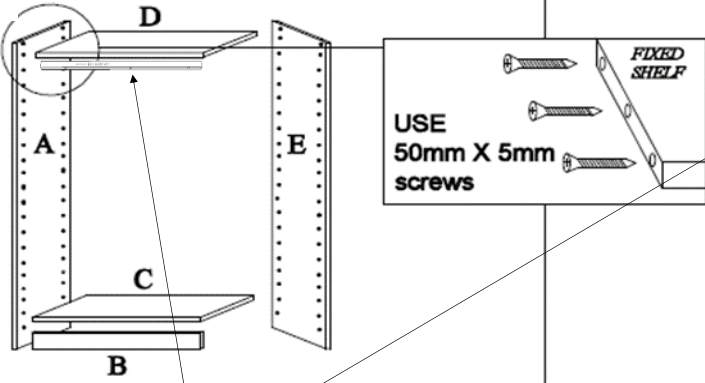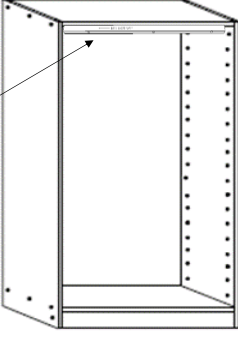



**STAND LEFT-HAND GABLE FACING DOWN ON THE EDGED FRONT, USING THE 30mm 8 GAUGE CONFIRMAT SCREWS PROVIDED YOU CAN NOW SCREW YOUR KICK FIRST, BOTTOM SHELF NEXT AND THEN TOP SHELF WITH INFILL ALLREADY ATTACHED FACING DOWN INTO THE LEFT-HAND GABLE.**

**WHEN FINISHED DO THE SAME TO THE RIGHT-HAND GABLE.**

**LEAVE YOUR CARCASS FACING DOWN AND GO TO ..STEP 3.**


<p>STEP 1</p>  <p>USE 50mm X 5mm screws</p>	<p>STEP 2</p> 
<p><b>INFILL STEP</b></p>  <p>YOU WILL NEED TO RETRIEVE THE INFILL AND 3 X 60mm SCREW FROM PART 2, USING YOU SCREWS PROVIDED, ATTACH THE INFILL TO THE UNDER-SIDE OF THE TOP FIXED SHELF.</p>	
<p>STEP 3</p> <p><b>Fixing of the Backing Panel F</b></p> <p>1. Place unit face down on the floor.</p> <p><b>IMPORTANT</b></p> <p>2. To ensure that the side gables A &amp; E remain straight, start by placing the back panel F flush with the bottom of fixed shelf C keeping in the centre of side gables A &amp; E nail (tack) at each side. Then keeping the back <b>PARALLEL</b> to the side gables nail (tack) the middle of each side, then the top, check measure the top middle and bottom are the same measurement, adjust if necessary! If ok, continue by placing nails approx 100mm apart.</p> 	<p>FINISHED</p>  <p><i>Bottom Section Complete</i></p> <p>YOU ARE NOW READY TO MOVE TO PART 2 TO ASSEMBLE YOUR DRAWERS TO GO INTO YOUR FINISHED CARCASS.</p>

## HOW TO ASSEMBLE YOUR 5—DRAWER

NO	MODEL	DESCRIPTION	QTY	NO	MODEL	DESCRIPTION	QTY
1		CONFIRMAT SCREWS	20	6		CAMS	10
2		DOWELS	20	7		CAM PINS	10
3		BACKING NAILS	100	8		60mm 8 GAUGE INFILL SCREW	3
4		5/8 X 6 WOOD SCREWS	30	9		EURO SCREWS	20
5		HANDLES	5	10		INFILL 55mm	1

### STEP 1.

LAYOUT YOUR DRAWER PIECES FLAT AS PER DESIGN WITH PRE-DRILLED HOLES FACING UP. START WITH THE BACK OF THE FRONT DRAWER AND PLACE YOUR DOWELS & CAM PIN IN THE PRE-DRILLED HOLES ON EITHER SIDE AS INSTRUCTED BELOW.

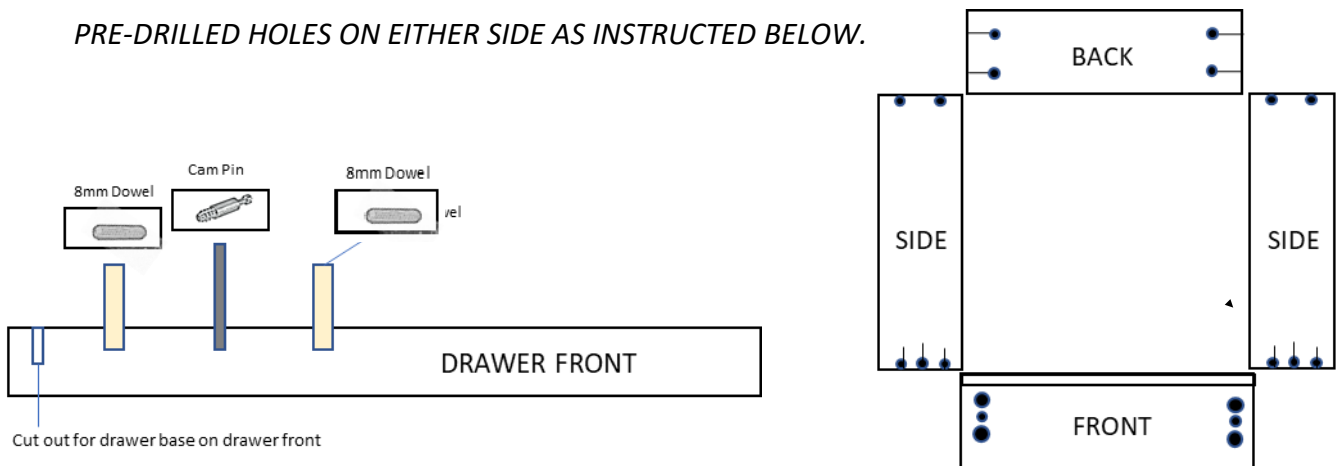

### STEP 2.


GRAB YOUR FIRST SIDE AND INSERT YOUR CAMS INTO THE HOLE PROVIDED ON THE OUTSIDE OF THE DRAWER SIDE GENTLY AS PER INSTRUCTIONS BELOW.



#### IMPORTANT NOTICE:

PLACE THE FITTING OVER THE HOLE KEEPING THE SQUARE EDGE OF THE FITTING PARALLEL TO THE FACE OF THE BOARD, KNOCK IN **CAREFULLY**.

PUSH THE SIDE IN TO THE FRONT DOWELS & PIN AND THEN CAREFULLY USING A SCREW DRIVER TURN UNTIL IT LOCKS IN. REPEAT THIS PROCESS WITH THE OTHER SIDE.

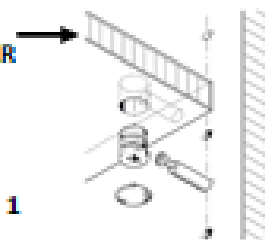

NOW PLACE YOUR LAST PIECE BETWEEN THE TWO SIDES USING THE SCREWS: NO 1 SUPPLIED, SCREW INTO THE SIDES OF THE BACK DRAWER PIECE.


---

## DRAWER ASSEMBLY

---

### **STEP 3.**


*USING THE HANDLE SCREW ATTACHED THE HANDLE TO THE BACK OF THE DRAWER FRONT INTO THE PREDRILLED HOLES ALLREADY PROVIDED.*

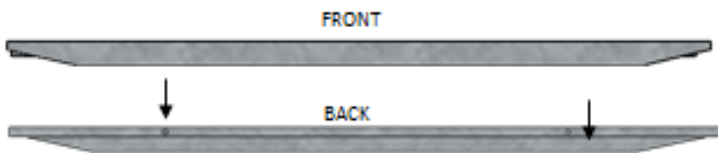

---

### **STEP 4.**

*PLACE YOUR DRAWER RUNNER ON THE BOTTOM OF THE DRAWER MAKING SURE THE WHEEL IS TO THE BACK OF THE DRAWER SIDE, USING 2 OF THE 5/8 SCREWS, FIX INTO YOUR DRAWER FRONT AND BACK OF THE RUNNER, NOW REPEAT FOR THE*

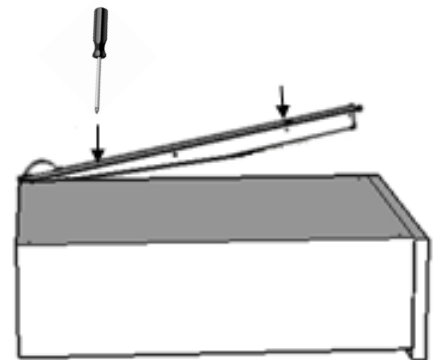

---

PICTURE OF YOUR FINISHED DRAWER

