


Elegance Installation Instructions


Tools Required

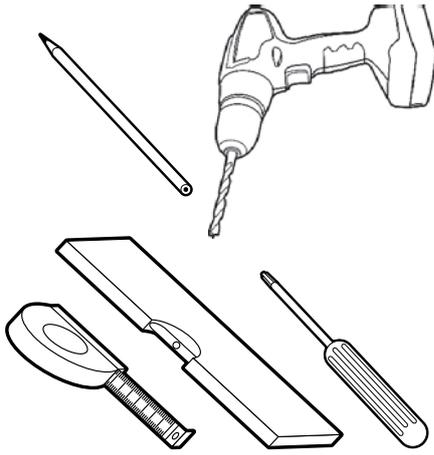

Use these tools for easy DIY installation.


- METAL TAPE MEASURE • SPIRIT LEVEL • PENCIL
- PHILIPS HEAD SCREW DRIVER • 2mm DRILL BIT • DRILL

Components

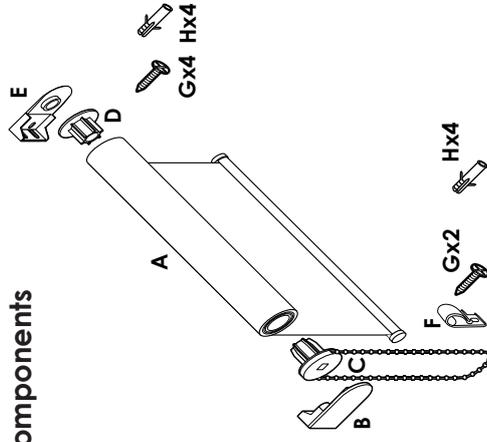

Before installation, always perform a check to ensure all blind parts and componentry is present.


Face/Ceiling-Mount Check Measure

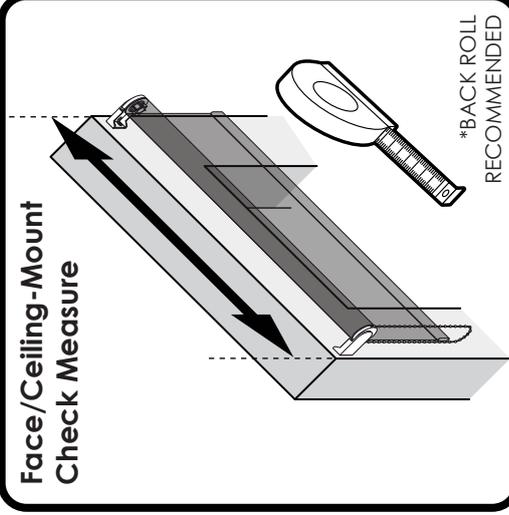

*BACK ROLL RECOMMENDED

Face Mounted blinds are fixed to either: Architrave, Lintel/Wall or ceiling above the window frame. Measure width to cover opening as shown above.

Recess-Mount Check Measure

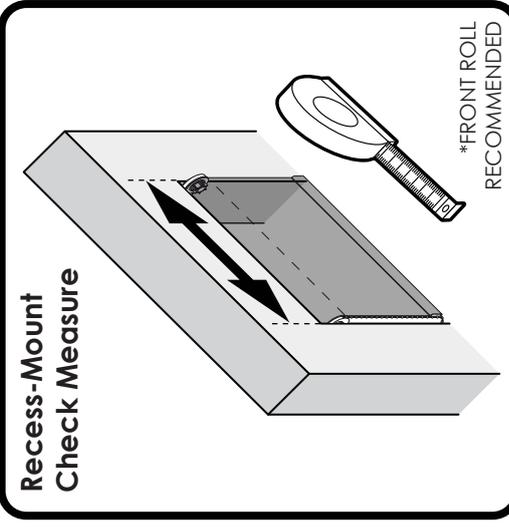

*FRONT ROLL RECOMMENDED

Recess Mounted blinds are fixed inside the window frame. Measure width to fill opening as shown above.

Fixings Included




Screws for fitting to Architrave, Lintel/Wall or Ceiling Joist/Beam. Not suitable for fixing to brick or metal.




Plaster Plugs to be used in conjunction with screws when fitting to plaster.

NOTE: ALTERNATE FIXINGS ARE REQUIRED IF FITTING TO BRICK OR METAL DEPENDING ON YOUR SPECIFIC APPLICATION/LOCATION

Fabric Roll Direction

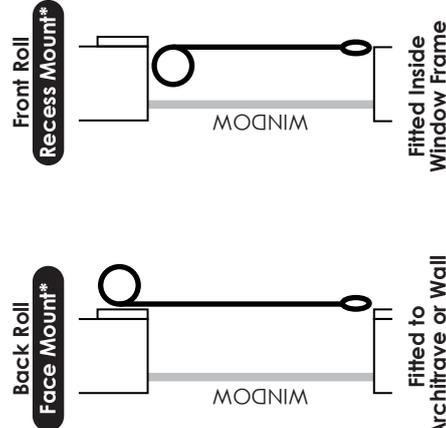

Operation Side

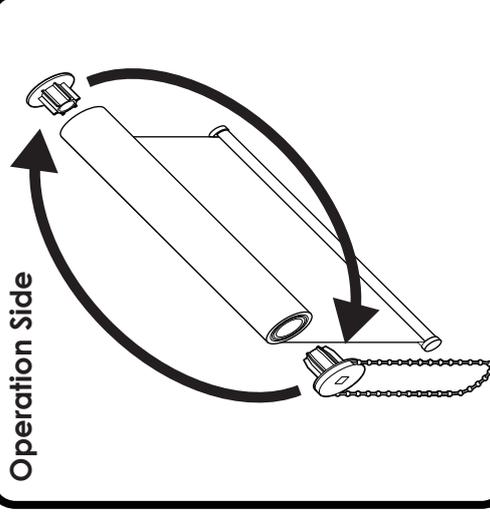

Fabric can be rolled from the front or back by simply flipping the entire roller tube.

***RECOMMENDED STYLE**

The Chain Operation can be swapped from either left or right side depending on your application/location.

! WARNING

To avoid creating a possible strangulation hazard for children, the corded internal window covering must be installed in such a way that a loose cord cannot form a loop 220mm or longer at a height of less than 1600mm above floor level.

A cord guide may be installed lower than 1600mm above floor level if the cord is sufficiently secured or tensioned to prevent a loop 220mm or longer from being formed.


If a cord guide is installed lower than 1600mm above floor level it must be designed to prevent a child from being able to remove the cord.

If a cleat is used to secure the cord it must be at least 1600mm above floor level because a child is capable of unwinding a cord from a cleat.

Elegance Installation Instructions

ALWAYS MEASURE AND MARK LEVEL BRACKET POSITIONS BEFORE PRE-DRILLING PILOT HOLES


Face-Mount Installation

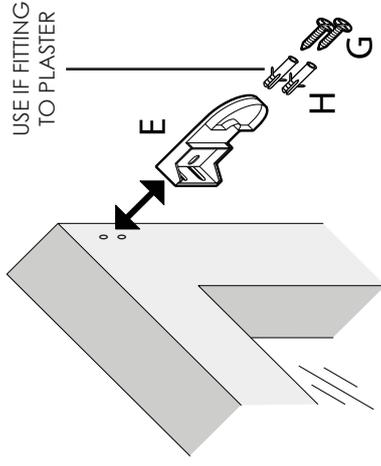

Secure to Architrave or Wall as shown above using screws provided. Use plaster plugs if fixing to wall.


NOTE: ALTERNATE FIXINGS ARE REQUIRED IF FITTING TO BRICK OR METAL DEPENDING ON YOUR SPECIFIC APPLICATION/LOCATION

Recess Side-Mount Installation

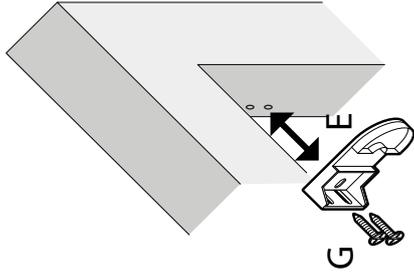

Secure inside window frame as shown above using screws provided


Top-Mount Installation

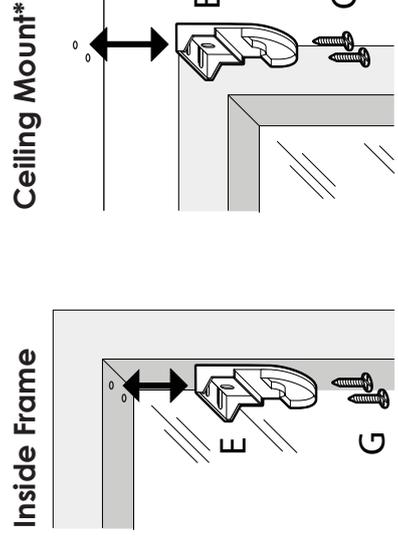

Secure to top of window frame or to ceiling as shown.


***NOTE: CEILING MOUNT MUST BE FIXED TO JOIST/BEAM FAILURE TO DO SO COULD RESULT IN DAMAGE AND/OR INJURY**

Insert Blind

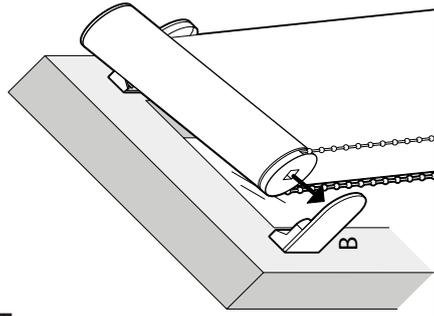


Insert mechanisms into tube on desired sides and insert into brackets.

Install Safety Device

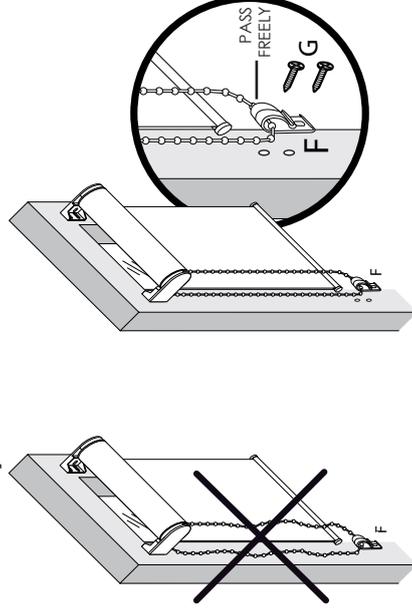

Lightly tension ball chain and fit tension device securely to Architrave/Wall. Allow enough play for chain to pass through device freely.

Operation

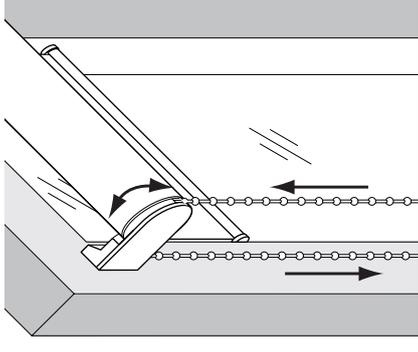

Gently pull on the ball chain to raise or lower your blind to any height.



WARNING

To avoid creating a possible strangulation hazard for children, the corded internal window covering must be installed in such a way that a loose cord cannot form a loop 220mm or longer at a height of less than 1600mm above floor level.

Maintenance

Dust periodically. Use warm soapy water and soft cloth to clean if required.