

IMPORTANT !!



- Before assembly and whilst unpacking, please be aware that there are sharp corners and edges that could cause injury and it is advisable to wear protective gloves when handling these items, sensible shoes are also recommended. Until such time as the SAFETY EDGE is fitted all necessary precautions need to be undertaken to avoid injury.
- We recommend placing the bottom edge of the bed on a layer of 10-20mm gravel, this allows excellent drainage and protects the bottom edge of the bed. Placing the bed on level ground is also advised.
- If filling with a bobcat or backhoe fill initial 1/3 of bed slowly. Also when filling your veggie bed do not climb in as this puts unnecessary pressure onto the bed.

ASSEMBLY

STEP 1

Remove protective plastic covering

STEP 2



Choose shape from available configurations (as shown in diagram below) and lay panels out on ground accordingly.

STEP 3


Making sure the rolled steel edge is facing inwards in relation to the bed initially attach all the required wingnuts loosely & then tighten using the wingnut tension tool as supplied (a screwdriver/cordless drill assists with this process). Failure to tighten each nut and bolt to its maximum may cause failure.

STEP 4

Simply push the rubber edging onto the rolled steel edge and trim excess. The safety edging is designed to lock onto the rolled steel edge making it more permanent.

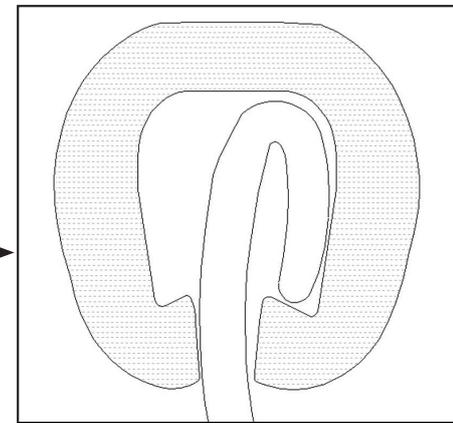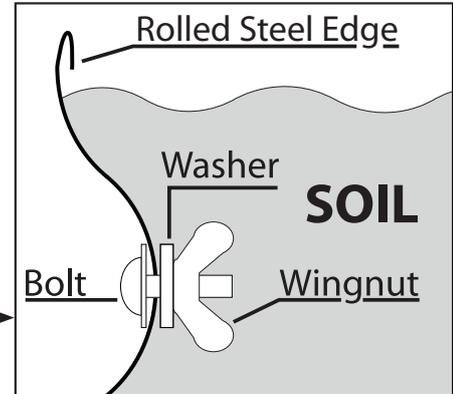

CONFIGURATIONS

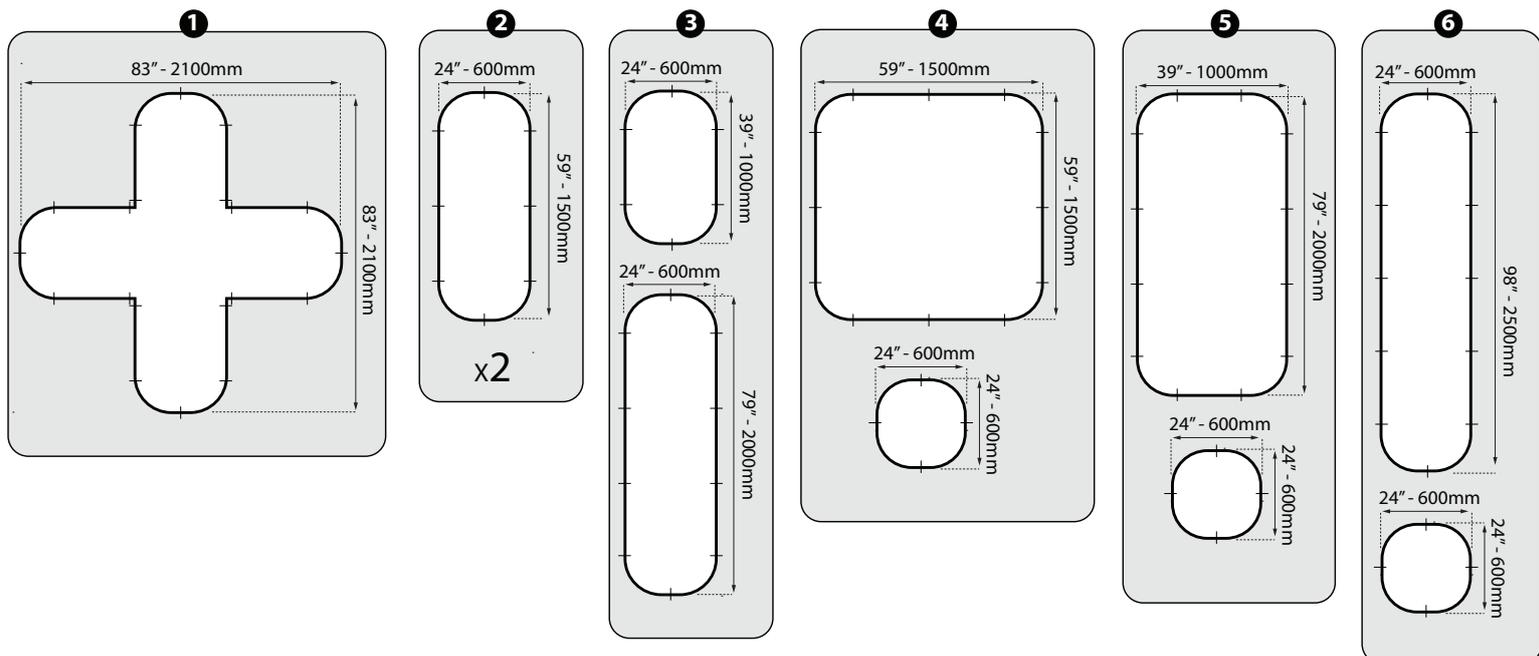

— = STRAIGHT EDGE PANEL 500MM IN LENGTH