
















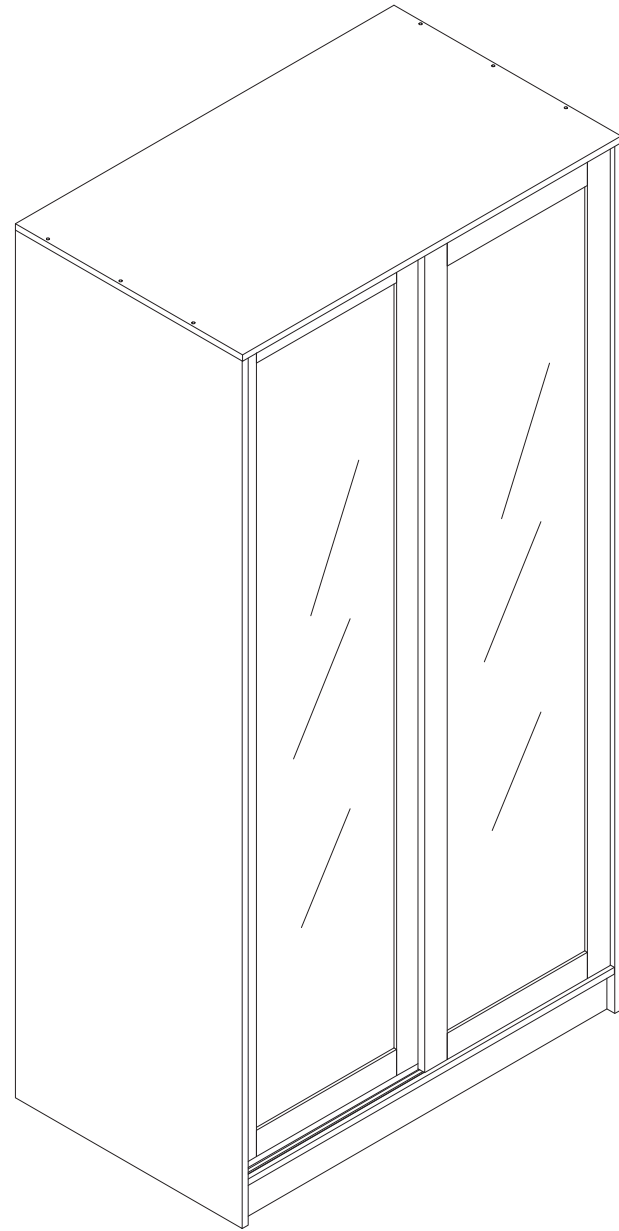


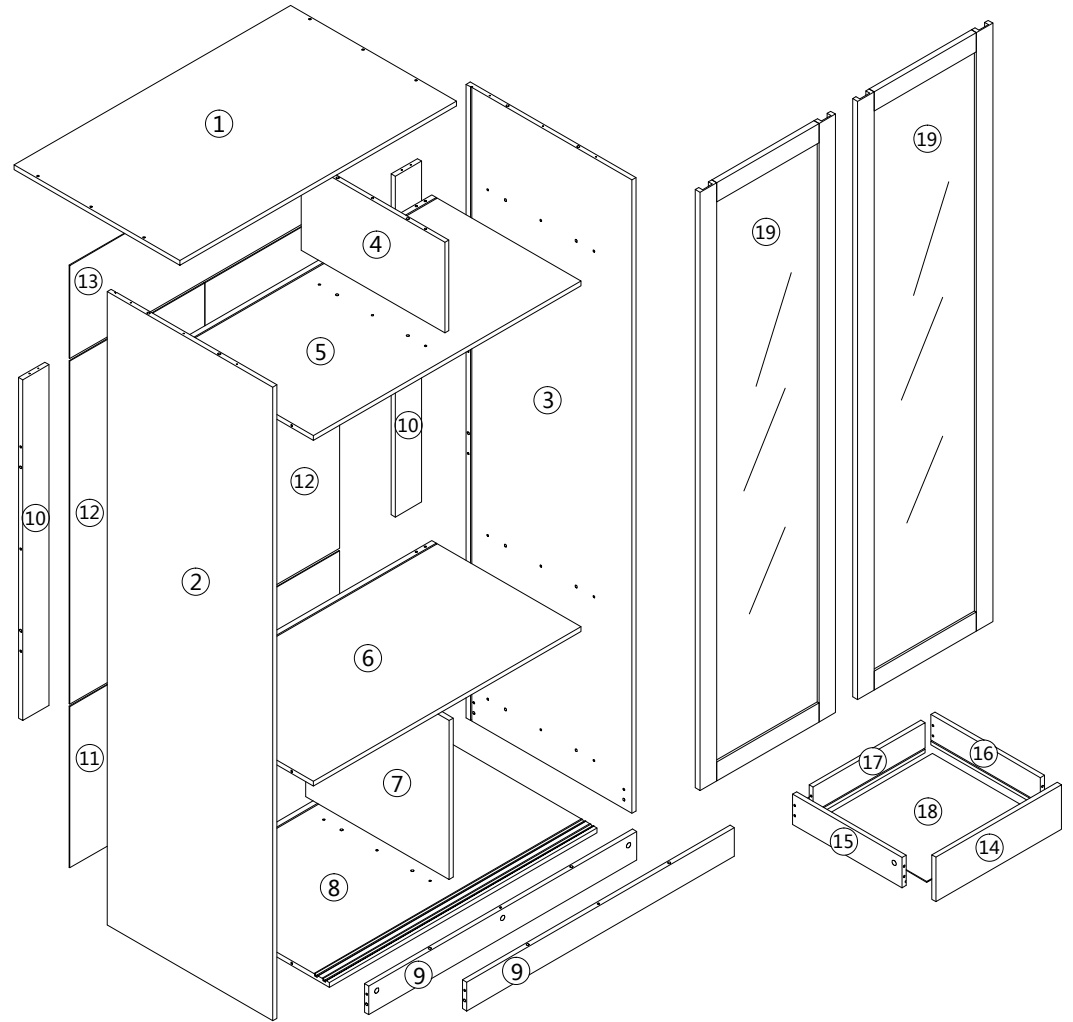

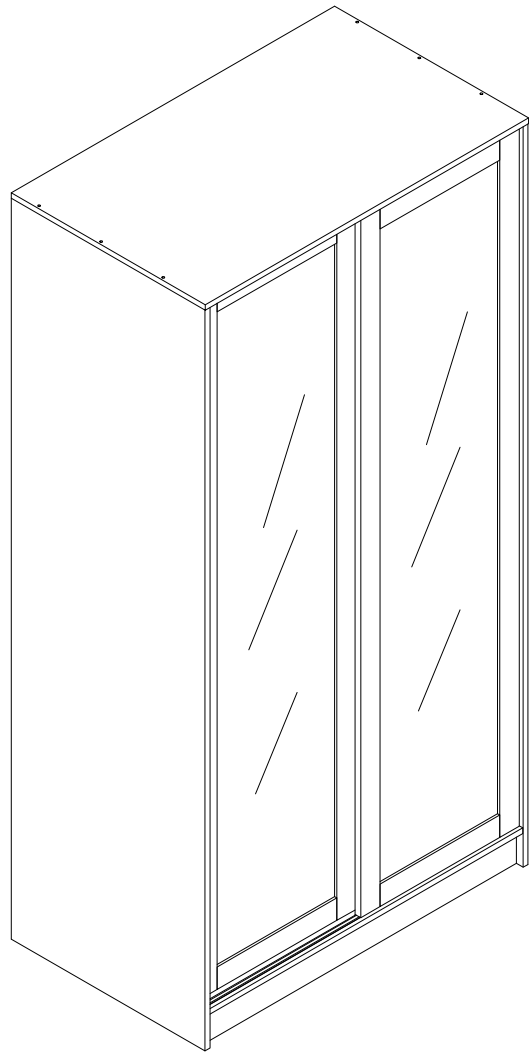


**MONTGOMERY**


# **2 Door Sliding Mirror Wardrobe**






																	
	Ø15x12mm	4x40mm	8x30mm	3x12mm				3.5x12mm									
A	42PCS	B	42PCS	C	34PCS	D	42PCS	E	40PCS	F	2PCS	G	8PCS	H	1PC	I	32PCS
																	
J	3SETS	K	3SETS	L	4PCS	M	4PCS	N	1PC	O	2PCS	P	2PCS				


step 1

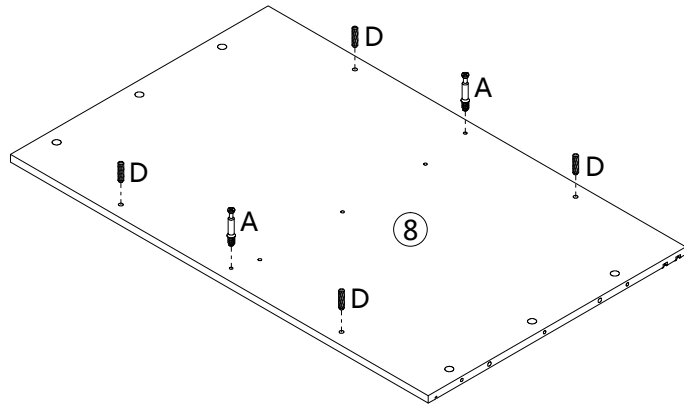


step 2

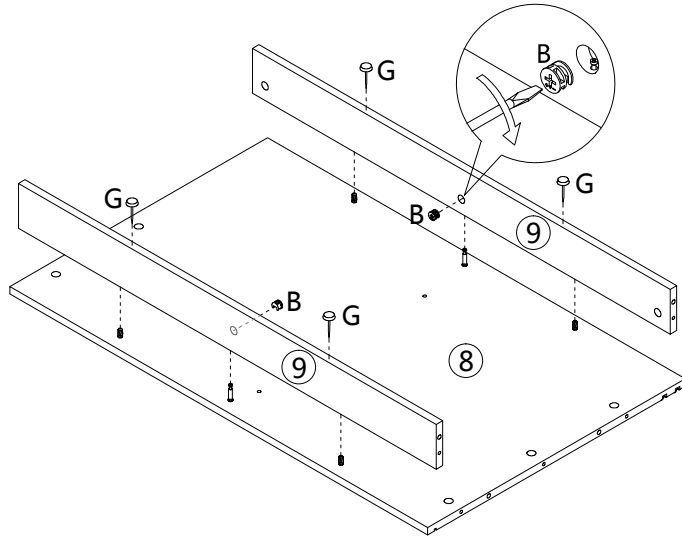


step 3

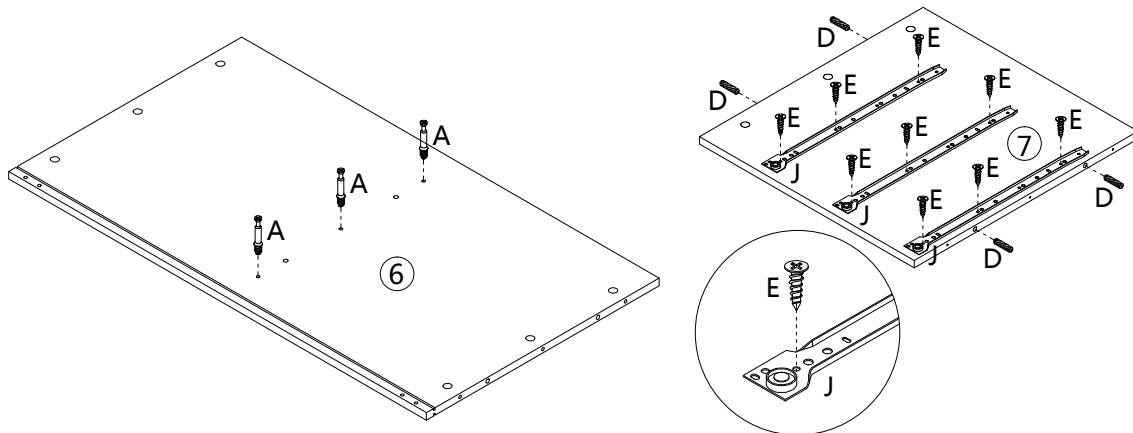


step 4

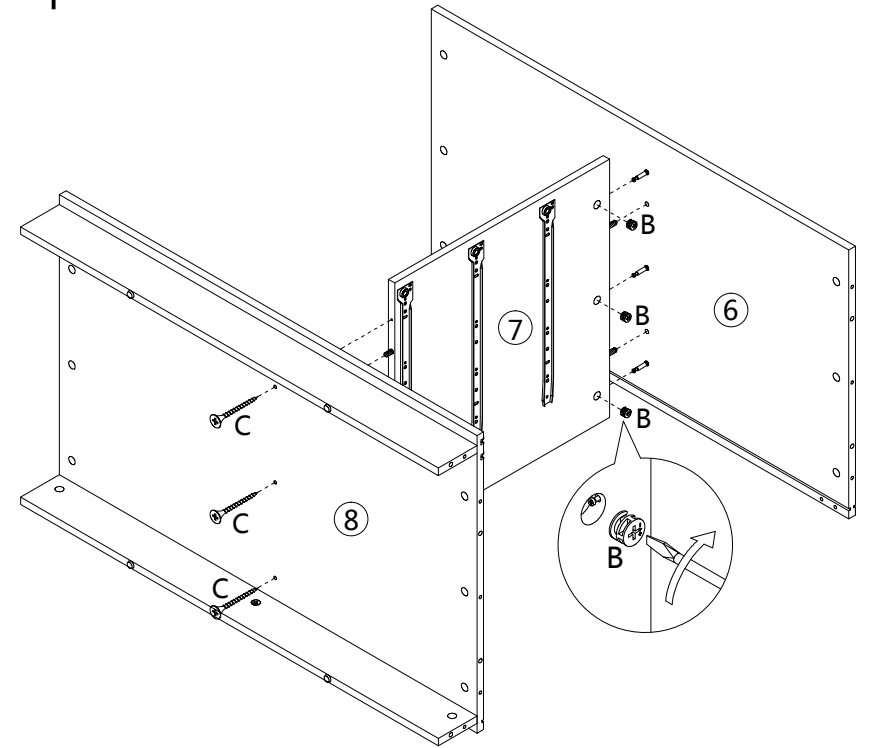


step 5

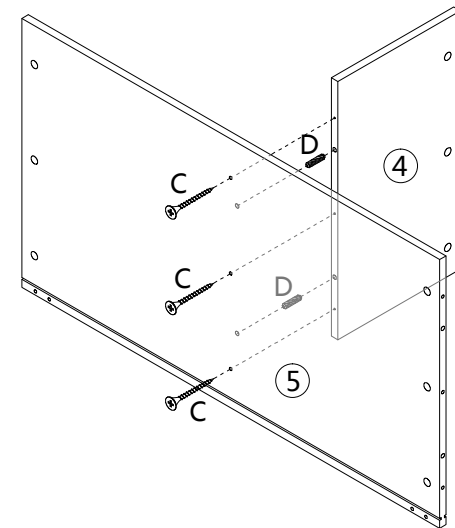


### step 6

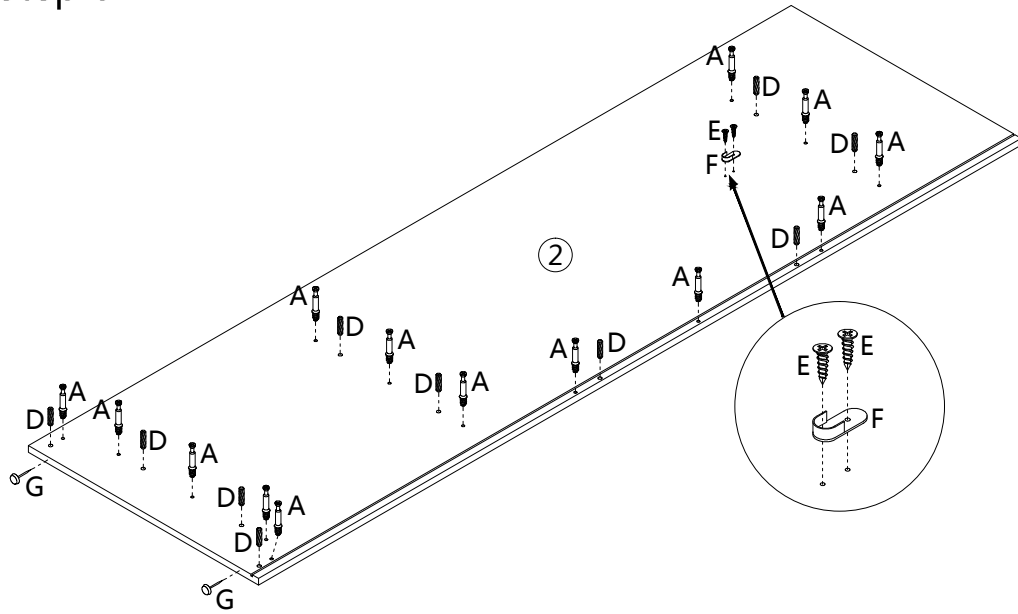


### step 7

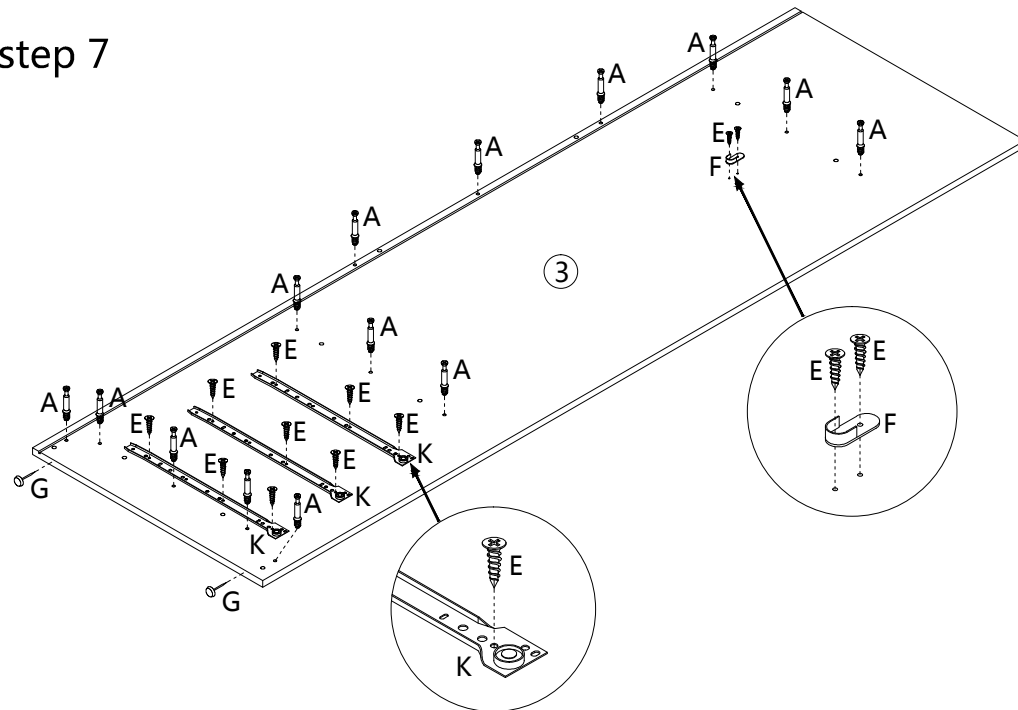


### step 8

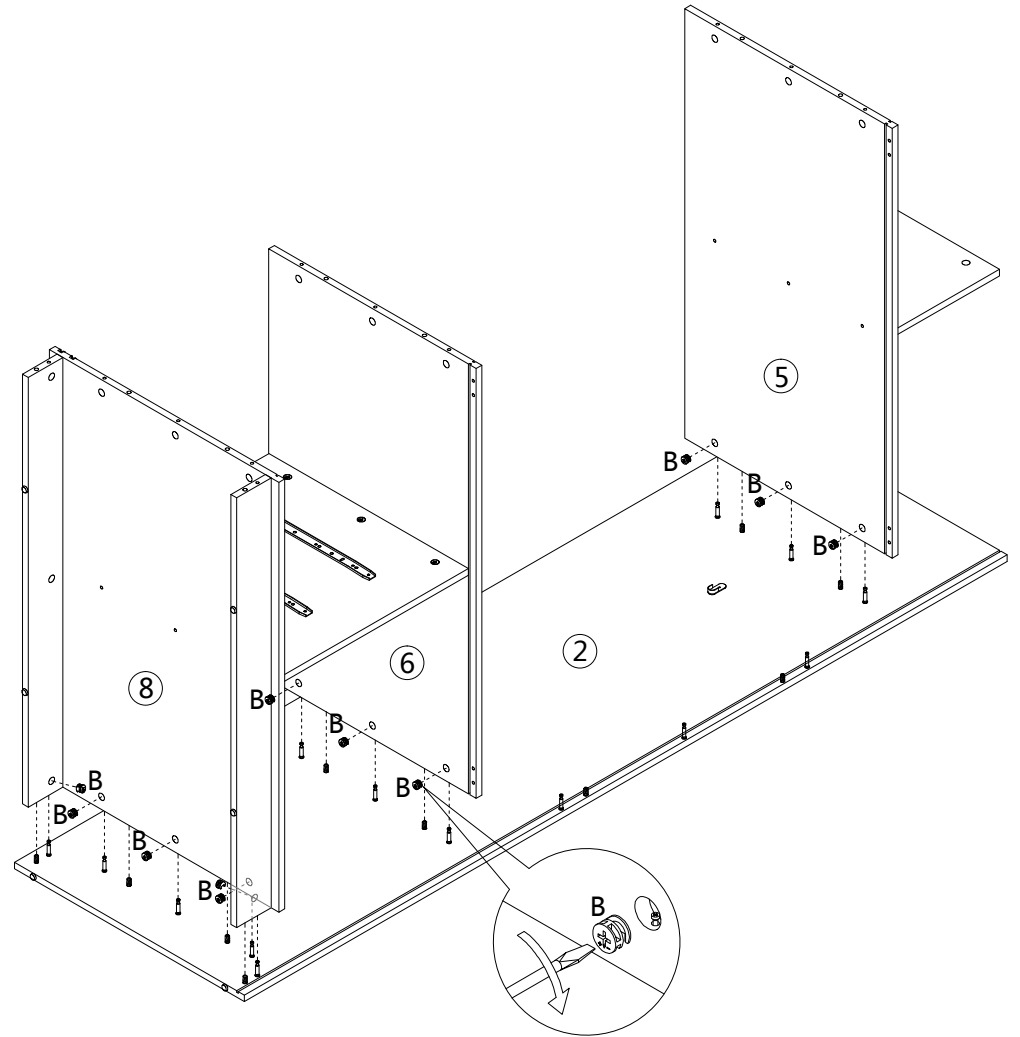


# step 9

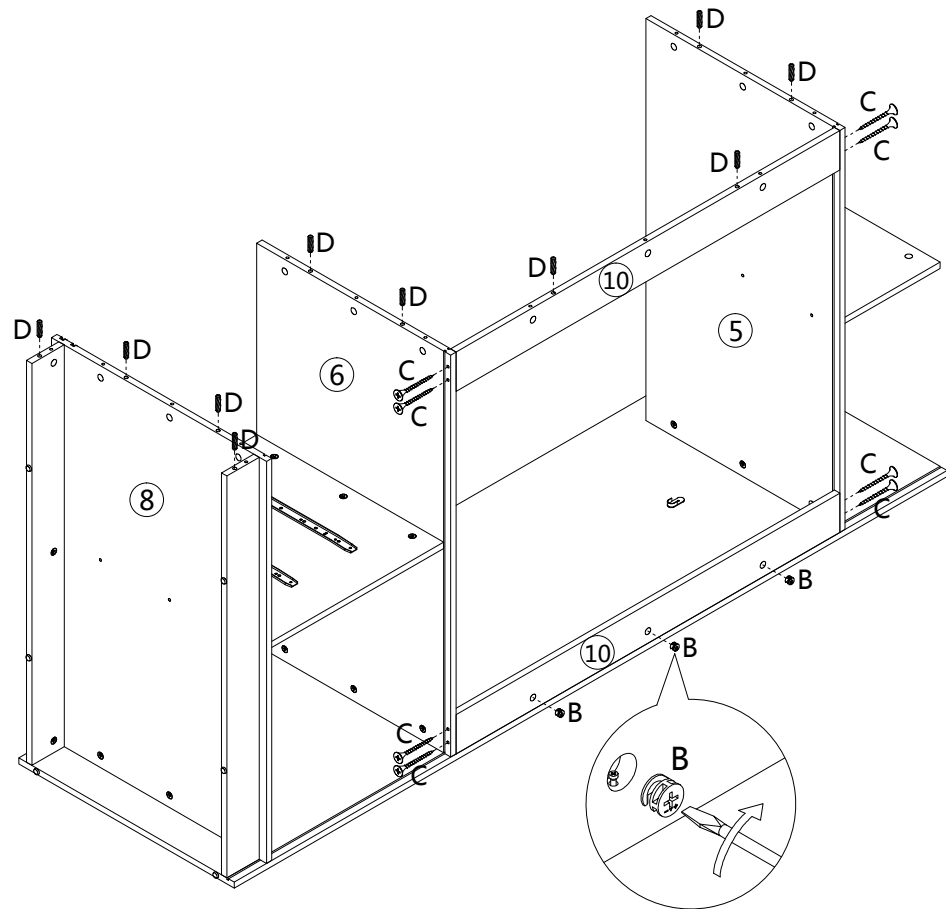


# step 10

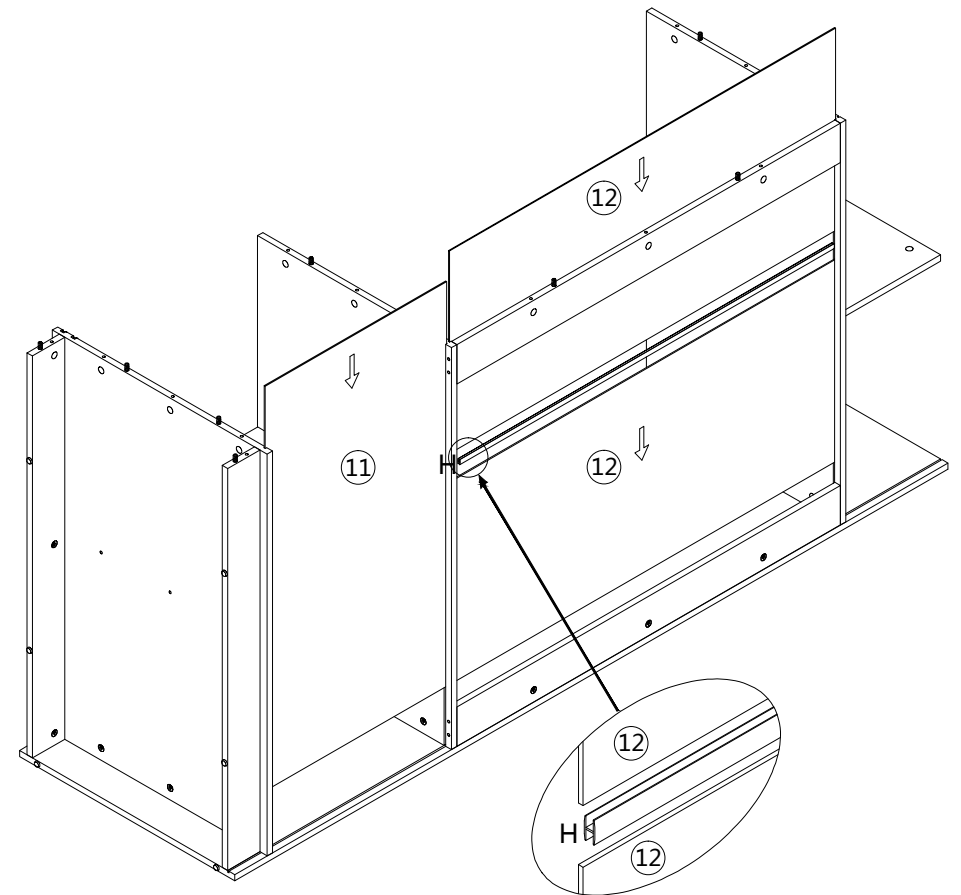


# step 11

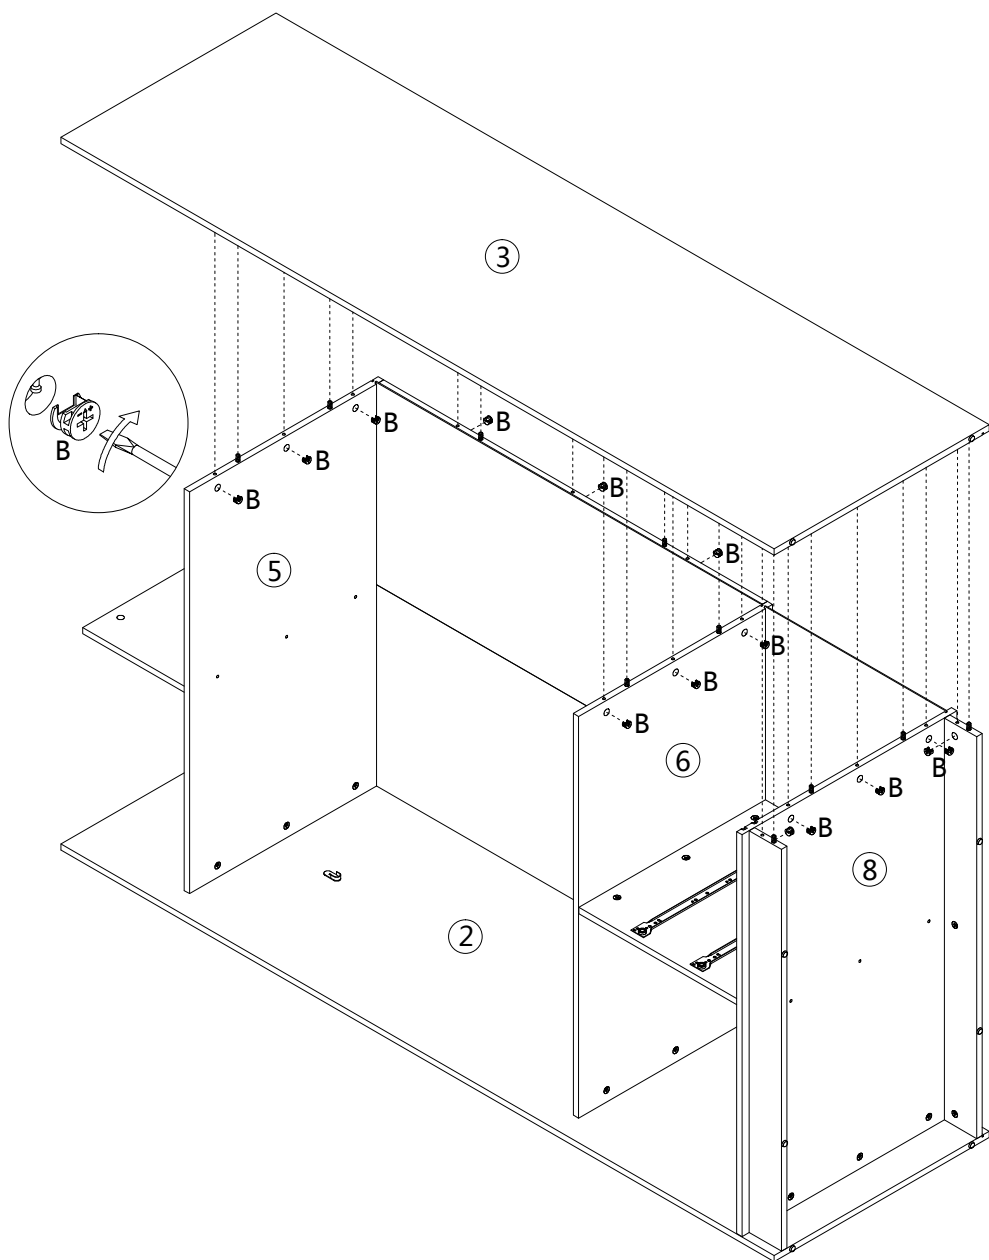


# step 12

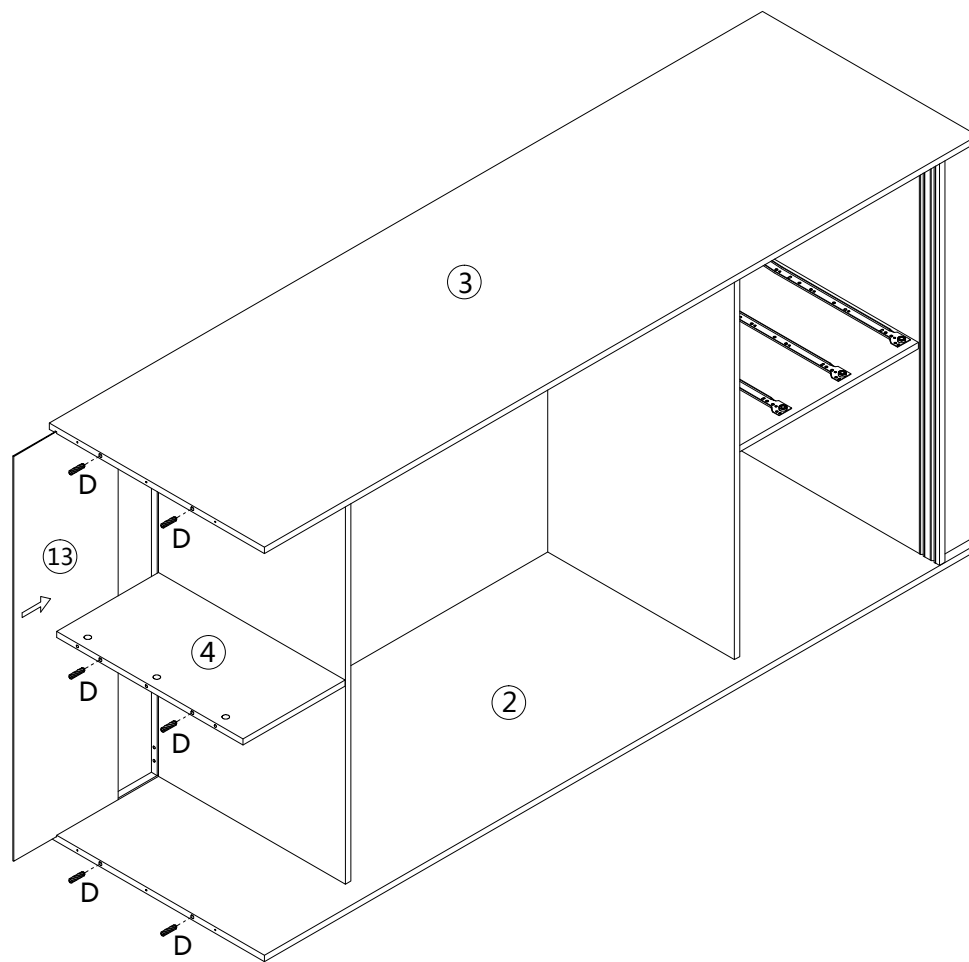


### step 13

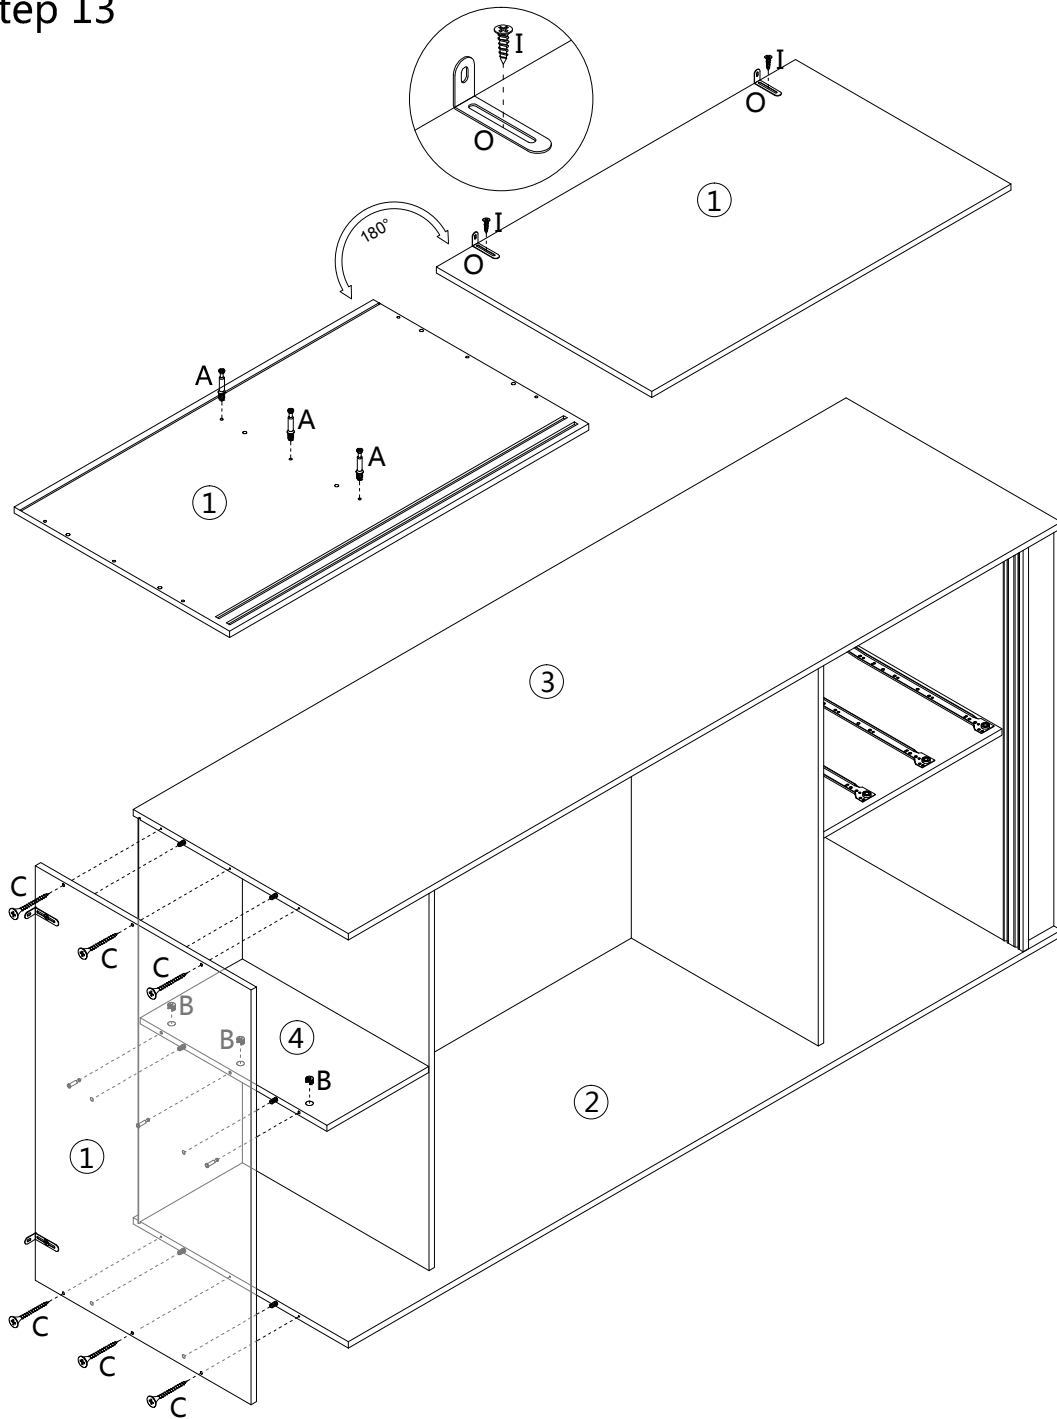


### step 14

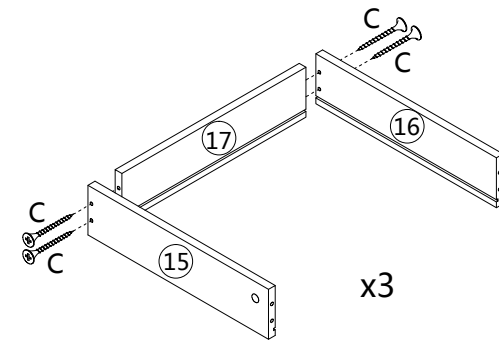


### step 15

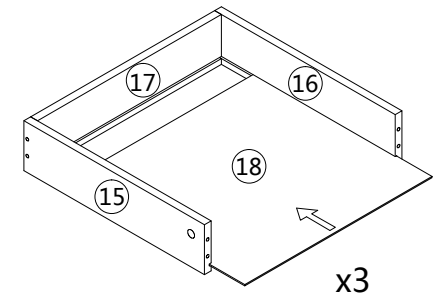


### step 16

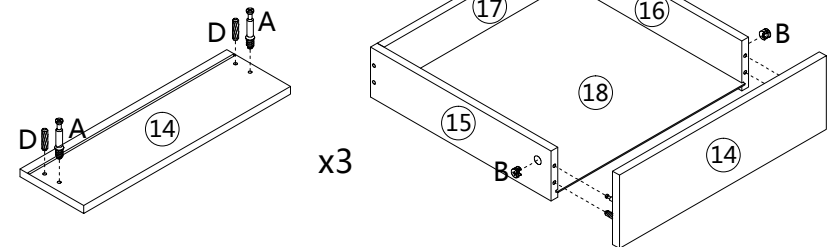


### step 17

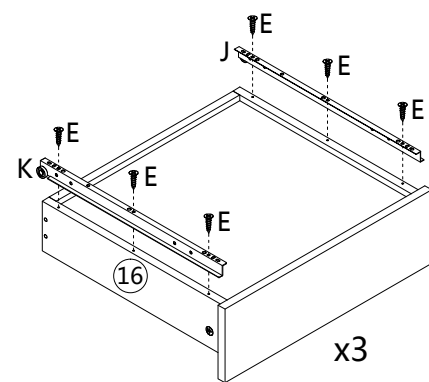

# step 18

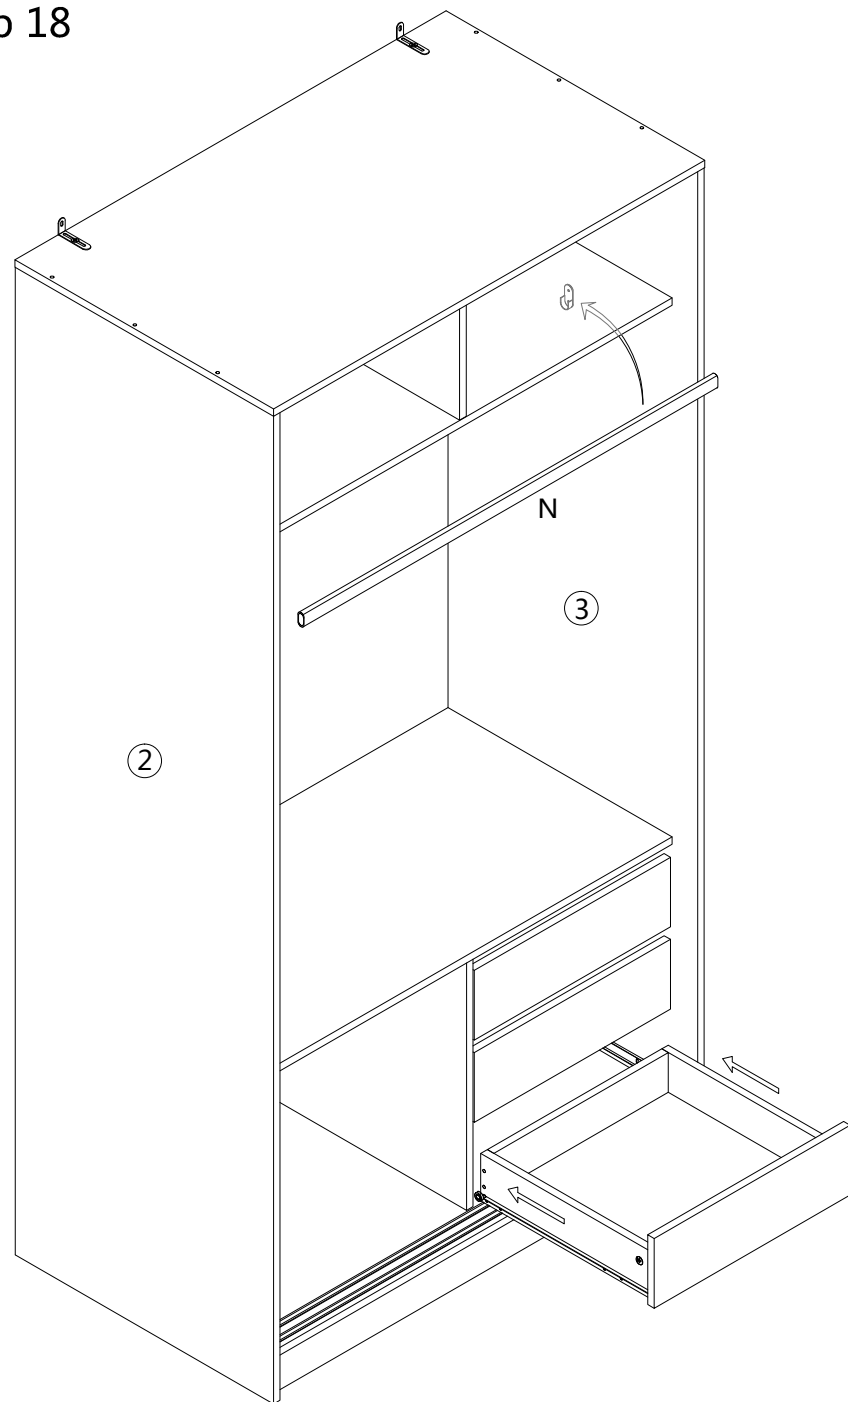


# step 19

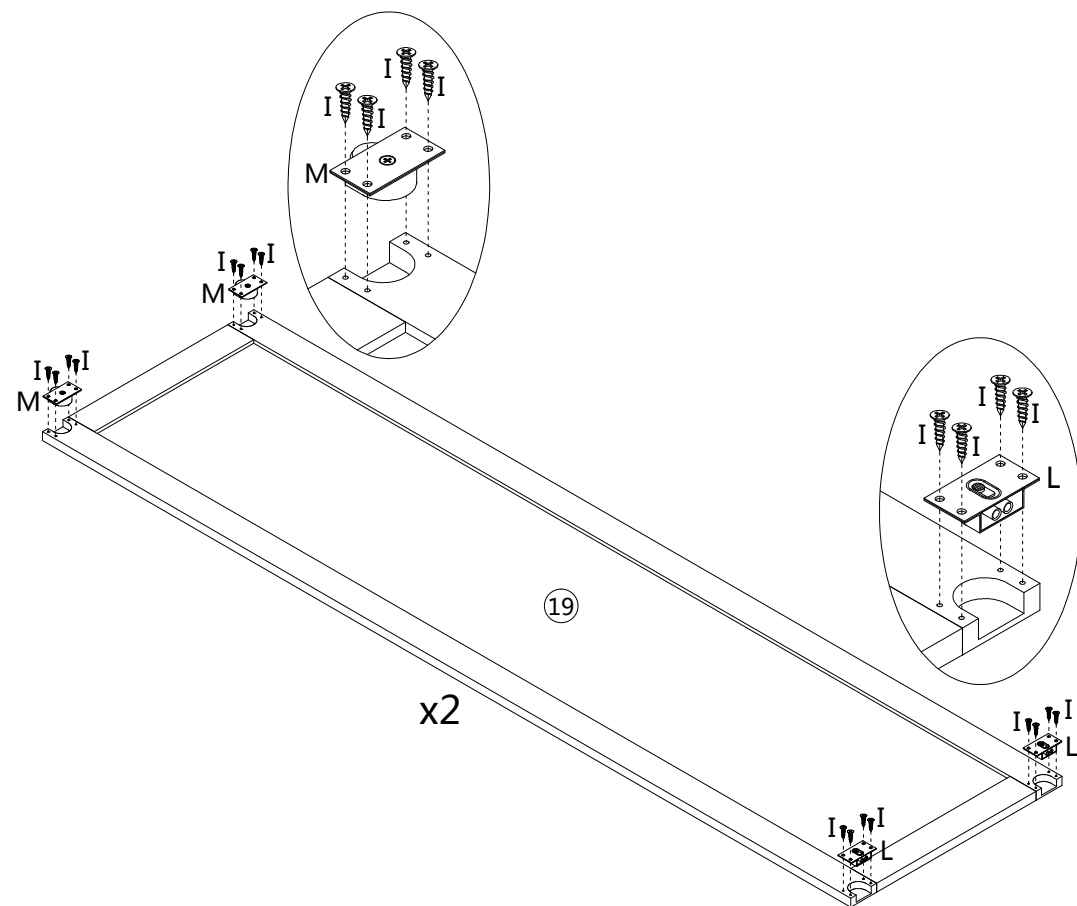




# step 20

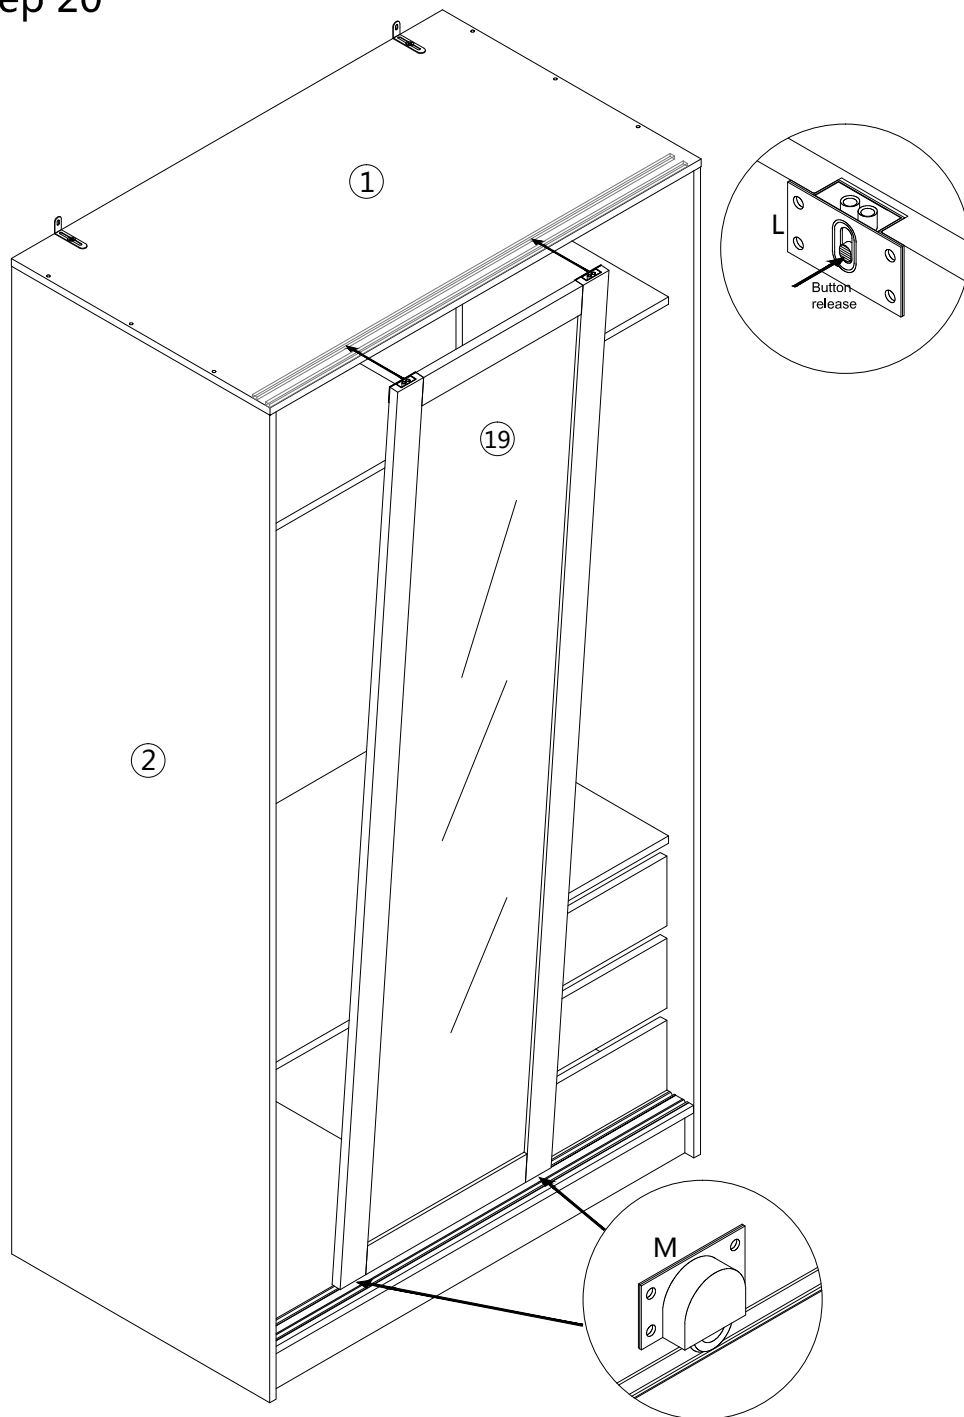

# step 21

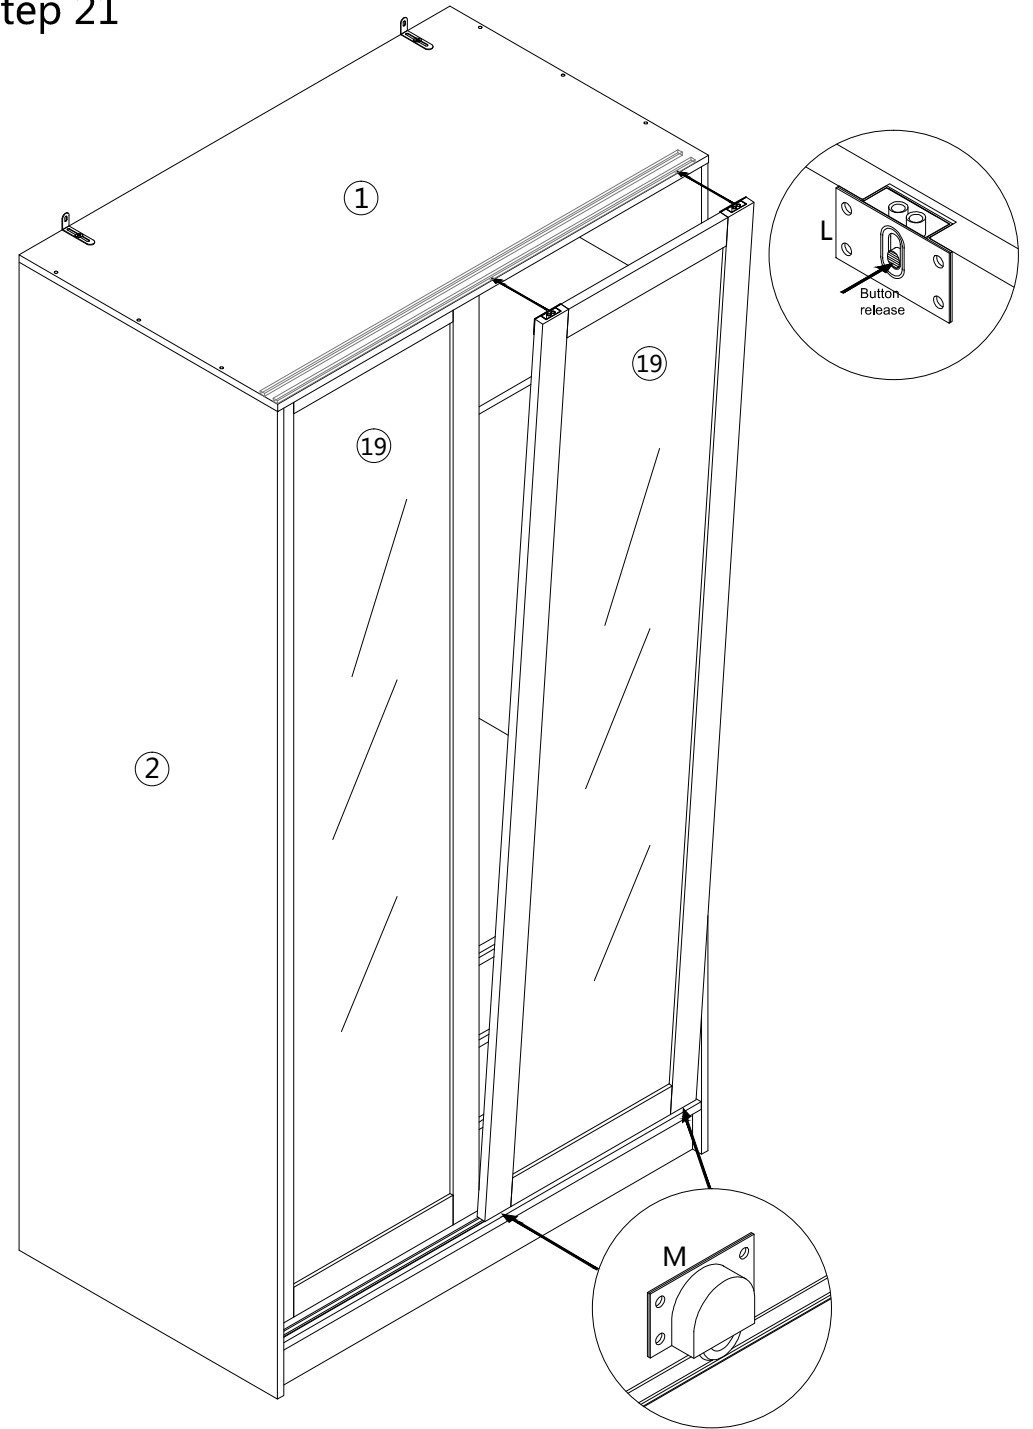

step 22

