


9 Nevilles St, Underwood, Brisbane, QLD 4119 Ph: 07 3208 6799 Fax: 07 3290 6332 Int Ph: +61 7 3208 6799 Int Fax: +61 7 3290 6332

Email: sales@multi-store.com.au www.multistore.com.au


ASSEMBLY INSTRUCTIONS FOR MSM 400J3

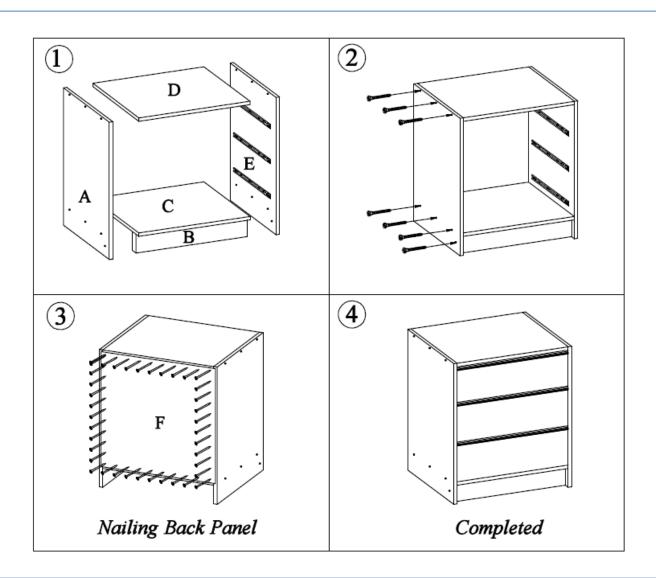


HARDWARE LIST












METAL RUNNER POSITIONING FOR MSM 400J3

CABINET GABLES: (H 745 X L 500 X D 450 mm)


A = LEFT HAND E = RIGHT HAND

CABINET RUNNERS:

CL = LEFT HAND CR = RIGHT HAND



7.5mm EURO SCREWS TO ATTACH RUNNERS TO CABINET GABLES

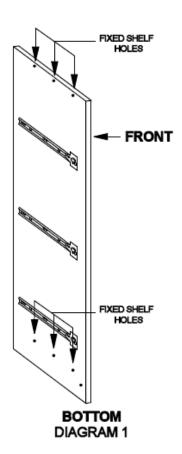

INSTRUCTIONS:

- Lay cabinet gables marked **A** & **E** on floor and attach the metal cabinet runners to the cabinet gables refer to **Diagram 1**.
- It is important that the runners are fixed to the correct cabinet gables, fix runner marked **CL** to cabinet gable **A** and fix runner marked **CR** to cabinet gable **E** using the special 7.5mm Euro screws provided.
- **Important:** Please note **DIAGRAM 2** this shows the positions of the holes that the metal runners are fixed into.




9 Nevilles St, Underwood, Brisbane, QLD 4119 Ph: 07 3208 6799 Fax: 07 3290 6332 Int Ph: +61 7 3208 6799 Int Fax: +61 7 3290 6332 Email: sales@multi-store.com.au

www.multistore.com.au


ASSEMBLY INSTRUCTIONS FOR DRAWER BOX AND METAL RUNNER

STEP 1.




CAREFULLY REMOVE DRAWERS FROM THE CARTON AND LAY FLAT ON THE FLOOR. PLACE A FEW DROPS OF WOOD GLUE (NOT SUPPLIED) IN DOWEL HOLES AND V JOINTS (REFER DIAGRAM)

STFP 2.

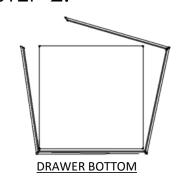


PLACE THE DRAWER BOTTOM INTO GROOVE ON THE DRAWER WITH THE WHITE SIDE TO THE TOP OF THE DRAWER.

GENTLY FOLD THE REMAINING SIDES AROUND THE DRAWER BOTTOM UNTIL DOWELS ARE ALIGNED WITH HOLES, PUSH DOWN FIRMLY AND WIPE OFF ANY EXCESS GLUE FROM JOINTS.

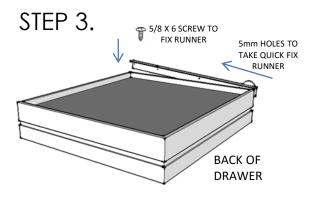

TURN DRAWER BOX UPSIDE DOWN.
TAKE RUNNER, INSERT THE TAB INTO 5mm
HOLE IN BACK OF DRAWER PUSH
FORWARD AND THEN PUSH DOWN SO THE
FRONT OF THE TAB WILL ALIGN WITH 5mm
HOLES IN THE FRONT OF THE DRAWER
ONCE FIRMLY IN PLACE USE 5/8 X 6
SCREWS PROVIDED TO FIX RUNNER.

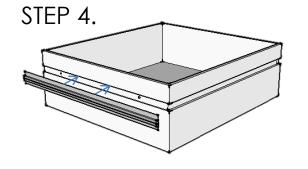

BY USING THE 12mm X 5mm BOLT SUPPLIED INSERT INTO 5mm PRE-DRILLED HOLES IN FRONT OF DRAWER.

ALIGN THE ALUMINIUM HANDLE WITH ONE END OF THE DRAWER AND TIGHTEN SCREW. DO THE SAME FOR THE OTHER END. DO NOT OVER TIGHTEN SCREWS.



9 Nevilles St, Underwood, Brisbane, QLD 4119 Ph: 07 3208 6799 Fax: 07 3290 6332 Int Ph: +61 7 3208 6799 Int Fax: +61 7 3290 6332

Email: sales@multi-store.com.au www.multistore.com.au

WARRANTY

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement of refund for major failure.

5 Year Warranty

- If the purchaser has a fault or defect with this product, the purchaser needs to contact Multistore Industries (AUST) directly on (07) 3208 6799 and state date of purchase, place of purchase and proof of purchase.
- Multistore Industries (AUST) will replace any faulty or defect parts at no cost to the customer. A replacement will be sent to you as soon as possible, or product can be exchanged at the store of purchase.
- This warranty is in addition to other rights and remedies of the customer under law.

Sincerely,

Multistore Industries (AUST) Management