



## STEP 1

Using a pencil, mark the position of the End Brackets mounting hole onto the wall.

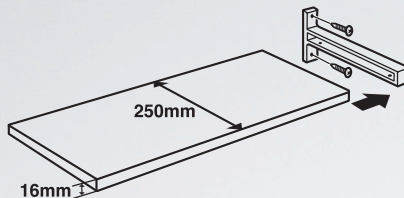

### FOR PLASTERBOARD WALL


See your local hardware stockist for recommended wall plugs suitable for plasterboard wall (not provided) and fasten Flexi Clips to wall as per the hardware recommendations.

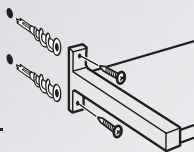

**OR**


### FOR MASONRY WALL

Using an 8mm drill bit, drill a 38mm deep hole for each Flexi Clip. Insert wall plugs provided and fasten to wall with screws provided.

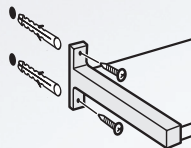

## STEP 2

Position shelf in bracket and fit second bracket to shelf. Mark the position of one mounting hole to the wall and use a spirit level to ensure shelf is level. Repeat fixing method.

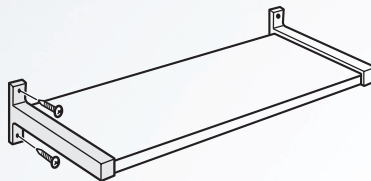

## STEP 3

Tighten adjustment screws under each bracket to fix to board.

